LG
Life's Good

繁體中文
简体中文
ENGLISH

我爱LG
大猪赢熊
www.52LG.com

使用手冊
用户手冊
User Guide

LG-E720

PRINTED WITH SOY INK

CE 0168 !

P/N : MFL66992601 (1.0) H

www.lg.com

Wi-Fi (WLAN)	此裝置適合用於所有歐洲國家。 在歐盟，WLAN 可在室內無限制地運作，但在法國、俄羅斯和烏克蘭則不能在室外運作。

Wi-Fi (WLAN)	此设备适于在所有欧洲国家使用。 在欧盟室内使用 WLAN 不受限制，但在法国、俄罗斯和乌克兰户外使用受限制。

Bluetooth QD ID B017002

LG-E720 使用手冊 - 繁體中文

恭喜您購買了 LG 先進輕巧的 LG-E720 手機，它配合最新的數碼流動通訊科技而設計。

- 此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。
- 由於使用觸控屏幕鍵盤，我們不建議視障人士使用此手機。
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。 所有其他商標均為其各自擁有者的財產。
- Google™、Google Maps™、Gmail™、YouTube™、Google Talk™ 及 Android Market™ 均為 Google, Inc. 的商標。

內容

重要通知.....5

1. 手機記憶體.....5
2. 延長電池壽命.....5
3. 安裝開放源碼的作業系統.....6
4. 使用解鎖圖案.....6
5. 使用安全模式及硬性重設.....7
6. 連接至 Wi-Fi 網絡.....7
7. 使用 microSD 咭.....8
8. 開啟及切換應用程式...8
9. 正在安裝 LG PC suite 至您的電腦.....9
10. 透過 USB 連接手機至電腦.....10
11. 使用數據連接時解鎖屏幕.....11
12. 在開啟/關閉您的電腦時，請勿連接您的手機.....11
13. 垂直握住手機.....11
14. 在屏幕凍結時.....11

瞭解您的手機.....12

安裝智能咭 (SIM card) 及電池.....14
為手機充電.....15
安裝記憶咭.....15
格式化記憶咭.....16

您的桌面.....18

觸控屏幕小秘訣.....18
距離感應器.....18
鎖定您的手機.....18
解鎖屏幕.....19
主頁.....19
在您的桌面上新增 widget.....20
返回最近使用的應用程式 20
屏幕鍵盤.....22
XT9 預測模式.....23
Abc 模式.....23
123 模式.....23
輸入重音字母.....23
例子.....23

Google 帳戶設定.....24

建立您的 Google 帳戶....24
登入您的 Google 帳戶....24

通話功能.....26

撥打電話.....26
從通訊錄中撥打電話.....26
接聽來電和拒接來電.....26
調整通話音量.....26
通話期間撥打第二個電話 .26
檢視通話記錄.....27
通話設定.....27

通訊錄.....29

搜尋聯絡人.....29
新增聯絡人.....29
常用的聯絡人.....29

訊息/電子郵件.....30
訊息.....30
發送訊息.....30
更改訊息設定.....30
開啟電子郵件.....32
讀取您的信息.....32
回應訊息.....32
以星號標記訊息.....33
編寫及發送電子郵件.....33
處理帳戶資料夾.....34
新增及編輯電子郵件帳戶.34
社交網絡 34
新增您的帳戶至手機.....35
檢視及更新您的狀態 35
從手機移除帳戶.....35

相機.....36
瞭解取景器.....36
使用對焦模式.....37
快速拍照 37
拍攝相片後.....37
使用進階設定.....38
檢視已儲存的相片.....39

視像攝錄機.....40
瞭解取景器.....40
拍攝快速影片.....41
拍攝影片後.....41
使用進階設定.....41
觀看已儲存的影片.....42
觀看影片時調整音量.....42

相片及影片 43
編輯您的相片 43

多媒體.....44
更改媒體匣內容的顯示方式.....44
發送相片.....44
發送影片.....44
音樂.....45
播放歌曲.....45
使用收音機.....45
搜尋電台.....45
重設頻道.....46
收聽電台.....46
使用 USB 大容量儲存裝置傳送檔案.....46
如何將音樂/影片檔案儲存至手機.....47
如何將通訊錄從舊手機移動至目前手機.....47
如何透過藍芽發送手機中的數據.....48

Google 應用程式.....50
Google Maps™.....50
Market™.....50
Google Mail™.....51
Google Talk™.....51

實用程式.....52
設定鬧鐘.....52
使用計算機.....52

內容

新增事件至日曆.....52
更改您的預設日曆檢視模式.....53
ThinkFree Office.....53
語音記錄器.....53
錄製聲音或語音.....53
發送錄音.....54
LG Air Sync.....54

網絡功能.....55
瀏覽器.....55
使用選項.....55
新增和存取書簽.....55
更改網絡瀏覽器設定.....55

設定.....56
無線及網絡.....56
聲音.....57
顯示.....57
位置及安全.....58
應用程式.....59
帳戶及同步.....59
隱私權.....60
SD 卡和手機儲存體.....60
搜尋.....60
語言及鍵盤.....61
語音輸入和輸出.....61
可存取性.....62
日期及時間.....62
關於手機.....62
Wi-Fi.....62
共享手機的流動數據連接。.....63
USB 共享網絡及可攜式 Wi-Fi 熱點設定.....64
要透過 USB 共享手機的數據連接.....64
共享網絡及數據共享.....64
要將手機的數據連接以可攜式熱點的形式分享.....65
要重新命名或保護可攜式熱點.....65
如何使用 On-Screen 手機66
On-Screen 手機圖示.....66
On-Screen 手機功能.....66
如何在電腦上安裝 On-Screen 手機.....67
要檢查手機至電腦連接 68
要斷開電腦與手機的連接.....68

軟件更新.....69
手機軟件更新.....69
DivX 手機.....69

配件.....70

技術數據.....71

疑難排解.....72

安全及有效使用準則.....75

重要通知

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

1. 手機記憶體

當手機記憶體的可用空間少於 10%，您的手機便不能再接收新訊息。 您需要檢查您的手機記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

要管理應用程式：

1 從桌面點按**應用程式**標籤，然後選擇**設定 > 應用程式 > 管理應用程式**。

2 當所有應用程式出現後，捲動並選擇您想卸載的應用程式。

3 點按**卸載**然後點按確定，以卸載該應用程式。

2. 延長電池壽命

您可關閉無須持續在背景運行的功能，便能延長兩次充電之間的電池壽命。 您亦可監控應用程式及系統資源的電池電量消耗。

要延長您的電池壽命：

- 關閉並非使用中的無線電通訊。 不使用 Wi-Fi、藍芽或 GPS 時，請關閉這些應用程式。
- 調低屏幕亮度，並設定較短的屏幕超時。
- 關閉 Google Mail、行事曆、通訊錄及其他應用程式的自動同步。
- 您下載的某些應用程式可能會減少您的電池壽命。

要檢查電池充電量：

1 從桌面點按**應用程式**標籤，選擇**設定 > 關於手機 > 狀態**。

2 電池的狀態（充電中、未充電）及電量（相對於完全充電的百分比）會在屏幕頂部顯示。

要監察及控制電池使用情況：

1 從桌面點按**應用程式**標籤，選擇**設定 > 關於手機 > 電池使用。**

2 屏幕頂部會顯示電池使用時間。 距離上一次連接至電源的時間，或（如已連接電源）上次使用電池電力的總時間。 屏幕內容會列出使用電池電力的應用

程式或服務，並根據耗用的電量由多至少排列。

3. 安裝開放源碼的作業系統

如果在手機上安裝開源作業系統，而不再使用製造商提供的作業系統，可能會導致您的手機出現故障。

⚠ 警告

如果您安裝及使用並非由製造商提供的作業系統，您的手機將不再受保固。

⚠ 警告

爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Android Market。 如某些應用程式並非正確地安裝至您的手機上，您的手機可能無法正常工作或出現嚴重錯誤。 您需要從手機卸載這些應用程式以及其所有的數據及設定。

4. 使用解鎖圖案

設定解鎖圖案以保護您的手機。 開啟一系列畫面，以指導您繪畫屏幕解鎖圖案。

⚠ 警告
使用圖案鎖定的注意事項

請記住您所設定的解鎖圖案，這是非常重要的。 如果錯誤輸入圖案的次數達到 5 次，您將無法存取您的手機。 您有 5 次輸入解鎖圖案、PIN 或密碼的機會。 如果您使用了所有 5 次機會，您可以在 30 秒後再嘗試。

在無法重新開啟您的解鎖圖案、PIN 或密碼時：

如您於手機登入 帳戶並錯誤輸入解鎖圖案 5 次，點按忘記圖案按鈕。 然後，您需要使用您的 Google 帳戶登入以解鎖您的手機。

如果您尚未在手機上建立 Google 帳戶或忘記帳戶，您需要進行出廠設定。

5. 使用安全模式及硬性重設

*使用安全模式

要令手機從故障狀態中恢復：

1 關閉並重啟您的手機。 手機電源開啟後，在屏幕顯示 Android 標誌時點按並按住**功能表**鍵。 您的手機會一直啟動並進入桌面，左下角會顯示「安全模式」。

2 選擇**設定> 應用程式> 管理應用程式**以選擇該應用程式，然後選擇**卸載**圖示。

3 卸載應用程式後，關閉並重啟手機。

* 使用硬性重新設定（出廠設定）

如無法還原至原來狀態，使用**硬性重新設定**以初始化您的手機。

同時按住**電源鍵 + 向上音量鍵 + 向下音量鍵**（10 秒以上），手機將開啟並立即進行出廠設定。

請注意，在進行**硬性重新設定**後，您手機上的所有數據及應用程式會被刪除且無法還原。

> ⚠ **警告**
> 若進行**硬性重新設定**，所有用戶應用程式及用戶數據將被刪除。 請記住先備份所有重要的數據，才進行**硬性重新設定**。

6. 連接至 Wi-Fi 網絡

要在您的手機上使用 Wi-Fi，您需要連接無線存取點，亦即「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。 其他存取點乃隱藏或嵌入了其他保安功能，因此在連接前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

要開啟 Wi-Fi 並連接至 Wi-Fi 網絡：

1 從桌面點按**應用程式**標籤，並選擇**設定 > 無線及網絡 > Wi-Fi 設定。**

2 點按 **Wi-Fi** 啟動，手機便會開始掃描可使用的 Wi-Fi 網絡。

- 可使用的 Wi-Fi 網絡會以清單顯示。 已加密的網絡旁邊會有一個鎖形圖示。

3 點按一個網絡以開始連接。

- 如該網絡為開放，手機會提示您點按**連接**，以確認您希望連接至該網絡。
- 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情。）

4 狀態列上的圖示會顯示 Wi-Fi 狀態。

7. 使用 microSD 咭

圖片、音樂及影片只能儲存到外置記憶體。

在使用內置相機前，您需要先將 micro SD 記憶咭插入手機。

如沒有插入記憶咭，您將不能儲存已拍攝的相片及影片。

備註：應用程式只能儲存到手機的內置記憶體。

⚠ 警告

手機開啟時，請勿插入或移除記憶咭。否則，您的記憶咭及手機可能會損壞，而記憶咭內儲存的數據亦可能毀損。要安全地移除記憶咭，請選擇**應用程式 > 設定 > SD卡和手機儲存裝置 > 取消掛接 SD 卡。**

8. 開啟及切換應用程式

您可輕易在 Android 上進行多重任務，即使您開啟另一應用程式，已開啟的應用程式依然會繼續運行。您無須在開啟另一應用程式前退出應用程式。使用及切換數個開啟中的應用程式。Android 會管理每一個應用程式，根據需要停止及啟動程式，確保閒置的應用程式不會耗用不必要的資源。

要停止使用中的應用程式

1 從桌面點按**應用程式**標籤，然後選擇**設定** > **應用程式** > **管理應用程式**。

2 捲動至該應用程式，點按**強制停止**以停止使用。

提示！

返回最近使用的應用程式

點按並按住**主頁**鍵，屏幕上將顯示您最近使用的應用程式清單。

9. 正在安裝 LG PC suite 至您的電腦

要以 USB 數據線同步數據至您的電腦，您需在電腦上安裝 LG PC suite 程式。

您可於 LG 網站下載此程式（http://www.lg.com）。 到 http://www.lg.com，選擇您所在區域、國家和語言。 瀏覽 LG 網站
以獲取安裝和使用該程式的資訊。

由於 LG PC Suit 內嵌於盒裝的 SD 咭。 您只要將其複製到您的電腦。

LG PC SUITE

LG PC Suite IV 是一種幫助您使用 USB 數據通訊線將手機連接到電腦的程式，從而讓您可在電腦上使用手機的功能。

LG PC Suite IV 的主要功能

- 輕鬆快捷地建立、編輯和刪除手機資料
- 從電腦和手機同步數據（通訊錄、行事曆/訊息（文字訊息）、書簽、通話記錄）
- 使用簡單的拖放動作，在電腦和手機之間傳輸多媒體檔案（相片、影片、音樂）
- 從手機傳送訊息到電腦
- 將手機用作數據機
- 在不會損失您的數據的清況之下更新 S/W

LG-E720 不支援：

- 透過藍芽來連接電腦
- 行事曆中的待辦事項
- 備忘錄
- Java 應用程式

有關更多資訊，請於安裝 LG PC Suite IV 後參閱「說明」功能表內的 LG PC Suite IV 使用手冊。

從您的 microSD 記憶咭安裝 LG PC Suite

1 將您的 micro SD 記憶咭插在您的手機中。（有可能已插在您的手機中。）

2 連接 USB 數據線前，請確保已於您的手機啟動**僅限大容量儲存**模式。（在**應用程式**標籤，選擇**設定 > SD 卡和手機儲存裝置**，然後選擇僅限大容量儲存核取方塊。）

3 透過 USB 數據線將您的手機連接到電腦。

(1) 在狀態列拖動 USB 圖示。

(2) 選擇 **USB 已連接**及**安裝**。

(3) 您可於電腦檢視大容量儲存體的內容並傳送檔案。

(4) 從您的大容量儲存複製「LGPCSuiteIV」資料夾至電腦。

(5) 在電腦執行「LGInstaller.exe」檔案並按照指示繼續。

* 在完成 LG PCSuite IV 安裝後，便會停用**僅大容量儲存**模式以執行 LG PCSuite IV。

備註：請不要移除或刪除安裝在記憶咭上的其他程式檔案，這有可能導致已預先安裝在您手機的應用程式損壞。

10. 透過 USB 連接手機至電腦

要使用 USB 裝置傳送檔案：

1 安裝您的 microSD 記憶咭至您的手機。（有可能已插在您的手機中。）

2 連接 USB 數據線前，請確保已於您的手機啟動**僅限大容量儲存**模式。（在**應用程式**標籤，選擇**設定 > SD 卡和手機儲存裝置**，然後選擇僅限大容量儲存核取方塊。）

3 使用手機隨附的 USB 線，將手機連接至電腦的 USB 連接埠。 您會收到 USB 已連接的通知。

4 開啟通告欄，點按 **USB 已連接**。

5 點按**安裝**以確認您要在手機的 microSD 咭及電腦之間傳送檔案。

當手機已連接為 USB 記憶體，您會收到通知。 您手機上的 microSD 咭會作為磁碟安裝至您的電腦上。 您現在

便可將檔案複製至 microSD 咭。

備註：卸載 PC Suite IV 後，不會自動移除 USB 及藍芽驅動程式。 因此，必須手動卸載這些驅動程式。

提示！ 要重新在手機上使用 microSD 咭，您需要開啟通告欄並點按**關閉 USB 儲存體。**

期間您無法在手機上存取 microSD 咭，因此您亦無法使用依賴 microSD 咭的應用程式，例如相機、圖片集及音樂功能。

要令手機從電腦中斷連接，請小心地按照電腦的說明正確地中斷連接 USB 裝置，以免記憶咭上的資料流失。

1 安全地斷開電腦上的 USB 裝置連接。
2 開啟通告欄，點按**關閉 USB 儲存體**。
3 在開啟的對話方塊上點按**關閉**。

11. 使用數據連接時解鎖屏幕

如在數據連接期間長時間不點按屏幕，您的屏幕會自行關掉。 要重新開啟 LCD 屏幕，點按屏幕即可。

12. 在開啟/關閉您的電腦時，請勿連接您的手機

確定透過數據線斷開手機與電腦的連接，因為您的電腦中可能存在錯誤。

13. 垂直握住手機

請如普通手機一樣，垂直握住手機。LG-E720 備有內置天線。 請加倍小心，避免刮花或損壞此背面區域，否則會影響手機性能。撥打/接聽電話或傳送/接收數據時，儘量避免握住天線所在的手機下部分。 否則可能影響通話品質。

14. 在屏幕凍結時

如果手機不能回應用戶輸入或屏幕凍結：

請取下電池，再次插入電池並開啟手機。 如果問題仍然存在，請聯絡服務中心。

瞭解您的手機

要開啟手機，請按住**電源**鍵 3 秒鐘。
要關閉手機，請按住**電源**鍵 3 秒鐘並點按關機。

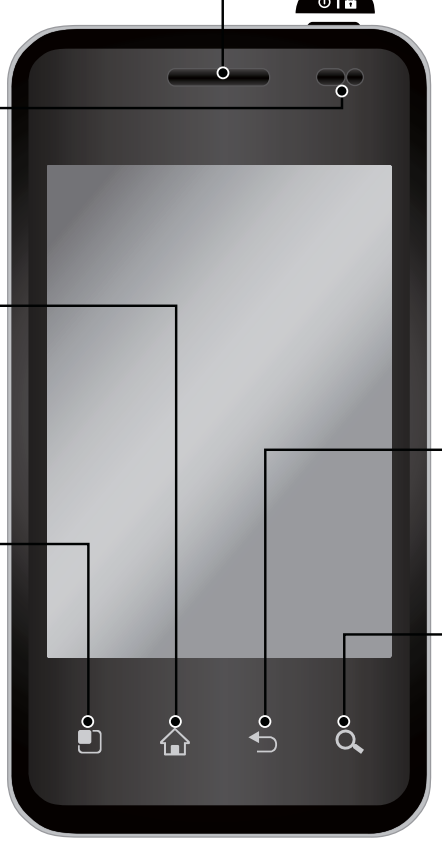

耳機

距離感應器

電源/鎖定鍵
長按此鍵以開啟/關閉手機電源。
關閉屏幕並鎖定。

主頁鍵
從任何畫面返回桌面。

功能表鍵
查看可使用的選項。

返回鍵
返回前一畫面。

搜尋鍵
搜尋 Web 以及您手機中的內容。

⚠ 警告

若將較重物體置於手機上，或坐在手機上會損壞手機的 LCD 和觸控熒幕功能。
請勿將保護貼掩蓋 LCD 的距離感應器， 否則可能會導致感應器出現故障。

提示！每當您點按應用程式以查看可使用的選項時，點按**功能表鍵**。

提示！ 如果 LG-E720 在使用時發生錯誤或無法開啟，取下電池，並重新裝上電池，然後在 5 秒後開機。

備註：LG-E720 不支援視像通話。

立體聲耳機連接器

電源/鎖定鍵

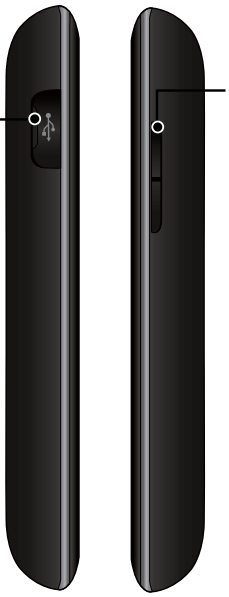

充電器、micro USB 線連接器

音量鍵

在桌面上：控制鈴聲音量。

- 通話中：控制耳機音量。
- 播放曲目時：持續控制音量。

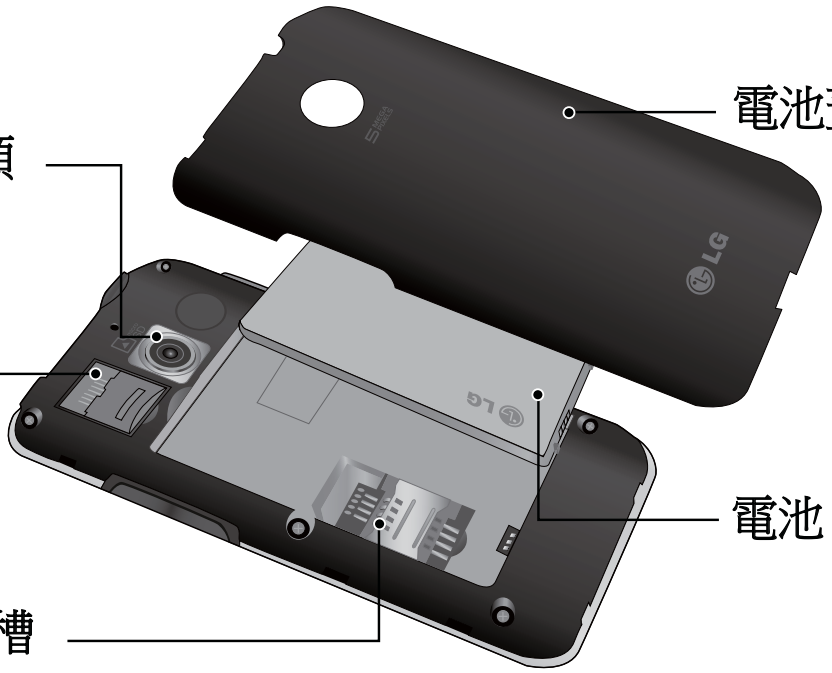

電池蓋

相機鏡頭

microSD 記憶咭插槽

電池

智能咭插槽

瞭解您的手機

安裝智能咭 (SIM card) 及電池

開始使用您的新手機前，您需要先設定手機。 要插入智能咭及電池：

1 要取下電池蓋，請用手按住手機。 用另一隻手的拇指按壓電池蓋。 用食指揭開電池蓋。

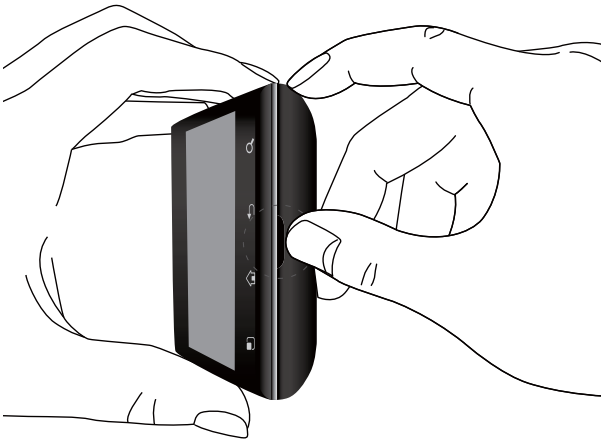

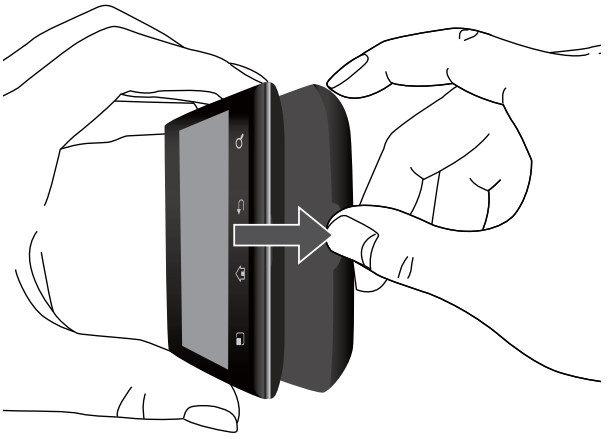

2 將智能咭滑入智能咭固定座中， 確保智能咭的金屬接觸面朝下。

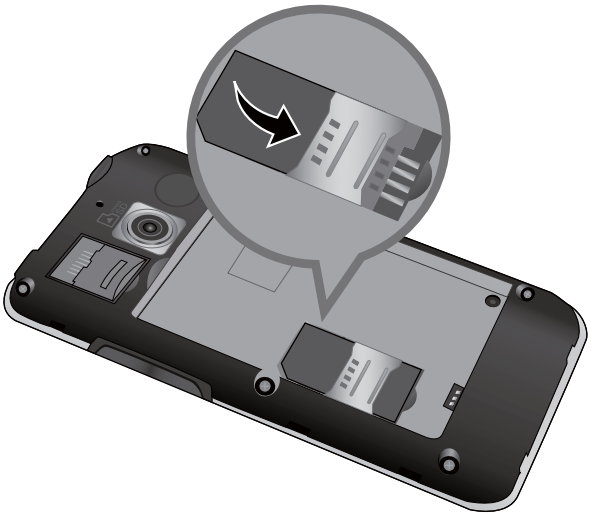

3 對準手機及電池的金屬接觸面插入電池。

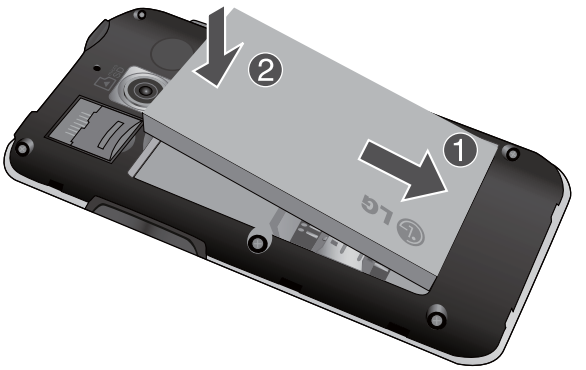

4 重新蓋上電池蓋。

為手機充電

向後滑動 LG-E720 側邊的充電器連接器蓋。 插入充電器，並將其連接至電源插座。 您必須繼續為 LG-E720 充電，直至您看見 。

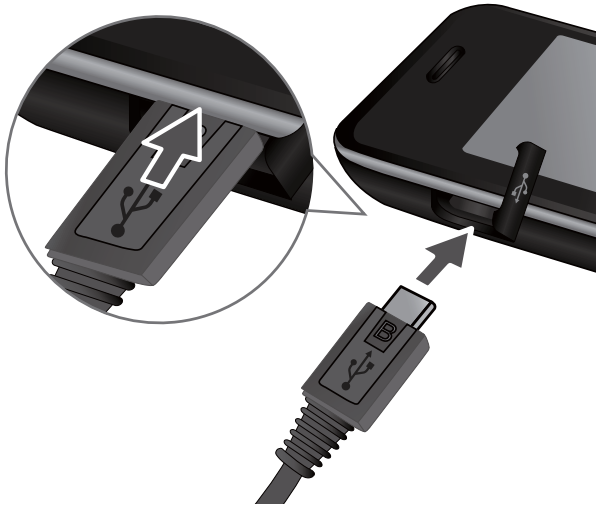

備註：第一次充電時必須將電池完全充電，以提高電池壽命。

安裝記憶咭

要儲存多媒體檔案（例如使用內置相機拍攝的圖像），您必須安裝記憶咭至您的手機。

備註：LG-E720 支援高達 32GB 記憶咭。

要安裝記憶咭：

1 插入或移除記憶咭前，請先關閉手機。 取下電池蓋。

2 開啟記憶咭槽保護蓋，將記憶咭插入咭槽， 並確保金屬接觸面朝下。

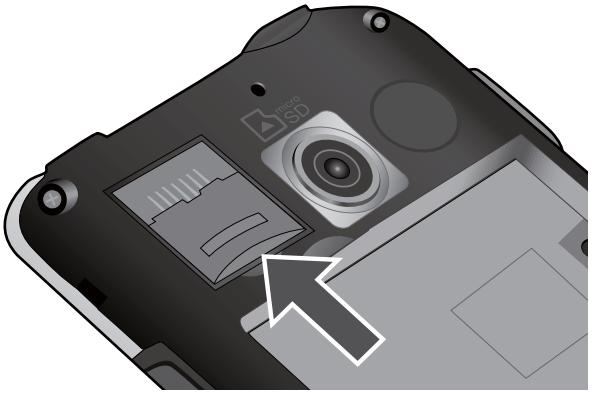

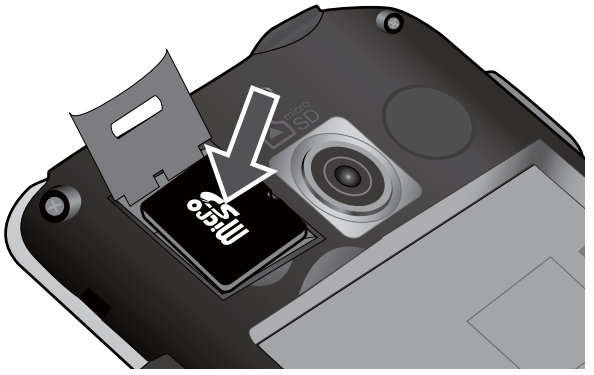

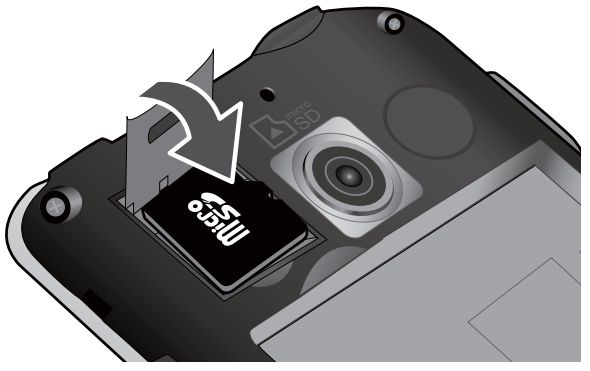

3 關上咭槽保護蓋。

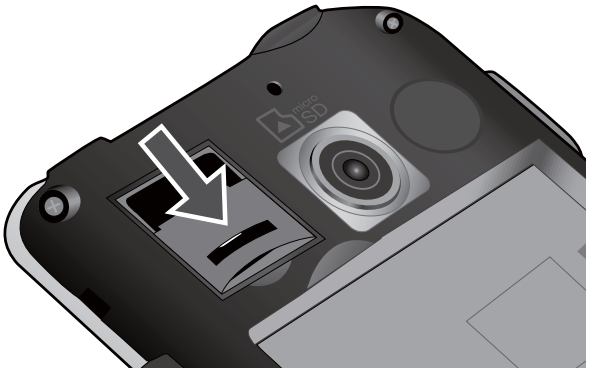

⚠警告

手機開啟時，請勿插入或移除記憶咭。 否則，您的記憶咭及手機可能會損壞，而記憶咭內儲存的數據亦可能毀損。

格式化記憶咭

您的記憶咭可能已格式化。如尚未格式化，您必須在使用前將其格式化。

備註：**格式化記憶咭時，咭內所有檔案會被刪除。**

1 在主頁點按**應用程式**標籤，以開啟應用程式功能表。

2 捲動並點按**設定**。

3 捲動並點按 SD 卡和手機儲存體。

4 點按解除安裝 SD 卡。

5 點按格式化 SD 卡，並確認 。

6 如您設定了圖案鎖定，輸入圖案鎖定然後選擇**清除全部**。 記憶咭將被格式化並且可使用。

備註：如您的記憶咭包含其他內容，記憶咭格式化後的資料夾結構可能會改變，因為所有舊檔案經已刪除。

提示！
如已解除安裝記憶咭，您可循以下步驟進行格式化。
點按**應用程式 > 設定 > SD 卡和手機儲存裝置 > 格式化 SD 咭**。

您的桌面

觸控屏幕小秘訣

以下是一些小秘訣，讓您輕鬆使用觸控屏幕操作手機。

點按 - 要選擇功能表/選項或開啟應用程式，只需點按即可。

點按並按住 - 要開啟選項功能表或抓住要移動的物件，點按並按住該選項。

拖動 - 要捲動清單或緩慢移動，用手指在觸控屏幕上拖動。

翻閱 - 要捲動清單或快速移動，用手指掃過屏幕（快速拖動並放手）。

備註：

- 要選擇某個項目，請點按圖示中央。
- 請勿過份用力按壓；只需輕力但確切地點按，觸控屏幕已能感應。
- 使用手指尖點按您需要的選項。 請注意不要碰到其他按鍵。

距離感應器

當接收及撥打電話時，距離感應器會感應到手機快會貼近您的耳邊，並會自動將背光燈關掉及鎖定觸控鍵盤。此功能有助延長電池壽命，並防止於通話期間無意地啟動觸控鍵盤。

鎖定您的手機

當您不使用 LG-E720 時，請按住**電源**鍵鎖定您的手機。這有助於防止意外按鍵，並可節省電池電力。

如果您有一段時間不使用手機，桌面或其他您正在瀏覽的畫面會被鎖定屏幕取代，以節省電量。

備註：如果您在設定圖案時正在執行任何應用程式，則這些應用程式可能仍在鎖定模式中執行。 建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費。（例如，通話、網絡獲取及數據通訊）

提示！ 設定解鎖圖案

您可以連接四個或以上的點以繪畫您專屬的解鎖圖案。
如果您設定圖案，手機屏幕便會鎖定。 要解除鎖定手機，請在屏幕上繪畫您所設定的圖案。

注意：在設定解鎖圖案時，您必須先建立您的 Google Mail 帳戶。

注意：如果一列中存在 5 個以上的圖案繪畫錯誤，則無法解除鎖定手機。 在此情況下，您的個人資料及下載的數據將被刪除。

解鎖屏幕

要喚醒手機，按**電源**鍵。 鎖定屏幕會出現。 要解鎖桌面，點按圖示 並將手指向右拖動。 您最後工作的畫面會開啟。

靜音模式

從通告欄中點按 改為 。 或者，如您沒有使用解鎖圖案，則只需將 向右拖動。

主頁

只需將手指左右滑動便可檢視。
您可使用 widget 自訂每個控制板，它們是您喜愛的應用程式、資料夾及牆紙的捷徑。

備註：視乎您的手機供應商而定，某些屏幕圖像可能會有差異。

在主頁上，您可檢視屏幕下方的快速按鍵。 快速按鍵提供簡易的存取方法，讓您一按即能使用您最常用的功能。

點按**手機**圖示開啟觸控撥號鍵盤，撥打電話。

點按可開啟通訊錄。

點按屏幕底下的**應用程式**標籤。 您便可檢視您安裝的全部應用程式。 點按以捲動檢視您的應用程式。

點按**訊息**圖示，進入訊息功能表。
您可在此建立新訊息。

點按以開啟 Google 網站。

您的桌面

在您的桌面上新增 widget

您可新增捷徑、widget 或資料夾，以自訂您的桌面。 將您喜愛的 widget 添加到桌面上，您便可更方便地使用您的手機。

要新增所需的圖示至您的桌面：

1 在桌面點按**功能表**鍵，並選擇**新增**。 或長按桌面的空白部份。

2 在新增至主頁畫面功能表中，點按您要新增的項目類型。

3 例如，在清單中選擇**資料夾**並點按。 在清單中選擇**具有手機號碼的通訊錄**，然後點按。

4 您會在桌面上看到一個新的資料夾圖示。 將其拖動至您想要的控制板及位置，然後放開手指。

提示！ 要新增應用程式圖示至桌面，**在應用程式**功能表上點按並按住您要新增至桌面的應用程式。

要從桌面移除應用程式圖示：

1 點按並按住您想移除的圖示。 **應用程式**圖示會變為垃圾桶圖示 。

2 拖動並將應用程式圖示拉至垃圾桶圖示 。

備註：您無法刪除預載應用程式。（只能從屏幕上刪除其圖示。）

返回最近使用的應用程式

1 點按並按住**主頁**鍵。 屏幕會彈出您最近使用過的應用程式的圖示。

2 點按圖示以開啟該應用程式， 或者按**返回**鍵回到使用中的應用程式。

通告欄

通告欄顯示於屏幕的頂部。

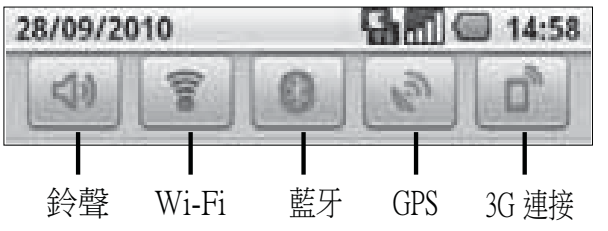

您可點按並向下滑動通告欄。

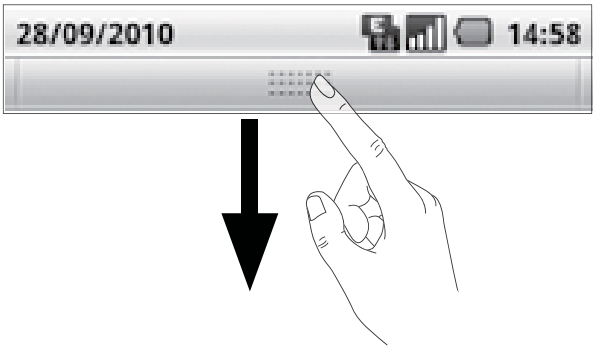

或者，您可在桌面點按**功能表**鍵，並選擇**通知**。 您可在此檢查及管理 Wi-Fi、藍芽和 GPS 狀態，以及查看其他通知。

檢視狀態列

狀態列使用不同圖示顯示手機資訊，例如訊號強度、新訊息、電池壽命及啟動中的藍芽及數據連接。

下表解釋了狀態列中可能出現的圖示的含義。



[狀態列]

圖示	說明
	沒有智能咭
	無訊號
	已連接至 Wi-Fi 網絡
	有線耳機
	來電轉接
	通話保留
	喇叭開啟
	電話話筒已靜音
	未接來電
	藍牙開啟
	已連接至一個藍牙裝置
	系統警告
	鬧鐘已設定
	新留言訊息
	飛航模式
	鈴聲靜音

您的桌面

圖示	說明
	震動模式
	沒有 microSD 咭
	電池已完全充電
	電池充電中
	數據輸入中
	數據輸出中
	數據輸入及輸出
	手機已通過 USB 線纜連接至電腦
	數據下載
	數據上載
	取得 GPS 中
	從 GPS 接收位置數據
	On-Screen 手機已連接
	2 個更多通知未顯示
	正在通话
	正在同步數據

圖示	說明
	下載完成
	新 Google Mail
	新 Google 語音訊息
	新訊息
	正在播放歌曲
	待辦事項
	USB 共享網絡已啟動
	可攜式 Wi-Fi 熱點已啟動
	USB 共享網絡及可攜式 Wi-Fi 熱點已啟動

屏幕鍵盤

您也可以使用屏幕鍵盤輸入文字。 當您需要輸入文字時，屏幕鍵盤會自動顯示在屏幕上。 要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

使用鍵盤輸入文字

點按一下以大寫您輸入的下一個字母。 點按兩下即可大寫所有字母。

點按開啟或關閉 XT9 預測模式。

點按檢視設定功能表。

點按切換至數字符號鍵盤。

點按以在訊息欄新建一行。

點按以隱藏或者顯示屏幕鍵盤。

點按以刪除前一字母。

在字母之間前後跳轉。

點按以輸入一個空格。

XT9 預測模式

屏幕鍵盤可以預測文字以幫助您快速準確的輸入文字。 XT9 預測模式使用內置字典，識別根據按鍵順序寫入的字詞。 只需點按與要輸入字母關聯的數字按鍵，字典便可預測要使用的單字。

Abc 模式

使用此模式時，點按一次、兩次、三次或四次標示有所需字母的按鍵，直到所需字母顯示，即可輸入該字母。

123 模式

此模式讓您更快捷地在文字訊息中輸入數字（例如電話號碼）。 點按所需數字的相應按鍵，然後手動切換回適用的文字輸入模式。

輸入重音字母

當您選擇法文或西班牙文作為文字輸入語言，您可輸入特殊的法文或西班牙文字元（例如：ä）。

當相應的字母字元消失後，重複點按相同按鍵直至出現您需要的特殊字元。

例子

要輸入「ä」，按下並按住“a”鍵。

當字母「a...」消失後，繼續維持手指點按住屏幕，並向左右滑動以選擇所需字母。

Google 帳戶設定

當您第一次在手機上開啟 Google 應用程式，您需要使用您現有的 Google 帳戶登入程式。 如您沒有 Google 帳戶，手機會提示您建立帳戶。

建立您的 Google 帳戶

1 在主頁點按**應用程式**標籤 以開啟應用程式功能表。

2 點按 Gmail，然後點按 Next > Create 開始使用 Google Mail 設定精靈。

3 點按文字欄位以開啟觸控鍵盤，並輸入您的姓名及 Google 帳戶使用者名稱。輸入文字時，您可按鍵盤上的 Next 移至下一個文字欄位。

4 完成輸入姓名及使用者名稱後，點按 Next。 您的手機會連接 Google 的伺服器，檢查使用者名稱是否可用。

5 輸入並重新輸入密碼。 然後按照指示，輸入與帳戶有關的必填及可填資訊。請等待伺服器建立您的帳戶。

登入您的 Google 帳戶

1 輸入您的電子郵件地址及密碼，然後點按 Sign in。等候直至登入完成。

2 登入後，您便可在手機上使用 Google Mail 及其他 Google 服務。

3 當您在手機上設定了 Google 帳戶，您的手機便會自動與您的 Google 帳戶在互聯網上同步。（視乎您的同步設定而定。）

登入後，您可使用 Google Mail、Google Calendar、Android Market 及 Google Map；從 Android Market 下載應用程式；備份您的設定至 Google 伺服器；以及在手機上享用其他 Google 服務。

重要資訊！

- 某些應用程式，例如日曆，只能適用於您新增的首個 Google 帳戶。 如果您打算在手機上使用多個 Google 帳戶，確保首先登入您希望使用這些應用程式的帳戶。 當您登入時，您在網上的通訊錄、Google Mail 訊息、日曆活動及

這些應用程式和服務中的其他資訊將與您的手機同步。 如果您在設置時，沒有登入一個 Google 帳戶，則在您首次開始一個需要 Google 帳戶的應用程式時，您將被提示登入或新建一個 Google 帳戶，例如 Google Mail 和 Android Market。

- 如果您希望使用備份功能在此手機上保存您在另一運行 Android OS 或更高版本的手機上的設定，則必須在設定時即登入您的 Google 帳戶。 如果您等到設置完成之後，那麼您的設定將不會被保存。
- 如果您擁有一個您的公司或其他組織的企業帳戶，您的 IT 部會對如何登入這種帳戶給予特別指示。

通話功能

撥打電話

1 點按 開啟鍵盤。

2 在鍵盤上輸入號碼。 要刪除一個數字，點按**清除**圖示 。

3 點按**通話**圖示 撥打電話。

4 要結束通話，點按**結束**圖示 。

提示！ 若要在撥打國際電話時輸入「+」，請點按並按住 。

從通訊錄中撥打電話

1 點按 開啟您的通訊錄

2 捲動聯絡人清單，或點按**搜尋**以輸入您想致電的聯絡人名稱的第一個字母。

3 在清單內點按您想致電的聯絡人。

接聽來電和拒接來電

在屏幕鎖定時：

手機響鈴後，將**應答**圖示 向右拖動。

將**拒接**圖示 向左拖動以拒接來電。 如您想發送「應答」或「拒接」，點按兩者之間的道歉訊息圖示。 如果為不明來電者，則不會顯示道歉訊息圖示。

在屏幕解鎖時：

手機響鈴後，點按**應答**圖示 。 點按**拒接**圖示 以拒接來電。

如您想發送「應答」或「拒接」，點按兩者之間的道歉**訊息**圖示。 如果為不明來電者，則不會顯示**藉口訊息**圖示。

調整通話音量

要在通話時調整通話音量，按手機右側的音量上/下鍵。

通話期間撥打第二個電話

1 開始通話時，點按 。

2 撥號或者在通訊錄中搜尋選擇您要通話的號碼。

3 點按**通話**圖示 以開始撥打電話。

4 兩個通話均會在通話屏幕中顯示。 您的原來通話會被鎖定及保留。

5 點按 在兩個通話間切換。

備註：您可以點按 開始會議通話。

6 要結束使用中通話，點按**結束通話**。 要在同時間結束所有通話，點按**功能表**鍵並選擇**結束所有通話。**

備註：您撥打的每一個通話均需收費。

檢視通話記錄

在桌面點按 ，然後選擇**通話記錄**標籤。

您可檢視所有已撥、已接及未接來電的完整清單。

提示！ 點按任何一個通話記錄項目，便可檢視該通話的日期、時間及持續時間。

提示！ 點按**功能表**鍵，然後點按**清除通話記錄**以刪除全部已記錄的項目。

通話設定

您可設置手機的通話設定，例如來電轉接及您的服務供應商提供的特別功能。

1 在主頁點按**應用程式**標籤，以開啟應用程式功能表。

2 捲動並點按**設定**。

3 點按**通話設定**，選擇您要調整的選項。

< 固定撥號號碼 >

選擇固定撥號，以開啟並編輯一份可從您手機撥打的號碼清單。 您需要使用 PIN 2 密碼，它可從您的網絡商取得。 您的手機只能撥打固定撥號清單中包含的號碼。

< 留言信箱 >

設定您的留言信箱號碼。

語音信箱服務 - 允許您選擇您的服務供應商所提供的語音信箱服務或其他服務，例如 Google 語音信箱服務。

語音信箱設定 - 如果您正在使用您的服務供應商所提供的語音信箱服務，此選項允許您輸入電話號碼用來接聽或者管理您的語音信箱。

通話功能

< 其他通話設定 >

TTY 模式 - 讓您設定 TTY 模式，與其他 TTY 裝置通訊。

道歉訊息 - 當您拒接來電時，使用此功能您可以快速發送一條訊息。 如果您需要在會議中回覆訊息，此功能將十分有用。

來電轉接 - 您可設置在通話中、不接聽來電等情況下轉駁通話的方式。 您可選擇**始終轉接**、**忙線時轉接**、**無回應時轉接**或**無網絡**或**關機時轉接**。

然後輸入要轉駁的號碼。

備註：轉駁通話需要收費。請聯絡網絡供應商瞭解詳情。

通話限制 - 選擇您想要何時限制通話。 輸入通話限制密碼。 請向您的網絡供應商瞭解此服務詳情。

通話費用 - 檢視您的通話收費。（此服務視乎您的網絡而定；一些網絡供應商不支援此功能。）

通話時間 - 檢視所有通話的持續時間，包括全部、已撥、已接來電及最後通話。

其他設定 - 您可更改以下設定：

- **來電者名稱**：選擇是否在撥出的電話中顯示您的電話號碼。
- **來電等候**：如已啟動來電等候，當您在通話中接到來電，手機便會通知您。（這取決於您的網絡供應商。）

通訊錄

您可在手機上新增通訊錄，並與您的 Google 帳戶或其他帳戶（須支援同步通訊錄）內的通訊錄同步。

搜尋聯絡人

1 從桌面點按 以開啟通訊錄。

2 點按**搜尋**，使用鍵盤輸入該聯絡人姓名

新增聯絡人

1 在桌面點按 ，然後輸入新聯絡人的號碼，再點按**功能表鍵**，點按**新增至通訊錄**，再點按**新增通訊錄**。

2 如您希望為新聯絡人新增相片，點按 。 從**拍照**或**從圖片庫選取**。

3 點按 選擇通訊錄類型。

4 點按一個文字欄位以開啟觸控鍵盤，然後輸入新聯絡人的名稱。

5 點按一個聯絡資訊類別，然後輸入聯絡人的詳情。

6 點按**完成**以儲存通訊錄。

常用的聯絡人

您可將常用的聯絡人分類為您的最愛。

新增聯絡人至您的最愛：

1 從桌面點按 以開啟通訊錄。

2 點按一個聯絡人以檢視詳情。

3 點按聯絡人名稱右面的星號。 星號會轉為金色。

要從最愛清單移除聯絡人：

1 從桌面點按 以開啟通訊錄。

2 點按**最愛**標籤，選擇一個聯絡人以檢視詳請。

3 點按聯絡人名稱右面的星號。 星號會轉為灰色，表示該聯絡人已從您的最愛清單移除。

訊息/電子郵件

訊息

LG-E720 將文字訊息和多媒體訊息結合在一個直觀易用的功能表中。

發送訊息

1 點按桌面上的 圖示，然後點按**新訊息**以開啟空白訊息。

2 在**收件者**一欄中輸入聯絡人的名稱或撥打號碼。 當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。 您可點按一個建議的收件者。 您可新增數個聯絡人。

備註：如訊息有多個收件者，您需要為每一位收件者分別繳付文字訊息費用。

3 點按下方的輸入內容開始輸入您的訊息。

4 點按**功能表**鍵以開啟選項功能表。 您可選擇**新增主旨、附加、插入表情圖示、取消、常用範本、所有串連及新增至通訊錄，**所有執行項目等。

5 點按**發送**以發送訊息。

6 訊息畫面會開啟，訊息內容會顯示在您的名稱之下。 屏幕會顯示回覆。 當您檢視及發送更多訊息，便會建立一個訊息串連。

> ⚠ **警告**
>
> 160 個字元的限制可能會視乎不同國家的文字訊息編碼方式及語言而有所不同。

> ⚠ **警告**
>
> 如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

備註：當您在通話期間收到短信，您會收到通知鈴聲。

更改訊息設定

LG-E720 已為您預先定義訊息設定，讓您可立即發送訊息。 您可按偏好更改這些設定。

點按桌面上的**訊息**圖示，然後點按**功能表**鍵，再點按**設定**。

< 儲存設定 >

刪除舊訊息 - 點按勾選，當達到文字訊息限制或多媒體訊息限制時，允許手機在一個線程中刪除舊訊息。

不選保留所有訊息。

文字訊息限制 - 點按設置每串連文字訊息的數量。

多媒體訊息限制 - 點按設置每串連多媒體訊息的數量。

<文字訊息設定>

發送報告 - 啟動便可接收已發送訊息的確認。

管理智能咭訊息 - 管理儲存在您的智能咭上的訊息。

有效期 - 選擇訊息儲存在訊息中心內的時限。

文字訊息中心 - 輸入訊息中心的詳細資料。

<多媒體訊息設定>

發送報告 - 選擇接收發送報告。

允許發送報告 - 選擇允許發送投遞確認訊息。

讀取報告 - 選擇以在發送每條訊息時要求接收讀取報告。

允許已閱報告 - 選擇允許發送閱讀確認訊息。

自動擷取 - 啟動以自動重新接收訊息。

漫遊自動擷取 - 啟動以在漫遊時重新接收訊息。

設定優先順序 - 選擇您的多媒體訊息的重要性程度。

有效期 - 選擇訊息儲存在訊息中心內的時限。

建立模式

- **已限制：**在此模式下，多媒體訊息客戶端裝置只會建立及發送內容屬於核心多媒體訊息內容網域 (Core MM Content Domain) 的訊息。
- **警告：**在此模式下，多媒體訊息客戶端裝置會引導用戶建立及發送內容屬於核心多媒體訊息內容網域的訊息。 手機會以警告對話方塊提供引導。
- **自由：**在此模式下，多媒體訊息客戶端允許客戶新增任何內容至訊息。

- **接收廣告** - 允許接收廣告訊息。

< 資訊 服務設定 >

選擇接收、封鎖或檢視或編輯頻道，以接收資訊服務訊息（區域廣播訊息）。 您亦可選擇資訊服務訊息語言。

< 服務訊息 >

選擇接收或封鎖服務訊息。

< 通知設定 >

啟動以在狀態列上顯示訊息通知。

您亦可選擇一種鈴聲或啟動震動功能，以提示您收到新訊息。

開啟電子郵件

您可以使用**電子郵件**應用程式讀取 Google Mail 以外服務中的電子郵件。 **電子郵件**應用程式支援以下帳戶類型：POP3、IMAP 及 Exchange。

1 在桌面點按**應用程式**標籤，然後點按**電子郵件**以檢視每個電子郵件帳戶的郵箱。 或者，您也可在桌面點按**電子郵件**以直接存取。

2 當您第一次在手機上開啟**電子郵件**應用程式，會開啟設定精靈以協助您新增電子郵件帳戶。

3 經過初次設定後，**電子郵件**顯示收件箱的內容（如您只有一個帳戶）或更多其他帳戶（如您有多個帳戶）。

讀取您的信息

點按您想讀取的訊息。 訊息會於載有寄件者、發送日期及其他相關資料的屏幕中開啟。 您可點按該狀態指示器以開啟**快速聯絡人**。

回應訊息

您可回覆、轉寄或刪除訊息。

要將訊息標記成未讀取：

您可將訊息設定顯示為未讀取 - 例如用作提醒自己稍後再次讀取該訊息。

- 讀取訊息時，點按**功能**鍵，然後點按**標記為未讀取**。

要刪除訊息：

- 讀取訊息時，點按**刪除**鍵，或點按**功能表**鍵，然後選擇**刪除**。

在很多類型的帳戶中，已刪除的訊息會移動至**垃圾桶**資料夾；即使您無意中刪除訊息，也能將訊息擷取回來。

以星號標記訊息

您可將星號新增至重要訊息，方便追蹤相關訊息。

要以星號標記訊息：

- 讀取訊息時，點按其頁首內的星號 。
- 從資料夾內的訊息清單中，點按訊息的星號。 星號 會轉為金色。

要取消以星號標記訊息：

- 再次點按該星號 。

要檢視以星號標記的訊息：

- 點按**以星號標記**。 載有您以星號標記訊息的資料夾會開啟。

編寫及發送電子郵件

要編寫及發送訊息：

1 在**電子郵件**應用程式，點按**功能表**鍵，並點按**編寫**。

2 輸入將會收到訊息的收件者的地址。 當您輸入文字時，會從您的通訊錄顯示匹配的地址。 以逗號分隔多個地址。

3 點按**功能表**鍵，然後點按**新增抄本/密件抄送**，您便能夠將訊息抄本/密件抄送至其他聯絡人/電子郵件地址。

4 輸入訊息的文字。

5 點按**功能表**鍵，然後點按**附加**將相片 連同訊息一併發送。

6 點按**發送**。 如您尚未準備好發送訊息，點按**儲存為草稿**，將訊息儲存在**草稿**資料夾內。 點按**草稿**資料夾內的草稿訊息，繼續編寫訊息。 如您發送前點按**返回**鍵 ，您的訊息也會儲存為草稿。 點按**放棄**以放棄並刪除訊息，包括任何已儲存的草稿。 如您沒有連接至網絡，例如正處於飛航模式，您發送的訊息會儲存在**寄件匣**料夾內，直至您再次連接至網絡。 如載有任何有待處理的訊息，會於**帳戶**屏幕顯示**寄件匣**。

訊息/電子郵件

請注意，使用 Exchange 帳戶發送的訊息不會位於手機內，而會位於 Exchange 伺服器內。
如您想檢視**已發送**資料夾內您所發送的訊息（或帶有**已發送**標籤的訊息），您便需要時常開啟**發送**資料夾 / 標籤，並從選項功能表中選擇**重新整理**。

處理帳戶資料夾

每個帳戶設有**收件匣**、**寄件匣**、**已發送**及**草稿**資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的特色而定。

新增及編輯電子郵件帳戶

要新增電子郵件：

1 點按**功能表**鍵，然後點按**新增帳戶**。
2 點按**下一頁**。 或者，如您需要輸入電子郵件帳戶設定。
3 輸入該帳戶的名稱，確定發出郵件內您想顯示的名稱，然後點按**完成**。

要更改帳戶設定：

1 開啟**帳戶**屏幕。
2 點按並按住您想更改設定的帳戶。 在開啟的功能內，點按**帳戶設定**。

要刪除電子郵件：

1 開啟**帳戶**畫面。
2 點按並按住您想刪除的帳戶。
3 在開啟的功能內，點按**移除帳戶**。
4 在對話方塊上內點按**確定**，以確定您想刪除該帳戶。

社交網絡

您可在手機上盡享社交網絡的樂趣，並管理您在網上社區內的微型博客。 您可更新上載相片的目前狀態，並檢視朋友們的即時狀態更新。

如您沒有這些帳戶，您可到它們的網站設立一個帳戶。

注意：連接及使用網上服務可能需要額外付費。 請向網絡供應商諮詢收費詳情。

新增您的帳戶至手機

1 在主頁點按**應用程式**標籤，以開啟應用程式功能表。
2 選擇任何您希望使用的 SNS 應用程式。
3 輸入您在社區內設定的電子郵件地址及密碼，然後點按**登入**。
4 請等待系統基於您的社區核對您的詳細資料。
5 如您點按您的社區，您可查看該社區的即時狀態。

提示！ 如您在桌面新增社交網絡 widget，當您的手機從網絡更新時，該 widget 便會顯示您的狀態。
點按 widget 亦可讓您直接存取社區。

檢視及更新您的狀態

1 選擇您想存取的社區。
2 您可查看您的社區的即時狀態。
3 您可以通過發表評論或上載相片來更新您的目前狀態。

備註：此功能視乎不同的網絡服務而定。

提示！ 您僅能使用 SNS 內的朋友資訊，或者同步處理所有數據至通訊錄。

從手機移除帳戶

1 選擇**應用程式 > 設定 > 帳號及同步設定**。
2 選擇您希望刪除的帳戶，然後點按**移除帳戶**。

相機

瞭解取景器

亮度 - 決定及控制進入圖像的光線量。 您可滑動亮度指標：向「-」滑動使圖像較亮，或向「+」滑動使圖像較暗。

變焦 - 拉近或拉遠鏡頭。 或者，您可使用側音量鍵。

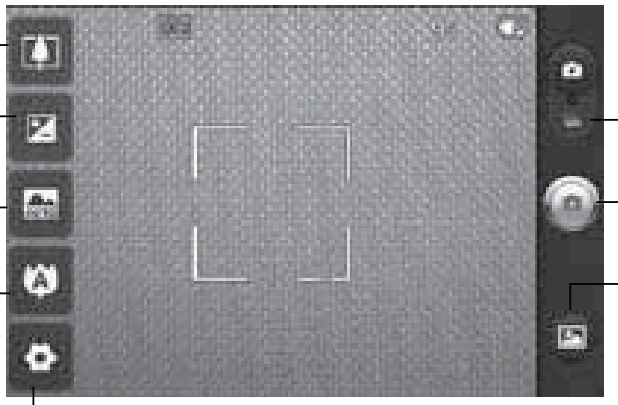

影片模式 - 將此圖示向下滑動，便能切換至影片模式。

拍攝相片

圖片集 - 讓您在相機模式內存取您已儲存的相片。只需點按，您的圖片集即會顯示在屏幕上。

設定 - 點按此圖示開啟設定功能表。 請參閱**使用進階設定**。

對焦 - 點按此圖示選擇選項功能表。 請參閱**使用對焦模式**。

場景模式 - 選擇**自動**、**人像**、**風景**、**運動**及**夜間**。

備註：拍攝相片前，您必須先插入記憶咭。 如沒有插入記憶咭，您將不能拍攝相片或儲存已拍攝的相片。

提示！ 您可關閉所有捷徑選項，獲得更清晰的取景器畫面。 您只需點按一下取景器的正中心。 要重新開啟選項，請再點按一下屏幕。

使用對焦模式

您可從以下選項選擇對焦模式：

自動 - 將相機設定為自動對焦。

微距 - 微距模式讓您拍攝極近距離的物件。 如果您正嘗試近距離拍攝但對焦方塊仍為紅色，請嘗試開啟微距模式。

人臉追蹤 - 如果您在拍照時設定人臉追蹤，相機會自動偵測人臉並對焦。

備註：在人臉追蹤模式下無法使用變焦。

手動 - 將相機設定為手動對焦。

快速拍照

1 開啟**相機**應用程式。

2 橫向握住手機，將鏡頭對準拍攝的對象。

3 點按快門圖示 。

相機會為圖像對焦。 對焦圖像後，每個角落的對焦指示器會變為綠色，相機便會拍攝相片。

拍攝相片後

拍攝的相片將顯示於屏幕上。

共享 點按以**藍芽、電子郵件、** Facebook for LG、Gmail、**訊息、** MySpace for LG、Picasa 或 Twitter for LG 共享您的相片。

備註：如在漫遊期間下載多媒體訊息，則可能需額外收費。

設為 (Set as) 點按可將圖像設為通訊錄圖示或者待機畫面。

重新命名 點按以編輯所選擇相片的名稱。

編輯 點按以使用各種工具編輯圖像

點按以刪除圖像。

點按以立即拍攝新相片。 您當前的相片會儲存在手機內。

相機

點按以檢視已儲存的相片集。

使用進階設定

在取景器內點按 以開啟所有進階選項。

您可捲動轉輪以更改相機設定。 選擇選項後，請點按**返回**鍵。

圖像大小 - 點按以設定所拍攝相片的大小（像素）。 您可選擇以下的像素值：**5 百萬 (2592X1944)**、**3 百萬 (2048x1536)**、**2 百萬 (1600x1200)**、**1 百萬 (1280x960)**、**VGA (640x480)**、**QVGA (320x240)**。

ISO - ISO 等級決定相機感光器的敏感度。 ISO 愈高，鏡頭對光線的敏感度愈高。 當您無法使用閃光燈時，它能讓您在黑暗環境中拍攝得更清晰。 您可選擇的 ISO 值為**自動**、**400**、**200**及**100**。

白平衡 - 選擇**自動**、**白熱光**、**陽光**,、**日光燈**或**陰天**。

色彩效果 - 為下一張相片選擇色調。 從關閉、負片、曝光及深褐色選擇。

備註：您可將彩色相片更改為黑白或復古色調，但您無法將黑白或復古色調相片轉回彩色。

計時器 - 自動計時器讓您設定按下快門後的延遲拍攝時間。 您可選擇**關閉**、**3 秒**、**5 秒**或 **10 秒**。 此功能最適合自拍時使用。

拍攝模式 - 選擇標準、連續拍攝、人面優化、藝術照、一笑即拍及卡通。

圖像質量 - 可選擇特最細緻、細緻及標準。

圖像質素 - 可選擇**特細緻**、**細緻**及**正常**。 質素愈細緻，相片便愈清晰。 然而，相片的大小亦會隨之增加，表示您可儲存在記憶體內的相片數量會減少。

自動檢視 - 如您將自動檢視設定為開啟，便會自動向您展示您曾拍攝的相片。

快門聲 - 有四種快門聲音可供選擇。

標記位置 - 啟動以使用手機的定位服務。 您可隨時隨地拍攝相片，並標籤相片拍攝的位置。 如您將已標籤的相

片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。

備註：您需要開啟 GPS 才可使用此功能。

還原所有相機預設設定。

任何時候，如您想知道此功能如何操作，點按便可。 此會向您提供快速手冊。

提示！ 當您結束相機功能，除圖像大小及圖像質素外的所有設定將回到預設值。 您需要重新設定所有非預設的設定，例如色調及 ISO。 拍攝下一張相片前，請先檢查這些設定。

提示！ 設定功能表乃疊於取景器上，因此當您更改圖像顏色或質素的設定，您會即時在設定功能表背後看見預覽圖像的更改。

檢視已儲存的相片

1 您可在相機模式內存取您已儲存的相片。 只需點按 ，您的圖片集即會顯示在屏幕上。 點按屏幕上的相片，然後您會看見**投影片**及**功能表**。

提示！ 左右翻閱以檢視其他相片或影片。

點按以檢視投影片。

點按**功能表**並選擇您所需要的選項。 您可共享內容或刪除相片。 點按**更多**以檢視更多以下的選項。

詳細資訊 - 檢視內容資訊。

設為 - 設為通訊錄圖示或者待機畫面。

剪輯 - 裁剪您的相片。在屏幕上移動手指以選擇修改區域。

旋轉 - 左右旋轉。

編輯(Edit) - 點按以使用不同編輯圖像的工具。

視像攝錄機

瞭解取景器

亮度 - 決定及控制進入影片的光線量。 您可滑動亮度指標：向「-」滑動使影片較亮，或向「+」滑動使影片較暗。

變焦 - 拉近或拉遠鏡頭。 或者，您可使用側音量鍵。 開始錄製影片前，您可使用變焦功能。 您無法在錄製途中調整焦距。

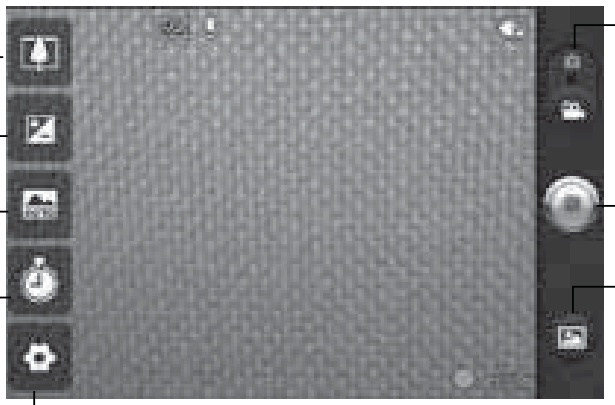

相機模式 - 將此圖示向上滑動，便能切換至相機模式。

開始錄製

圖片集 - 此功能允許您在影片模式中存取已儲存的影片。 只需點按，您的圖片集即會顯示在屏幕上。

設定 - 點按此圖示開啟設定功能表。 請參閱**使用進階設定**。

持續時間 - 設定影片的最長錄製持續時間。 您可選擇標準或多媒體訊息限制影片的大小，以透過多媒體訊息發送影片。

場景模式 - 設定攝錄機以適應拍攝環境。 選擇**自動**或**夜間**。

拍攝快速影片

1 開啟**相機**應用程式及向下滑動相機模式按鈕至**影片**位置，快門圖示 會更改為 。

2 視像攝錄機的取景器會在屏幕上顯示。

3 橫向握住手機，將鏡頭對準拍攝影片的對象。

4 點按開始影片圖示 。

5 REC 將顯示於取景器底部，同時計時器會顯示影片錄製的長度。

6 點按停止影片圖示 以停止錄製。

拍攝影片後

代表該影片的靜止圖像會在屏幕上出現。

播放 點按以播放影片。

共享 點按便能以**藍芽**、**電子郵件**、**Gmail**、**訊息**或 YouTube 的方式共享影片。

備註：如在漫遊期間下載多媒體訊息，則可能需額外收費。

重新命名 點按以編輯所選擇影片的名稱。

點按以刪除剛錄製的影片，並點按**是**確認。 取景器將再次出現。

點按以立即拍攝新影片。 您當前的影片會儲存在手機內。

點按以啟動媒體播放器，檢視已儲存的影片。

使用進階設定

從取景器中點按 以開啟所有進階選項。

捲動轉輪以調整視像攝錄機設定。 選擇選項後，請點按**返回**鍵。

影片大小 - 點按以設定所錄製影片的大小（像素）。 您可選擇的影片圖像大小為 VGA (640x480)、QVGA (320x240) 或 QCIF (176x144)。

白平衡 - 白平衡確保您影片內的任何白色區域均為真實顏色。 要使您的相機正確調整白平衡，您可能需要指定光線環境。 您可選擇**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**。

色彩效果 - 為影片選擇新色調。 從關閉、黑白、底片、曝光及深褐色選擇。

> **提示！** 備註：您可將彩色影片更改為黑白或復古色調，但您無法將黑白或復古色調影片轉回彩色。

影片品質 - 可選擇特細緻、細緻及標準。

語音 - 選擇靜音以錄製無聲影片 。

自動檢視 - 如您將此項設定為**開啟**，將會自動顯示您剛錄製的影片 。

重新設定所有影片相機設定。

任何時候，如您想知道此功能如何操作，點按便可。 此會向您提供快速手冊。

觀看已儲存的影片

1 在取景器中點按 。
2 您的圖片集會顯示於屏幕上。
3 點按一下影片 ，將它帶到圖片集的前方。 它會自動開始播放。

觀看影片時調整音量

要在影片播放途中調整音量，您可使用在手機右側的音量鍵。

相片及影片

編輯您的相片

您可在相片上盡情發揮創意：改變相片、增加元素，或使它更生動有趣。

1 開啟您想編輯的相片，然後點按**功能表**鍵，再選擇**更多 > 編輯**(Edit)。

2 點按選項，編輯相片：

裁剪相片。 選擇方形或圓形的裁剪區域，然後用手指在屏幕上劃出選擇區域。

工具 (Tools) 選擇您想使用的選項。

在相片上進行手繪。 從四個選項中選擇線條粗細以及要使用的色彩。

清除已新增至圖片的編輯內容。 您可選擇您所使用的擦除大小。

在圖片上新增文字。

使用圖章裝飾相片。 您可選擇不同的圖章，然後在相片上點按您想蓋上圖章的位置。

濾鏡 (Filter) 點按以開啟篩選選項。

圖像 (Image) 點按以開啟更多效果選項，包括**旋轉**。 亦有更多進階編輯選項。

調整 (Adjust) 此選項有助使用自動色彩和亮度等調整拍攝的圖片。

儲存 (Save) 儲存對相片所做的更改。 選擇更新(Update)以儲存對原始檔案的更改，或儲存為新檔案(New file)。 如果選擇新檔案(New file)，請輸入檔案名稱。

復原 (Undo) 復原上一次效果或對相片做出的修改。

設置為 (Set as) 點按可將已編輯的相片設為通訊錄圖示或者待機畫面。

分享 (Share) 點按以**藍牙**、Email、Facebook for LG、Google Mail、**訊息**、MySpace for LG、Picasa 或 Twitter for LG **共享您的相片**。

多媒體

您可儲存多媒體檔案至記憶咭，輕易存取您所有的圖像及影片檔案。

點按**應用程式**標籤，然後選擇**媒體匣**。

備註：請確保您將記憶咭安裝到手機，以儲存相片和存取您全部的圖片。 如沒有記憶咭，手機則無法顯示任何儲存於 Picasa 相簿的相片或影片。

更改媒體匣內容的顯示方式

您可以順時序圖示或堆疊方式、按拍攝時間及地點分類，檢視圖片集內的圖像和短片。 使用屏幕上方的的圖片集檢視開關， 切換檢視格線及堆疊顯示。

將圖片集檢視開關拖動至左方，以按時序格線檢視圖片集內容。

將圖片集檢視開關拖動至右方，以按堆疊方式檢視圖片集內容。

發送相片

1 要發送圖片，碰觸所需的圖像。

2 碰觸**功能表**再選擇共用。選擇 Facebook for LG、MySpace for LG、Twitter for LG、訊息、藍芽、電子郵件、Picasa 或 Gmail。

3 當您選擇電子郵件、訊息或 Gmail 時，您的相片會附加至訊息，然後您可如常地編寫及發送訊息。

提示！ 如您擁有個人檔案帳戶並已在手機中設定，您可將相片分享至個人檔案社區。

發送影片

1 要發送影片，點按並按住該影片。

2 選擇共用。 選擇訊息、藍芽、電子郵件、YouTube 或 Gmail。

3 當您選擇電子郵件或訊息或 Gmail 時，您的影片會附加至訊息，然後您可如常地編寫及發送訊息。

音樂

LG-E720 具有內置音樂播放器，讓您播放所有您最愛的曲目。 若要存取音樂播放器，請點按**音樂**。

播放歌曲

1 在桌面點按**應用程式**標籤，然後選擇**音樂**。
2 點按**歌曲**。
3 選擇您要播放的歌曲。
4 點按 暫停播放歌曲。
5 點按 略過至下一首歌。
6 點按 返回歌曲的開首。 點按 兩次以返回至上一首歌曲。

若要在聆聽音樂時調節音量，請按手機左側的向上及向下音量鍵。

點按並按住清單上的任何歌曲，便會顯示**播放**、**新增至播放列表**、**設為來電鈴聲**、**刪除**、**詳細資訊**和**搜尋**選項。

備註：音樂檔案的版權可能受國際公約和國內版權法保護。

因此，您或需要取得授權或許可，才可以複寫或複製音樂。 在某些國家，國內法律禁止私人複製受版權保護的材料。 下載或複製檔案前，請先檢查有關國家關於使用這類材料的國內法律。

使用收音機

LG-E720 具有內置 FM 收音機，只要作出適當調校，就可以隨時隨地聆聽您最愛的電台。

備註：您必須插入耳機才能收聽電台。 請將之插入耳機插孔。

搜尋電台

您可以使用手動或自動搜尋功能調校電台。 搜尋到的電台隨即儲存到特定的頻道編號，這樣您就不用重新調頻。
您最多可以將 48 個頻道儲存到手機。

自動調頻：

1 在桌面點按**應用程式**標籤，然後選擇 **FM 收音機**。
2 點按**功能表**鍵，然後點按**自動掃描**。
3 如已預設頻道，您將會見到「重設所有頻道及啟動自動掃描？」的彈出視窗。 如您選擇**是**，將會刪除所有預設頻道及啟動自動掃描。
4 在自動掃描的過程中，如您希望停止掃描點按**停止**。 只會儲存停止掃描前所掃描的頻道。

備註：您亦可使用轉輪以手動方式調頻。

重設頻道

點按**重設頻道**鍵及選擇**重設頻道**以重新設定目前的頻道，或選擇**重設所有頻道**以重新設定所有頻道。

收聽電台

1 在桌面點按**應用程式**標籤，然後選擇 **FM 收音機**。
2 點按您要收聽的電台的頻道編號。
3 點按透過下列方式收聽，您可選用**揚聲器**或**有線耳機**以收聽收音機。

提示！ 若要改善電台訊號接收，請伸展作為收音機天線的耳機電線。

⚠ 警告
若連接的耳機並非為了接收電台訊號而特製，接收效果或會欠佳。

使用 USB 大容量儲存裝置傳送檔案

要使用 USB 裝置傳送檔案：

1 使用 USB 線連接 LG-E720 至電腦。
2 如果電腦上沒有安裝 LG Android 平台驅動程式，則需要手動進行設定。 選擇**設定 > SD 卡和手機儲裝置 >** 啟動僅限**大容量儲存體**。
3 點按**開啟 USB 儲存**。

4 您可於電腦檢視大容量儲存體的內容並傳送檔案。

備註：

- 您必須先安裝 microSD 咭。 如沒有 microSD 咭，則無法使用 USB 大容量儲存。
- 如果電腦上已安裝 LG Android 平台驅動程式，您會立即見到「**開啟 USB 儲存**」。
- 使用 USB 大容量儲存功能後，如您希望使用 LG PC Suite 將手機與電腦同步，您需要點按 設定 > SD 卡及電話儲存，再點按剔號並關閉啟動僅限大容量儲存體模式。

如何將音樂/影片檔案儲存至手機

1 使用 USB 線將手機連接到電腦。

- 點按並向下拖動桌面上的狀態列。 選擇 **已連接的 USB > 開啟 USB 儲存體 > 開啟資料夾以檢視檔案**。
- 如果電腦上沒有安裝 LG Android 平台驅動程式，則需要手動進行設定。 有關更多資訊，請參閱「使用大容量儲存裝置傳送檔案」。

2 將電腦中的音樂或影片檔案儲存至手機的可移除儲存體。

- 您可以使用讀咭器，將檔案從電腦複製或移動至手機的可移除儲存體。
- 如果影片檔案包含字幕檔案（與影片檔案同名的 .smi 或 .srt 檔案），請將其放入相同資料夾，以便在播放影片檔案時自動顯示字幕。
- 在下載音樂或影片檔案時，必須保護版權的安全。 請注意，已損壞檔案或副檔名錯誤的檔案可能會損壞手機。

如何將通訊錄從舊手機移動至目前手機

使用電腦同步程式，將通訊錄以 CSV 檔案格式從舊手機匯出至電腦。

1 請於 www.lg.com 下載 Mobile Sync for Android，然

後將其安裝在電腦上。 執行該程式，並使用 USB 線將 Android 行動手機連接到電腦。

2 選擇**通訊錄**圖示。 轉到**功能表** > **檔案** > **匯入**，然後選擇儲存於電腦中的 CSV 檔案。

3 如果匯入的 CSV 檔案中的欄位與 Mobile Sync for Android 中的欄位不同，則需要對應欄位。 對應欄位後，按一下「確定」。 然後，Mobile Sync for Android 中便會新增通訊錄。

4 如果 Mobile Sync for Android 偵測到 LG-E720 手機的連接（使用 USB 線），請按一下「同步」或「同步通訊錄」，將電腦中儲存的通訊錄同步至手機並儲存通訊錄。

如何透過藍芽發送手機中的數據

透過藍芽發送數據：與普通行動手機不同，您可以執行對應的應用程式，而並非從藍芽功能表，透過藍芽發送數據。

- **發送圖片**：執行媒體匣應用程式，然後選擇圖片 > 功能表。 按一下共用，選擇藍芽 > 檢查藍芽是否開啟，並選擇掃描裝置 > 從清單中選擇您要發送數據的裝置。
- 匯出通訊錄：執行通訊錄應用程式。 點按要匯出的地址。 按一下功能表，選擇共享 > 藍芽> 檢查藍芽 > 檢查藍芽是否開啟，並選擇**掃描裝置** > 從清單中選擇您要發送數據的裝置。
- **發送所選的多個聯絡人**：執行**通訊錄**應用程式。 選擇多個聯絡人，點按**功能表**鍵及點按選擇多項。 選擇您要發送的聯絡人或按功能表鍵，然後點按選擇全部 > 點按共用 > 藍芽 > 檢查藍芽是否開啟，並選擇**掃描裝置** > 從清單中選擇您要發送數據的裝置。

- **連接至 FTP（此手機僅支援 FTP 伺服器）：選擇設定 > 無線與網絡 > 藍芽設定**。 然後，選擇無法偵測核取方塊，並搜尋其他裝置。 尋找所需的服務並連接至 FTP 伺服器。

提示！ 版本為藍芽 2.1 EDR 並經 Bluetooth SIG 認證。 此與其他 Bluetooth SIG 認證的設置相容。

備註：如果您要從其他裝置中搜尋此手機，請轉到設定 > 無線與網絡 > 藍芽設定。 然後，選擇無法偵測核取方塊。 核取方塊會在 120 秒後清除。

備註：支援的設定檔為 SDAP、HFP、HSP、OPP、PBAP（伺服器）、FTP（伺服器）、A2DP、AVRCP 和 DUN。

Google 應用程式

1 首先，請建立一個 Google 帳戶。 輸入您的使用者名稱和密碼。

2 登入後，您的 Google 帳戶中的通訊錄、電子郵件和日曆會自動與您的 LG-E720 同步。

Google Maps™

檢查您現時的位置和交通，並取得前往目的地的駕駛方向。 LG-E720 必須連接 Wi-Fi 或 3G/GPRS。

備註：Google 地圖並不覆蓋所有城市及國家。

點按**功能表**鍵以使用選項：

搜尋 - 輸入您要尋找的地點。

路線 - 此選項將讓您找出所輸入地點的路線。 點按 以輸入數據。

圖層 - 您可以在**交通**、**衛星**或**地形**檢視之間切換。 點按**緯度後**，您將看到 Google 帳戶中通訊錄的位置。

我的位置 - 在地圖上指出您現時所處的位置。

加入 Google 定位 - 與您選擇的朋友及 Google 分享您的位置。

更多 - 清除地圖或尋找以星號標記的項目以及更多。

備註：檢視**某個位置的街景圖時**，點按**功能表**鍵，再點按**指南針模式**開啟指南針模式。

Market™

Android Market™ 設有多種有用的應用程式和遊戲供您下載。 您從 Google Market 安裝的應用程式和遊戲可於 LG-E720 功能表中找到。 您可以通過點按**下載**標籤來檢視已下載的應用程式。

您可以檢視其他人對某個應用程式的評論，或者您可以發表您的評論。

1 選擇**應用程式**和**遊戲**中的一個類別，瀏覽其中內容。 您將會看到**最熱門付費程式**、**最熱門免費程式**和**最新程式**。

2 選擇需要安裝的應用程式。

備註：若要終止遊戲，**請使用主頁**或**返回**鍵。 您將會返回桌面。 您也可**使用遊戲的功能表**鍵。

Google Mail™

Google Mail 會在您首次設定手機時設置。 視乎您的同步設定，手機的 Google Mail 會與您在網上的 Google Mail 帳戶自動同步。收件匣對話清單是您預設的 Google Mail 檢視模式。

點按功能表鍵，然後點按重新整理 (Refresh) 以傳送或接收新電郵，並與您在網上的 Gmail 帳戶同步。 通過使用功能表鍵，您可以編寫電子郵件 (Compose)、新增帳戶 (Accounts > Add account)、跳至標籤 (Go to labels)、搜尋 (Search) 以及更多來設定和檢視說明。

Google Talk™

Google Talk 是 Google 的即時通訊程式，讓您與其他使用 Google Talk 的用戶通訊。

點按**功能表**鍵並檢查可用選項。

所有朋友(All friends) - 加入所有朋友進行交流。

新增朋友(Add friends) - 發送聊天邀請。

搜尋(Search) - 搜尋包含您輸入的詞句的任何聊天內容。

登出(Sign out) - 登出聊天。 如果您設定了自動登入啟動，當您從主頁屏幕點按聊天圖示，您將會自動登入。

設定(Settings) - 調整指示或通告等等。

更多 - 在這裡，您可以關閉全部聊天，檢查邀請和封鎖名單。

實用程式

設定鬧鐘

1 在主頁屏幕上，點按**應用程式**標籤並選擇**時鐘**。 開啟時鐘應用程式，可以將日期和時間顯示在您的主頁屏幕上。

2 若要新增新的鬧鐘，點按 。 點按現有的鬧鐘，更改它的時間和其他屬性；或點按**新增鬧鐘**以新增新的鬧鐘。

3 設定時間及點按 以開啟鬧鐘。 設定時間後，LG-E720 會讓您知道距離鬧鐘響起還剩下多少時間。

4 設定**重複**、**鈴聲**或**震動**、並新增**標籤**為鬧鐘命名。點按**完成**。

5 備註：若要更改鬧鐘設定，在時鐘屏幕上，點按**功能表**鍵，然後點按**設定**。 您可以在設定中新增鬧鐘、調整延後時間及鬧鐘音量。

使用計算機

1 在桌面點按**應用程式**標籤，然後選擇**計算機**。

2 點按數字鍵以輸入數字。

3 對於簡單計算，點按所需的運算符號（+、-、x 或 ÷），然後按 =。

4 對於複雜的計算，點按**功能表**鍵，然後點按**進階控制板**，再選擇 sin、cos、tan、log 等等。

新增事件至日曆

1 在桌面點按**應用程式**標籤，然後選擇**日曆**。

2 首先，您必須建立一個 Google 帳戶，才可使用**日曆**。

3 要檢查事項，點按日期。如您希望新增事件，點按並按住事件。 再按**新事件**。

4 點按**內容**，然後輸入事件名稱。 檢查日期，並輸入事件開始及完結的時間。

5 然後點按**地點**，輸入事件的地點。

6 若要新增備註至您的事件，點按**說明**，然後輸入詳情。

7 若要重複鬧鐘，請設定重複頻率，如有需要亦可設定提示。

8 點按日曆中的**完成**以儲存事件。 日曆中所有已儲存事件的日子將以顏色方格標記。 鬧鐘將於事件的開始時間響起，讓您安排得井井有條。

更改您的預設日曆檢視模式

1 在桌面點按**應用程式**標籤，然後選擇**日曆**。 點按**功能表**鍵。

2 選擇以特定日期、星期或月份的形式檢視日曆。

ThinkFree Office

ThinkFree Office 可讓您讀取文件，並提供 Microsoft Word、Excel 和 PowerPoint 的有限編輯功能。 但您無法編輯 PDF 檔案。

1 點按並按住任何檔案，就會出現**開啟**、**上傳**、**重新命名**、**移動**、**複製**、**刪除**、傳送及**內容**選項。 可用的選項視檔案類型而定。

點按**功能表**鍵及選擇您希望的選項：

新增 - 新增文件、資料表、簡報或資料夾。

重新整理 - 重新整理數據。

分類 - 按名稱、日期或大小排序。

喜好設定 - 調整 ThinkFree Office 設定。

更新 - 更新 ThinkFree Office。

關於 - 有關 ThinkFree Office 的更多資料。

語音記錄器

使用語音備忘錄錄製語音備忘錄或其他音頻檔案。

錄製聲音或語音

1 在桌面點按應用程式標籤，然後選擇語音記錄器。

2 點按 開始錄音。

3 點按 開始錄音。

4 點按**功能表**鍵及選擇**使用作**以設定為**手機**鈴聲。

備註：點按**轉至列表**存取您的專輯。 您可聆聽已儲存的錄音。

發送錄音

1 當您完成錄音，就可點按**功能表**鍵及**共享**，以發送音頻剪輯。

2 選擇藍芽、電子郵件、Google Mail 或**訊息**。 如選擇**電子郵件**、Google Mail 和**訊息**，錄音將會新增至您編寫的訊息，然後如常地傳送。

LG Air Sync

使用這個功能表，您可以利用 LG Air Sync 帳戶，將您的 PIM 資料與手機中的其他內容進行同步。

1 點按 LG Air Sync。

2 如您並未開設 LG Air Sync 帳戶，請瀏覽 http://www.lgairsync.com 並開設帳戶。如您已開設帳戶，請輸入您的 ID 及密碼。

3 如您希望同步處理您的 PIM 數據，點按 PIM Sync。 如您希望同步處理您的內容，點按 Link Air。

- 在 PIM Sync 中，選擇您希望同步處理的項目，再點按立即同步。
- 在 Link Air 中，選擇您希望同步處理的項目，再點按立即同步。

網絡功能

瀏覽器

瀏覽器令您透過手機盡享快捷、全彩色的遊戲、音樂、新聞、體育、娛樂及更多，不論您身在何方，或正在做些甚麼。

備註：連接到這些服務和下載內容需繳交額外費用。 請向網絡供應商諮詢收費詳情。

使用選項

點按**功能表**鍵檢視選項。

新視窗 - 開啟一個新的視窗。

書簽 - 新增或顯示書簽，顯示訪問最多的網站和歷史記錄。

視窗 - 顯示所有您所開啟的視窗。

重新整理 - 點按重新整理網頁。

下一頁 - 轉至較目前頁面更後的連接頁面。 這是與**返回**鍵相反的概念，返回鍵會返回至上一頁。

更多

- **新增書簽** - 將目前網頁新增至書簽。
- **搜尋頁面** - 如您輸入了一個字母或任何字詞，將會標記您從網頁輸入的所有字母。
- **選取文字** - 點按並選擇您要複製的文字。 長按任何輸入方塊，您即可貼上文字。
- **頁面資訊** - 顯示該頁的資訊。
- **共用網頁** - 發送網頁。
- **下載** - 顯示下載記錄。
- **設定** - 設定瀏覽器設定。

提示！ 要回到之前的網頁，點按**返回**鍵。

新增和存取書簽

1 點按**功能表**鍵，再選擇**書簽**。

2 點按書簽，及在網址後輸入書簽名稱。

3 要前往書簽，只需點按書簽。 您將會連接至已加入書簽的頁面。

更改網絡瀏覽器設定

點按**功能表**鍵，然後選擇**更多 > 設定**。

設定

在桌面點按**應用程式**標籤，然後捲動，再點按**設定**。

無線及網絡

您可在此管理 Wi-Fi 和藍芽。此外，您亦可設定流動網絡和飛航模式。

飛航模式 - 設定飛航模式後，所有無線連接均會停用。

Wi-Fi - 點按以勾選：啟動 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

Wi-Fi 設定 - 讓您設定及管理無線存取點。 設定網絡通知，或新增 Wi-Fi 網絡。 從 Wi-Fi 設定屏幕訪問進階 Wi-Fi 設定屏幕。 點按**功能表**鍵並點按**進階**。

提示！ 如何取得 MAC 位址

若要在某些設有 MAC 過濾器的無線網絡建立連線，您需要把 LG-E720 手機的 MAC 位址輸入到路由器。

您可在以下用戶介面找到 MAC 位址：點按**應用程式 > 設定 > 無線網絡 > Wi-Fi 設定**，然後點按**功能表**鍵，再選擇**進階 > MAC 位址**。

MediaShare settings - 讓您可以更改裝置名稱，選擇分享的內容種類。

藍芽 - 點按以勾選：啟動藍芽以連接至藍芽裝置。

藍芽設定 - 設定裝置名稱及可找到的裝置，並掃描其他裝置。 或者，檢查您以前配置的藍芽裝置列表，以及手機最近一次掃描藍芽裝置時所偵測到的藍芽裝置。

共享網路及可攜式 Wi-Fi 熱點 - 您可以設定 USB 無線路由及可攜式 Wi-Fi 熱點。

VPN 設定 - 顯示您以前配置的虛擬專用網絡 (VPN) 列表。 允許您新增不同類型的 VPN。

流動網絡 - 設定數據漫遊、網絡模式和運營商、存取點名稱 (APN) 等等。

On-Screen 手機設定 - 讓您更改 On-Screen 手機密碼（預設密碼為「0000」）。 On Screen 手機允許您透過 USB 或藍牙連接，在電腦上檢視手機畫面。 您亦可在電腦上利用滑鼠或鍵盤，控制您的手機。

聲音

< 一般 >

靜音模式 - 允許您設定除了來自音樂和影片的音頻及您設定的鬧鐘外的所有聲音為靜音，包括電話和通知鈴聲。 （您必須要通過媒體和鬧鐘自己的應用程式來使得它們靜音。）

震動 - 允許您設定來電時手機震動。 選擇永遠、永不、僅限於靜音模式及僅限不處於靜音模式。

音量 - 允許您設定鈴聲、媒體及鬧鐘的音量。 如果您沒有勾選電話和通知使用相同音量的選項，那麼您可以分別設定它們的音量。

媒體音量 - 允許您設定音樂和影片音量。

手機鈴聲 - 允許您設定預設的來電鈴聲。

< 通知 >

通知鈴聲 - 允許您設定預設的通知鈴聲。

< 回饋 >

按鍵聲音 - 當您使用撥號鍵盤撥號時，允許您設定手機播放按鍵音。

選擇操作音 - 當您點按按鈕、圖示或者其他對您的點按作出反應的屏幕上的項目時，允許您設定您的手機播放按鍵音。

屏幕鎖定音效 - 允許您設定鎖定或解鎖屏幕時播放聲音。

觸動回饋 - 當您點按功能表鍵、**返回**鍵以及進行其他動作時，允許您設定手機輕微震動。

顯示

亮度 **- 調節屏幕亮度。**

自動旋轉屏幕 - 當您將手機橫向或直立放置時，允許您設定手機自動改變方向至橫向或直向模式。

動畫 - 當您在屏幕間導覽時，允許您設定動畫效果。

屏幕超時 - 允許您調整屏幕自動關閉前的延遲時間。 爲了使電池保持最好效能，請使用最短合宜超時。

位置及安全

< 我的位置 >

使用無線網絡 - 如勾選**使用無線網絡**，手機會借助 Wi-Fi 和流動網絡確定您大概所處的位置。

使用 GPS 衛星 - 如勾選使用 **GPS 衛星**，手機會確定您所處的位置，準確地找出您身處的街道。

< 螢幕解鎖 >

設定螢幕畫面鎖定 - 設定解鎖圖案以保護您的手機。 開啟一系列畫面，以指導您繪畫屏幕解鎖圖案。 您可以設定 PIN 或**密碼**，而不是**解鎖圖案**或者什麼都不設定。

提示！ 要使用圖案鎖定以鎖定屏幕

1 首次進行此步驟時，將會出現關於建立解鎖案圖的簡短教程。

2 系統會提示您繪製並再次繪製屬於自己的個人圖案。
下一次當您開啟手機或喚醒屏幕時，系統會提示您繪製解鎖圖案，替屏幕解鎖。

< 智能咭鎖定 >

智能咭鎖定 - 設定智能咭鎖定或更改智能咭 PIN 碼。

< 密碼 >

顯示密碼 - 選擇隨您輸入顯示密碼、或於輸入時隱藏並取消選擇。

< 裝置管理 >

選擇裝置管理員 - 新增或更多管理員。

< 憑證儲存空間 >

使用安全認證 - 勾選後允許應用程式訪問您手機的安全證書、相關密碼以及其他憑證的

加密儲存。 您可以使用憑證儲存建立某些類型的 VPN 和 Wi-Fi 連接。 如果您沒有為憑證儲存設定密碼，則該設定不可用。

從 SD 卡安裝 - 允許您從 microSD 咭安裝加密證書。

設定密碼 - 允許您為您的安全憑證儲存設定或更改密碼。 您的密碼必須不少於 8 個字符。

清除儲存空間 - 刪除所有安全證書、相關憑證，同時清除安全儲存自身的密碼。

應用程式

未知的來源 - 除了 Android Market 的應用程式，允許安裝您從網站、電子郵件或其它地方得到的應用程式。

> ⚠ **警告：**
> 要保護您的手機和個人資料，請只從受信任的來源下載應用程式，例如 Android Market。

管理應用程式 - 管理及移除已安裝的應用程式。

正在運行的服務 - 允許您檢視及控制目前正在運行的服務和應用程式。 該選項顯示每個正在運行的服務的進程及分別佔用的內存量。

開發 - 允許您設定應用程式開發選項，例如 **USB 偵錯**、**保持清醒**和**允許模擬位置**。

帳戶及同步

< 一般同步設定 >

背景數據 - 允許應用程式在背景中同步數據，而不論您是否啟動它們。 不勾選此設定會幫助節省電池電力，同時也會降低（但不會完全停止）數據利用率。

自動同步 - 允許應用程式在自己的平臺上同步、發送和接收數據。

< 管理帳戶 >

您新增到此手機上的所有 Google 帳戶和其他帳戶的列表。

如果您點按該屏幕上的某一帳戶，則該帳戶的屏幕會開啟。

隱私權

< 個人資料 >

原廠數據重新設定 - 從內部手機儲存體刪除所有您的個人資料，包括您 Google 帳戶、其它帳戶、您的系統和應用程式數據和設定、以及任何您所下載的應用程式的訊息。 重設手機並不會刪除任何您所下載的系統軟件更新，也不會刪除諸如音樂或相片等在您 microSD 咭上的檔案。 如果您用此方法重設您的手機，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

SD 卡和手機儲存體

< USB 連接模式 >

僅限大容量儲存 - 如果您插入例如一張記憶咭，您的手機就可以當做一個大容量儲存體裝置來使用。 您可以設定僅限大容量儲存為一個 USB 連接模式下的預設設定。

< SD 卡 >

檢查總空間及可用空間。 點按解除安裝 SD 卡以安全移除。 如您希望刪除 microSD咭上的所有資料，請格式化 SD 卡。 在您格式化一個 microSD 咭之前必須先解除安裝。

< 內部手機儲存體 >

檢查**可用空間**。 操作系統、各組件、應用程式（包括您所下載的應用程式）及其永久和臨時數據所佔用的內部手機儲存量。

搜尋

使用搜尋設定以設定 Google 搜尋，包括設定在手機上可搜尋的數據類型。

< 網絡 >

點按 **Google 搜尋**，可調整 Google 搜尋設定。

顯示網絡建議 - 勾選以於 Google 搜尋方格下顯示與您所輸入相關的 Google 網絡搜尋。

使用我的位置 - 當使用 Google 搜尋和其它 Google 服務時，勾選以加入自己的位置。 如勾選此選項，系統會問您是否同意允許 Google 在提供這些服務時，使用您所處的位置。

搜尋記錄 - 勾選以您的 Google 帳戶使用由 Google 網絡搜尋記錄提供的建議。

管理搜尋記錄 - 開啟網絡介面的瀏覽器，檢視及管理與您 Google 帳戶相關的網絡搜尋記錄。

< 手機 >

可搜尋的項目 - 開啟屏幕，從中勾選或取消勾選您在手機上可搜尋的數據類型。

清除捷徑 - 清除過往已選擇的搜尋結果清單，該清單會於 Google 搜尋方塊下顯示為建議。

語言及鍵盤

使用**語言和鍵盤**設定來選擇您手機文字的語言，包括您新增至字典的字詞，并配置您的屏幕鍵盤。

語音輸入和輸出

< 語音輸入 >

語音識別設定 - 使用**語音識別設定**，以設定 Android 語音輸入功能。

- **語言**：開啟屏幕，從中設定輸入文字時的發音語言。
- **SafeSearch**：開啟對話方塊，從中設定使用 Google SafeSearch 時是否希望程式過濾部份結果。
- **以語音作 Google 搜尋**：不封鎖搜尋結果（關閉）、只封鎖露骨或令人反感的圖像（中等）或封鎖露骨或令人反感的文字及圖像（嚴格）。
- **封鎖令人反感的字詞**： 取消勾選後，當您輸入文字時，Google 語音識別會辨認大部份人認為令人反感的字詞，並會發聲譯出。勾選後，語音識別於轉換時會以內有井號的括號 (#) 代替相關字詞。

< 聲控輸出 >

文字轉語音設定 - 使用**文字轉語音設定**，為可使用 Android 文字轉語音合成器的應用程式設定此功能。

備註：如果您沒有安裝語音合成數據，那麼只有**安裝語音數據項**可設定。

- **聆聽範例**：使用您的現有設定，播放語音合成器的簡短範例。

- **始終使用我的設定**：檢查使用此屏幕的設定，以代替其他應用程式內可選用的語音合成設定。
- **預設引擎**：開啟對話方塊，從中設定您想使用的文字轉語音應用程式（如有兩個或以上的應用程式。）
- **安裝語音數據**：如果手機沒有安裝語音合成數據，連接至 Android Market，系統會指導您下載及安裝數據。 如已安裝數據，則無法選擇此設定。
- **語速速率**：開啟對話方塊，從中選擇合成器發聲的速度。
- **語言**：開啟對話方塊，從中選擇合成器所讀取的文字語言。 配合**始終使用我的設定**使用尤其實用，能確保在不同應用程式內也能正確讀出文字。
- **Pico TTS**：設定 Pico TTS 設定。

可存取性

您可使用**可存取性**設定，以設定任何已安裝到手機的可存取性外掛程式。

備註：需要額外外掛程式，才可選擇此選項。

日期及時間

使用**日期和時間**設定以設置您所希望的日期顯示方式的標準。 您還可以使用這些設定來設置您自己的時間和時區，而不只是從流動網絡獲得當前時間。

關於手機

檢視法律資訊，檢查手機狀態和軟件版本。

Wi-Fi

使用 Wi-Fi，您可以在無線接入點 (AP) 範圍內高速訪問互聯網。

您可以使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。

開啟 Wi-Fi

從桌面開啟通告欄，然後點按 以開啟。

您也可點按**應用程式 > 設定 > 無線及網絡**，然後開啟 **Wi-Fi**。

連接至 Wi-Fi

選擇要連接的 Wi-Fi 網絡。如果看到 ，則需要輸入密碼以連接。

備註：

- 如果處於 Wi-Fi 範圍以外並選擇 3G 連接，則可能需額外收費。
- 如果手機進入休眠模式，即使在連接至 Wi-Fi 時，也會自動停用 Wi-Fi 連接。 在此情況下，如果您的手機已存取 3G 數據，則可能會自動連接至 3G 網絡，並會收取額外費用。）
- LG-E720 支援 WEP、WPA/WPA2-PSK 及 802.1x EAP。 安全。 如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。 如沒有設定加密，彈出視窗則不會出現。 您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

共享手機的流動數據連接。

您可以透過 USB 線：USB 共享網絡與單一電腦共享手機的流動數據連接。 您可將手機切換成可攜式 Wi-Fi 熱點，同時與最多 5 部裝置共享手機的數據連接。

當手機正共享數據連接，狀態列會顯示圖示，而通告欄內也會顯示進行中的通告。

圖示	說明
	USB 共享網絡已啟動
	可攜式 Wi-Fi 熱點已啟動
	USB 共享網絡及可攜式 Wi-Fi 熱點已啟動

有關共享網絡及可攜式熱點的最新資訊，包括受支援的操作系統及其他詳情，請瀏覽 http://www.android.com/tether。

注意：連接及使用網上服務可能需要額外付費。 請向網絡提供商咨詢資料費用。

USB 共享網絡及可攜式 Wi-Fi 熱點設定

1 在桌面點按**應用程式**標籤，然後選擇**設定**。

2 點按無線及網絡並選擇共享網絡及可攜式 Wi-Fi 熱點。

3 選擇您想調整的選項。

USB 共享網絡 - 勾選以透過 USB 連接與電腦共享手機的網絡數據連接。

可攜式 Wi-Fi 熱點 - 勾選以可攜式 Wi-Fi 熱點的形式共享手機的網絡數據連接。

說明 - 開啟載有 USB 共享網絡及可攜式 Wi-Fi 熱點資料的對話方塊，並取得更多資料的詳情。

要透過 USB 共享手機的數據連接

如果您的電腦運行 Windows 7 或近期推出的 Linux 系統（如 Ubuntu），則基本上不需要為共享而設定電腦。 但如果電腦正運行較早期的 Windows 版本或其他操作系統，則可能需要透過 USB 建立網絡連接。 有關支援 USB 共享網絡的操作系統及其設定方式的最新資訊，請瀏覽 http://www.android.com/tether。

共享網絡及數據共享

無法同時透過 USB 共享手機的數據連接及 microSD 咭。 如果您正透過 USB 將 microSD 咭連接至電腦上，則必須先中斷連接。

1 使用附手機附上的 USB 線，將手機連接至電腦。

2 在桌面點按**應用程式**標籤，然後選擇**設定**。

3 點按無線及網絡並選擇共享網絡及可攜式 Wi-Fi 熱點。

4 勾選 **USB 共享網絡**。

- 手機會開始透過 USB 連接與電腦共享流動網絡數據連接。 進行中的通告 會加入至狀態列及通告欄內。

5 取消勾選**USB 共享網絡**，以停止共享數據連接。 您也可斷開 USB 線的連接。

備註：使用 USB 共享網絡期間，手機只可連接至 3G 網絡。 在 USB 共享網絡的狀態下，Wi-Fi 網絡連接將會關閉。

要將手機的數據連接以可攜式熱點的形式分享

1 在桌面點按**應用程式**標籤，然後選擇**設定**。
2 點按無線及網絡並選擇共享網絡及可攜式 Wi-Fi 熱點。
3 勾選**可攜式 Wi-Fi 熱點**。
- 手機將會開始廣播 Wi-Fi 網絡名稱 (SSID)，您可以將手機連接至最多 5 台電腦或其他裝置。 進行中的通告 會加入至狀態列及通告欄內。
- 勾選**可攜式 Wi-Fi 熱點**後，您可更改其網絡名稱或保護 Wi-Fi 網絡。

4 取消勾選**可攜式 Wi-Fi 熱點**以停止透過 Wi-Fi 共享數據連接。

要重新命名或保護可攜式熱點

您可以更改手機 Wi-Fi 網絡名稱 (SSID)，並保護手機的 Wi-Fi 網絡。

1 在桌面點按**應用程式**標籤，然後選擇**設定**。
2 點按無線及網絡並選擇共享網絡及可攜式 Wi-Fi 熱點。
3 確保以選擇**可攜式 Wi-Fi 熱點**。
4 點按**可攜式 Wi-Fi 熱點設定**。
5 點按**設定 Wi-Fi 熱點**。
- **設定 Wi-Fi 熱點**對話方塊開啟。
- 您可以更改當掃描 Wi-Fi 網絡時其他電腦所看見的網絡 SSID（名稱）。
- 您也可以點按**安全**功能表，以預先共用的金鑰 (PSK) 設定 Wi-Fi 受保護存取 2 (WPA2) 的網絡。
- 如果您點按 **WPA2 PSK** 安全選擇，密碼欄位會加入至**設定 Wi-Fi 熱點**的對話方塊內。 如果您輸入密碼，使用電腦或其他裝置

連接至手機的熱點時則需要輸入該密碼。 或點按**安全**功能表內的**開啟**，從 Wi-Fi 網絡移除安全性。

注意！

如果您將安全選項設定為**開啟**，則無法防止其他人士在未經授權的情況下使用網上服務，並可能產生額外收費。 要避免未經授權的使用，您應該保留此安全選項。

6 點按**儲存**。

如何使用 On-Screen 手機

On-Screen 手機讓您透過 USB 或藍牙連接從電腦裡檢視手機屏幕。 您亦可在電腦上利用滑鼠或鍵盤，控制您的手機。

On-Screen 手機圖示

連接或斷開電腦與手機的連接。

旋轉 On-Screen 手機視窗（只適用於支援旋轉的應用程式）。

更改 On-Screen 手機偏好設定。

結束 On-Screen 手機程式。

將 On-Screen 手機視窗最小化。

On-Screen 手機功能

- 即時傳送及控制：連接至電腦時，顯示並控制您的手機屏幕。
- 滑鼠操控：讓您在電腦屏幕上使用滑鼠拖動並點按，以控制您的手機。
- 使用鍵盤輸入文字：讓您使用電腦鍵盤編寫文字訊息或備註。
- 檔案傳送（由手機至電腦）：從手機將檔案（如相片、影片、音樂及 ThinkFree Office 檔案）傳送至電腦內。 只須按滑鼠右鍵，並將檔案拖動至您的電腦內。
- 檔案傳送（由電腦至手機）：從電腦將檔案傳送至手機內。 只須選擇您想傳送的檔案，然後拖放至 On-Screen 手機視窗內。 您傳送的檔案會儲存在 micro SD 咭內。

- 即時事件通知：如有，顯示彈出視窗，就任何來電或文字/多媒體訊息、鬧鐘及事件通知向您發出提示通知。

如何在電腦上安裝 On-Screen 手機

瀏覽 LG 主頁 (http://www.lg.com)，前往**支援 > 手機支援 > 下載 LG 手機支援工具**至電腦。 如果您下載 LG PC Suite IV，On-Screen 手機程式也會一同下載至您的電腦內。 然後您可於電腦上安裝 On-Screen 手機。

如何將手機連接至電腦

USB 連接：

1 開啟連接精靈，選擇「USB 線連接」，然後按「下一頁」。
2 使用 USB 線連將手機接至電腦，然後按「下一頁」。
3 輸入 On-Screen 手機密碼，然後按「下一頁」。 預設密碼為「0000」。 您可在**設定 > 無線網絡 > On-Screen 手機設定**更改密碼。
4 按「OK」結束視窗。

使用藍芽無線連接：

1 在手機上，前往設定 > 無線網絡 > 藍芽設定。 選擇開啟藍芽並按可偵測的裝置。
2 如果您曾使用纜線連接，執行新連接精靈以建立新連接。
3 在電腦上執行連接精靈，選擇「藍芽連接」，再選擇「下一頁」。
4 精靈會開始搜尋已啟用藍芽的手機。
5 從裝置清單選擇「LG-E720」，然後按「下一頁」。 您可以為裝置重新命名。
6 輸入 PIN 碼（如「0000」），然後按「下一頁」。
7 在手機上，接受要求並輸入相同 PIN 碼，再點按「確定」。
8 輸入 On-Screen 手機密碼，然後按「下一頁」（預設密碼為「0000」）。
9 點按「確定」結束。

要檢查手機至電腦連接

只要已連接裝置，向下拖動桌面上方的通知列，以檢查 On-Screen 手機的連接狀態。

要斷開電腦與手機的連接

點按桌面左上方的 。向下拖動桌面上方的通知列，然後選擇「中斷連接」。

備註：關閉 On-Screen 手機服務後，必須重新開啟手機。

軟件更新

手機軟件更新

從互聯網更新 LG 手機軟件

更多有關此功能的資訊，請瀏覽 http://update.lgmobile.com 或 http://www.lg.com/common/index.jsp → 選擇國家及語言。

有了這項功能，您無須親臨服務中心，就可透過互聯網將手機韌體更新為最新版本，十分方便。

手機韌體更新要求使用者密切注意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。 請注意，更新期間若移除 USB 數據線或電池，有可能對手機造成嚴重損害。

透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，也能輕鬆透過 OTA 更新手機的軟件至最新版本。

首先，您可以使用手機檢查軟件版本：**設定 > 關於手機 > 軟件更新 > 軟件更新檢查**。

您也可於更新前 1 小時、4 小時、8 小時或 24 小時重新安排更新日程表。 在此情況下，時間已到時，應用程式會通知您進行更新。 您也可以手動進行重新安排或更新。

DivX 手機 DIVX

關於 DIVX 影片：DivX® 數碼影片格式由 DivX, Inc 建立，是播放 DivX 影片的官方 DivX Certified® 裝置。 要取得詳情以及將檔案轉換為 DivX 影片的軟件工具，請瀏覽 www.divx.com。

關於 DIVX VIDEO-ON-DEMAND：這個 DivX Certified® 裝置必須先註冊，才可播放已購買的 DivX Video-on-Demand (VOD) 電影。 若要取得註冊編碼，請在您的裝置設定功能表找出 DivX VOD 部分。 前往 vod.divx.com 以獲取有關如何完成註冊的更多資訊。

DivX Certified® 最多可播放 320 x 240 的 DivX® 影片。

DivX®、DivX Certified® 及相關標誌是 DivX, Inc. 的商標並經授權下使用。

配件

該等配件適合配合 LG-E720 使用。
（下述配件並非必要。）

充電器

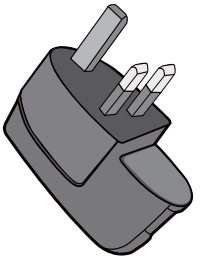

數據線

連接您的 LG-E720 至電腦。

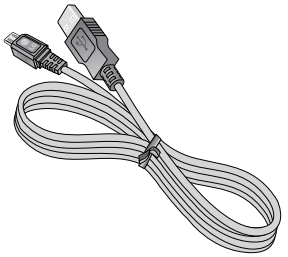

電池

使用手冊

瞭解有關 LG-E720 的更多資訊。

立體聲耳機

備註：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保固可能失效。
- 配件可能會視乎不同地區而有所不同。

技術數據

環境溫度

最高：+55°C（放電）+45°C（充電）

最低：-10°C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-E720

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1 , EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2006

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declarat ion relates complies with the above mentioned standards and Directives

LG Electronics Inc. - EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name	Issued Date
Doo Haeng Lee / Director	October. 04 , 2010

Signature of representative

疑難排解

本章會列出一些使用手機時可能遇上的問題。 您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行解決。

訊息	可能起因	合理的修正措施
智能咭錯誤	手機內無智能咭，或不正確地插入智能咭。	確保已正確地插入智能咭。
無網絡連接/失去網絡	網絡範圍外訊號弱 網絡商套用新服務	移近窗邊或移至空曠地方。 檢查網絡供應商的覆蓋範圍。 檢查智能咭是否舊於 6 至 12 個月。 如果是這種情況，請前往網絡供應商的辦事處更換您的智能咭。
密碼不正確	要更改安全密碼，您需要再次輸入以確認新的安全密碼。 您所輸入的兩個密碼並不相符。	預設的手機密碼為 [0000]。 如您忘記密碼，請聯絡您的服務供應商。
無法設定無任何應用程式	服務供應商不支援此功能，或需要註冊使用此功能	請聯絡您的服務供應商。

訊息	可能起因	合理的修正措施
無法撥打電話	撥號錯誤	新網絡未獲受權。
	新智能咭已插入	請檢查新的限制。
	已達預付費用上限	聯絡您的服務供應商，或使用 PIN 2 重設限額。
手機無法啟動	按下開啟/關閉鍵的時間太長。	按下開啟/關閉鍵至少兩秒。
	電池並無充電	替電池充電更長時間　清潔接觸面。
	電池接觸面骯髒	取出電池並重新插入。
充電錯誤	電池並無充電。	替電池充電。
	外界溫度太高或太低	確保於正常溫度下為手機充電。
	接觸不良	檢查充電器是否正常，以及是否正確地連接電源至手機。 檢查電池接觸點，如有髒污則需清潔。
	無電壓	插入不同插座內。
	充電器故障	如充電器沒有變暖，則需更換充電器。
	不正確的充電器；電池故障	請只使用原裝 LG 配件。 更換新電池。
不允許撥打號碼	固定撥號號碼功能已開啟。	請檢查設定。

疑難排解

訊息	可能起因	合理的修正措施
無法接收/發送文字訊息和圖片	記憶體已滿	刪除手機上的部份訊息
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式
SD 咭無法運作	只支援 FAT 16 檔案系統	透過讀咭器檢查 SD 咭檔案系統或使用手機將 SD 咭格式化
接收來電時，屏幕並無開啟。	距離感應器問題	如果您使用任何保護貼或保護套，檢查該等配件有否掩蓋距離感應器附近的範圍。 確保距離感應器附近並無任何障礙物。
無聲音	震動或靜音模式	檢查聲音功能表的設定狀態，確保您並非使用震動或靜音模式。
掛線或凍結	軟件間歇性問題	取出電池並重新插入。 開啟手機。 透過 WEB 網站嘗試進行軟件更新。

安全及有效使用準則

請讀取以下簡易的使用規則。 違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。

本型號手機 LG-E720 之設計符合適用的無線電波暴露安全要求。 這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。 SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制為平均 10 克組織 2 瓦/千克。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.52 瓦/千克（10 克），攜帶於身上時則為 1.49 瓦/千克（10 克）。

產品保護及維護

⚠ 警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。 使用其他種類的配件可能會導致手機的認可或保固失效，並可能引致危險。

- 請勿拆開此裝置。 如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保固期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能是新亦可能是返修的，但其功能與被更換的部件相同。

- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。 例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手操作充電中的手機。 這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。 如非必要，請勿觸及天線。

有效地操作手機

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。 避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，則請使用。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車設有安全氣袋，切勿讓已安裝的無線設備或手提無線設備阻擋氣袋。 這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人員傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。 這在馬路旁邊時尤爲必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。 所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。 我們亦建議將音樂及通話音量設定至合適水平。

注意：來自耳機的過度噪音和壓力可導致聽力損失。

玻璃部件

您的手機的某些部件以玻璃製造。 如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。 如玻璃破裂，請勿接觸或嘗試移除碎片。 請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

爆破地區

請勿在進行爆破時使用手機。 請嚴格遵守相關限制、規定或條例。

安全及有效使用準則

潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用手機。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。 手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

緊急電話可能在某些流動網絡中不能發出。 因此，您不應僅倚賴手機作為緊急通話的方式。 請向您本地的服務供應商查詢。

電池資訊及保護

- 充電前，您無須完全放電。 跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 請只使用 LG 電池及充電器。 LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。 電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。

- 請根據製造商的指示來處理廢棄電池。 請盡量回收利用。 請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

LG-E720 用户手册 - 简体中文

恭喜您购买此款功能先进、外观小巧的 LG-E720 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

- 本手册中的部分内容可能不适用于您的手机，具体视您手机的软件或服务提供商而定。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2010 LG Electronics, Inc。保留所有权利。 LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Google Maps™、Gmail™、YouTube™、Google Talk™ 和 Android Market™ 是 Google, Inc. 的商标。

目录

重要注意事项.....5

开始了解您的手机.....12

安装 SIM 卡和电池.....14
充电.....15
安装存储卡.....15
格式化存储卡.....16

主屏.....18

触摸屏提示.....18
近程传感器.....18
锁定手机.....18
解锁屏幕.....19
静音模式.....19
本地中心.....19
将小工具添加到主屏.....20
返回到最近使用的应用程序.....20
通知抽屉.....20
查看状态栏.....21
屏上键盘.....22
使用键盘并输入文本.....22
XT9 预测模式.....23
Abc 模式.....23
123 模式.....23
输入带注音的字母.....23
示例.....23

Google 帐户设置.....24

创建 Google 帐户.....24
登录 Google 帐户.....24

通话.....26

拨打电话.....26
呼叫联系人.....26
接听和拒绝电话.....26
调节音量.....26
拨打第二个电话.....27
查看通话记录.....27
通话设置.....27

联系人.....29

搜索联系人.....29
添加新联系人.....29
收藏夹联系人.....29

信息/电子邮件.....30

信息.....30
发送信息.....30
更改信息设置.....30
打开您的电子邮件.....32
读取您的邮件.....32
回邮件.....32
为邮件添加星标.....33
撰写和发送电子邮件.....33
使用帐户文件夹.....34

添加或编辑电子邮件帐户.....34
社交网络 34
将您的帐户添加到手机.34
查看和更新状态 35
在手机上删除帐户.....35

相机.....36
了解取景器 36
使用对焦模式.....37
快速拍照 37
拍照后.....37
使用高级设置.....38
查看保存的照片 39

摄像机.....40
了解取景器 40
快速摄像.....41
拍摄视频后 41
使用高级设置.....41
观看保存的视频.....42
观看视频时调节音量 42

照片和视频 43
编辑照片 43

多媒体.....44
更改相册内容显示的方式.....44
发送照片 44
发送视频.....44
音乐 45
播放歌曲.....45
使用收音机 45
搜索电台.....45
重置频道.....46
收听收音机 46
使用 USB 海量存储设备传输文件.....46
如何将音乐/视频文件保存到手机.....47
如何将联系人从旧手机移到当前手机 47
如何通过蓝牙从手机发送数据 48

Google 应用程序.....50
Google Maps™.....50
Market™ 50
Google Mail™ 51
Google Talk™ 51

实用工具.....52
设置闹钟.....52
使用计算器 52
将事件添加到日历中 52
更改日历视图 53
ThinkFree Office.....53
录音机.....53

目录

录制声音或语音.....53
发送录音.....53
LG Air Sync.....54

网络.....55
浏览器.....55
使用选项.....55
添加并访问书签.....55
更改网络浏览器设置.....55

设置.....56
无线控件.....56
声音.....57
显示.....57
安全性和位置.....58
应用程序.....59
数据同步.....59
隐私.....59
SD 卡和手机存储器.....60
搜索.....60
区域和文本.....61
语音输入与输出.....61
可访问性.....62
日期和时间.....62
关于手机.....62
Wi-Fi.....62
连接到 Wi-Fi.....62
共享您手机的移动数据连接.....63
USB 绑定和便携式 Wi-Fi 热点设置.....63
通过 USB 共享您手机的数据连接.....64
USB 绑定和数据共享.....64
将手机的数据连接共享为便携式 Wi-Fi 热点.....64
重命名或确保您的便携式热点安全.....65
如何使用屏幕手机.....66
屏幕手机图标.....66
屏幕手机功能.....66
如果在电脑上安装屏幕手机.....66
如何将手机连接至电脑.66
检查手机到电脑的连接 67
断开手机与电脑的连接.67

软件更新.....68
手机软件更新.....68
DivX 移动.....68

配件.....69

技术参数.....70

故障排除.....71

关于安全有效使用手机的准则.....74

重要注意事项

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

1. 手机内存

当手机内存的可用空间小于 10% 时，您的手机无法收到新信息。 您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

管理应用程序：

1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 应用程序 > 管理应用程序**。

2 当所有应用程序显示时，请滚动并选择要卸载的应用程序。

3 轻触**卸载**，然后点触“确定”以卸载所需应用程序。

2. 优化电池寿命

您可以通过禁用无需在后台持续运行的功能来延长电池的使用寿命。 您也可以监控应用程序和系统资源如何节省电池电量。

延长电池使用寿命：

- 关闭未使用的无线电通讯。 如果不使用 Wi-Fi、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕超时。
- 关闭 Google Mail、日历、联系人及其他应用程序的自动同步。
- 您下载的一些应用程序可能会缩短电池的使用寿命。

检查电池电量水平：

1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 关于手机 > 状态**。

2 电池状态（充电、放电）和电量（完全充电的百分比）显示在屏幕顶部。

监视并控制使用电池的项目：

1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 关于手机 > 电池使用**。

2 屏幕顶部显示电池使用时间。 自上次连接到电源的时间，或者连接到电源后在电池电源上运行的时间。 屏幕上列出了使用

电池电源的应用程序或服务，从最大量到最小量。

3. 安装开放源操作系统

如果在手机上安装开放源操作系统，而不使用制造商提供的操作系统，则可能导致手机无法正常工作。

⚠ 警告
如果安装并使用非制造商提供的操作系统，您的手机不再享受保修。

⚠ 警告
为保护您的手机和个人数据，请只从信任的来源（如 Android Market）下载应用程序。 如果手机上的一些应用程序未正确安装，您的手机可能无法正常工作，甚至发生严重错误。 您需要从手机中卸载那些应用程序及其所有数据和设置。

4. 使用解锁图样

设置保护手机的解锁图样。打开一组屏幕，它们可指导您绘制屏幕解锁图样。

⚠ 警告
使用图样锁定时应采取预防措施。
请务必记住您设置的解锁图样。 如果有 5 次使用不正确的图样，您将无法访问您的手机。 您有 5 次机会输入解锁图样、PIN 或密码。 如果使用了所有 5 次机会，则可以在 30 秒后尝试输入。

在无法调用解锁图样、PIN 码或密码时：

如果您在手机上登录 Google 帐户并尝试使用图样 5 次均失败，请轻触“忘记图样”按钮。 随后，您要使用您的 Google 帐户登录以将手机解锁。

如果未在手机上创建 Google 帐户或者忘记了该帐户，则需要执行恢复出厂设置。

5. 使用安全模式和硬重置

***使用安全模式**

从手机的故障状态恢复：

1 关闭手机并重新启动。手机重新开始时，请在

Android 徽标显示时按住**菜单**键。 您的手机将完全启动到主屏幕，并在左下角显示“安全模式”。

2 选择**设置 > 应用程序 > 管理应用程序**，选择应用程序，然后选择**卸载**图标。

3 卸载应用程序后，请关闭然后重新启动手机。

*** 使用硬重置（恢复出厂设置）**

如果未恢复到原始条件，请使用**硬重置**初始化手机。

同时按住**电源 + 音量调高 + 音量调低**键（超过 10 秒），手机将打开并立即执行出厂设置。

请注意，执行**硬重置**后，手机上的所有数据和应用程序将被清除，且无法恢复。

> ⚠ **警告**
> 如果执行**硬重置**，所有用户应用程序和用户数据将被删除。 在执行**硬重置**之前，请记得备份任何重要数据。

6. 连接 Wi-Fi 网络

要在手机上使用 Wi-Fi，您可以访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。 其他接入点处于隐藏状态或实施其他安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 Wi-Fi，以延长电池使用寿命。

打开 Wi-Fi 并连接 Wi-Fi 网络：

1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 无线和网络 > Wi-Fi 设置**。

2 点触 **Wi-Fi** 将其打开，开始扫描可用的 Wi-Fi 网络。

- 将显示可用的 Wi-Fi 网络列表。 锁图标表示受到安全保护的网络。

3 点触某个网络进行连接。

- 如果网络已打开，您会收到提示，要求您点触**连接**确认连接到该网络。
- 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据。（请咨询网络管理员获取详细信息。）

4 状态栏显示了可指明 Wi-Fi 状态的图标。

重要注意事项

7. 使用 microSD 卡

图片以及音乐和视频文件只能保存到外部存储器。

使用内置相机之前，您需要先将 micro SD 存储卡插入手机中。

不插入存储卡，您将无法保存所拍摄的照片和视频。

备注：应用程序只能保存到手机的内部存储器。

> **⚠ 警告**
> 请勿在手机开机时插入或取出存储卡。 否则，可能损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。 要安全地取出存储卡，请选择**应用程序 > 设置 > SD 卡和手机存储器 > 取消安装 SD 卡。**

8. 打开和切换应用程序

Android 可轻松地运行多任务，因为即使您打开另一应用程序，当前打开的应用程序也会保持运行状态。 打开其他应用程序之前无需退出当前应用程序。 使用多个打开的应用程序，并在这些应用程序之间切换。 Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

停止使用的应用程序

1 在主屏上，点触**应用程序**选项卡，然后选择**设置 > 应用程序 > 管理应用程序**。

2 滚动到所需应用程序，然后点触**强制停止**以停止使用该应用程序。

提示！

返回到最近使用的应用程序

按住**主屏**键，随后将显示屏幕，列出您最近使用的应用程序。

9. 在电脑上安装 LG PC 套件

要通过 USB 数据线同步手机与电脑，您需要在电脑上安装 LG PC 套件程序。

您可以从 LG 网站 (http://www.lg.com) 下载此程序。 转到 http://www.lg.com 并选择您的地区、国家和语言。 有关安装和使用程序的更多信息，请访问 LG 网站。

PC 套件包含在盒装 SD 卡中。 您只可以将它复制到电脑。

LG PC 套件

LG PC Suite IV 是一种可帮助您使用 USB 数据通信电缆将手机连接到电脑，以便在 PC 上使用手机的功能的程序。

LG PC Suite IV 的主要功能

- 方便地创建、编辑和删除手机数据
- 从电脑或手机同步数据（联系人、日历/信息（短信）、书签、通话记录）
- 使用简单的拖放操作在电脑和手机之间方便地传输多媒体文件（照片、视频和音乐）
- 将信息从手机传输到电脑
- 将手机用作调制解调器
- 软件更新而不丢失任何数据

LG-E720 不支持：

- 通过蓝牙连接电脑
- 日历中的待办事项
- 备忘录
- Java 应用程序

有关详细信息，请参阅安装 LG PC Suite IV 后，“帮助”菜单中提供的 LG PC Suite IV 用户指南。

通过 microSD 存储卡安装 LG PC 套件

1 将 microSD 存储卡插入手机。（存储卡可能已插入手机。）

2 连接 USB 数据线之前，请确保手机已启用**仅海量存储**模式。（在**应用程序**选项卡上选择**设置 > SD 卡和手机存储器**，然后选择**仅海量存储**复选框。）

3 使用 USB 数据线将手机连接到电脑。

(1) 在状态栏中，拖动 USB 图标。

(2) 选择 **USB 已连接**和**安装**。

(3) 您可以在电脑中查看批量储存内容，然后传输文件。

(4) 将海量存储上的“LGPCSuiteIV”文件夹复制到电脑。

(5) 运行电脑上的“LGInstaller.exe”文件，然后按说明执行操作。

* LG PCSuite IV 安装完成后，禁用**仅海量存储**模式以运行 LG PCSuite IV。

备注：请不要移除或删除存储卡上安装的任何其他程序文件，否则可能损坏手机上预安装的应用程序。

10. 通过 USB 将手机连接到计算机

使用 USB 设备传输文件：

1 在手机上安装 microSD 卡。（存储卡可能已插入手机。）

2 连接 USB 数据线之前，请确保手机已启用**仅海量存储**模式。（在**应用程序**选项卡上选择**设置 > SD 卡和手机存储器**，然后选择**仅海量存储**复选框。）

3 使用手机附带的 USB 数据线将手机连接到计算机上的 USB 端口。 您将收到一则通知，告知您 USB 已连接。

4 打开通知抽屉，并点触**USB 已连接**。

5 点触**安装**以确认在手机的 microSD 卡和计算机之间传输文件。

当手机作为 USB 存储器进行连接时，您会收到一则通知。 您手机的 microSD 卡已安装为计算机的驱动器。现在，您可以将文件复制到 microSD 卡，也可以从 microSD 卡中复制文件。

备注：卸载 PC Suite IV 时，不会自动删除 USB 和蓝牙驱动程序。 因此，它们必须手动卸载。

提示！ 要再次在手机上使用 microSD 卡，您需要打开通知抽屉，然后点触**关闭 USB 存储。**

在此期间，无法从手机访问 microSD 卡，因此也不能使用依赖 microSD 卡的应用程序（如相机、图片库和音乐功能）。

要断开手机与计算机的连接，请仔细按照计算机的说明正确地断开 USB 设备的连接，从而避免丢失卡上的信息。

1 安全地断开计算机上的 USB 设备。

2 打开通知抽屉，并点触**关闭 USB 存储设备**。

3 在打开的对话框中点触**关闭**。

11. 使用数据连接时的解锁屏幕

使用数据连接时，如果您一段时间内未触摸屏幕，则屏幕将变黑。 要打开 LCD 屏幕，点触即可。

12. 不要在电脑开机/关机时连接手机

确保经数据电缆断开手机和电脑的连接，因为它可能在电脑上有错误。

13. 向上持握手机

请将手机像普通电话一样向上持握。LG-E720 有内置天线。 请注意不要刮伤或损坏此背面区域，否则会导致性能损失。拨打/接听电话或发送/接收数据时，尽量避免持握天线所处的手机下部。 这可能影响通话质量。

14. 屏幕冻结时

如果手机对用户输入无响应或者屏幕冻结：

卸下电池，将它再次插入并将手机开机。 如果这仍不起作用，请联系服务中心。

开始了解您的手机

要将手机开机，请按住**电源键** 3 秒。
要将手机关闭，请按住**电源键** 3 秒，然后点触关机。

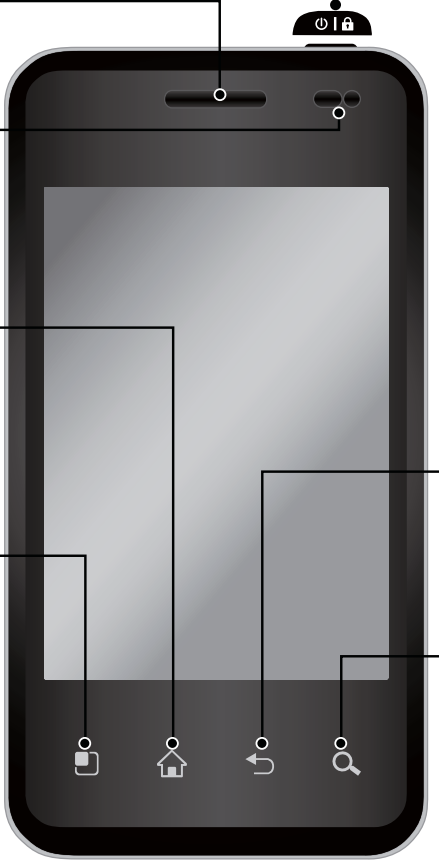

听筒

近程传感器

电源/锁定键
按住该键可关闭或打开手机。
关闭屏幕和锁定。

主屏键
从任何屏幕返回到主屏。

菜单键
检查可用的选项。

返回键
返回上一个屏幕。

搜索键
在手机中搜索网络和内容。

⚠ 警告

在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。
不要在 LCD 的进程传感器上使用保护膜。 这可能会影响传感器的感应度。

提示！当您轻触应用程序以检查可用选项时，请点触 **菜单**。
提示！ 如果 LG-E720 在使用时有错误或者您无法将它开机，请卸下电源，再次安装电池，并在 5 秒后将手机开机。
备注：LG-E720 不支持视频通话。

立体声耳机连接器

电源/锁定键

充电器，微 USB 数据线接口

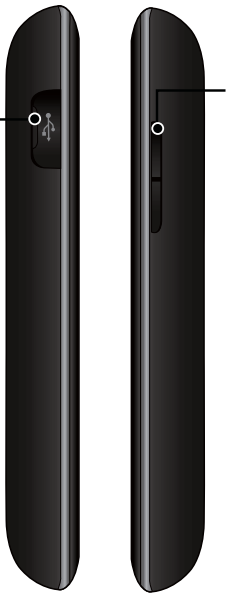

音量键

在主屏上：控制铃声音量。

- 在通话过程中：控制听筒音量。
- 播放曲目时：连续控制音量。

后盖

相机镜头

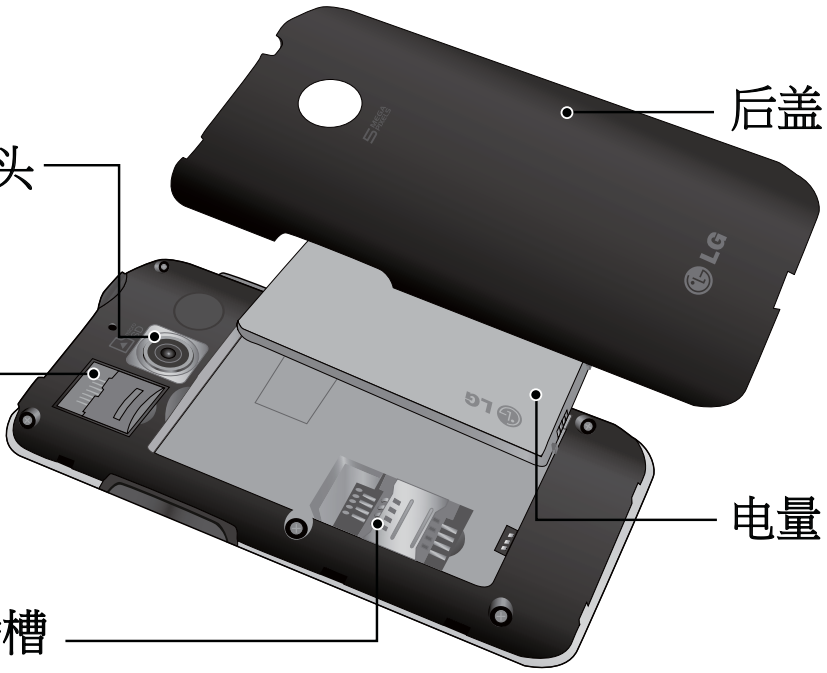

microSD 存储卡插槽

电量

SIM 卡插槽

开始了解您的手机

安装 SIM 卡和电池

在开始浏览新手机之前，您需要先进行设置。 插入 SIM 卡和电池：

1 要卸下后盖，请用手抓紧手机。 用另一只手的拇指用力按后盖。 然后用食指将电池盖滑出。

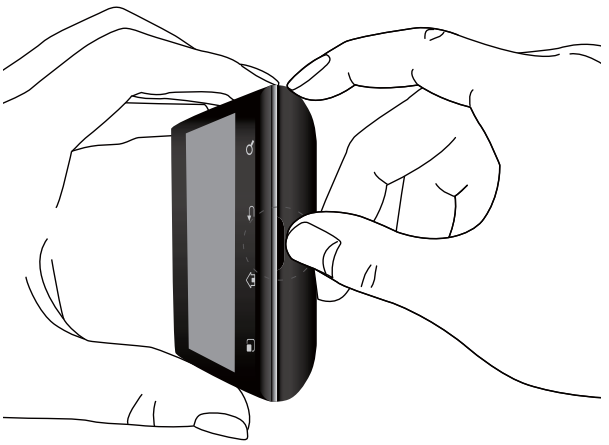

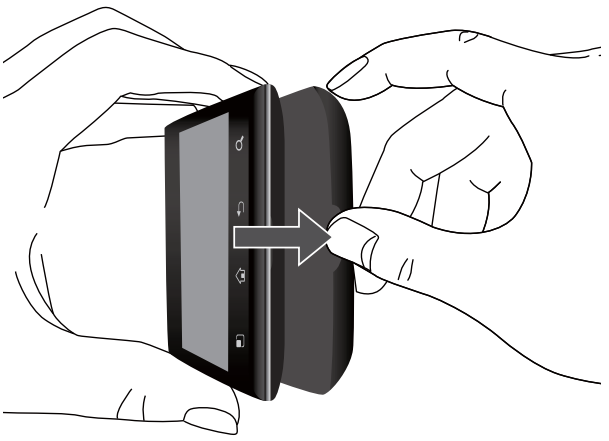

2 将 SIM 卡滑进 SIM 卡弹夹中。 确保卡的金色接触区域面朝下。

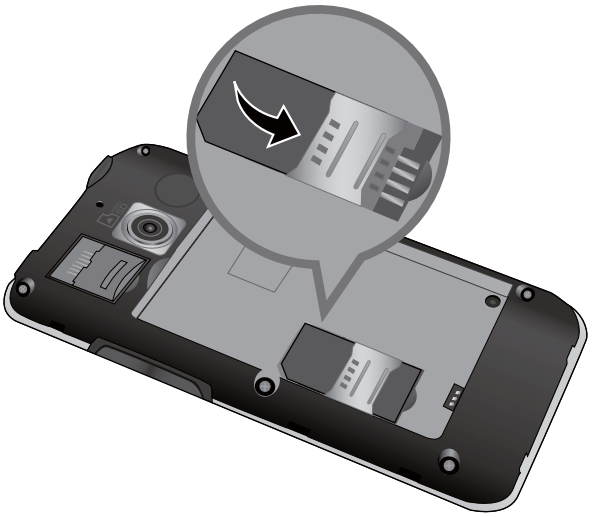

3 对齐手机和电池上的金色接触区域以插入电池。

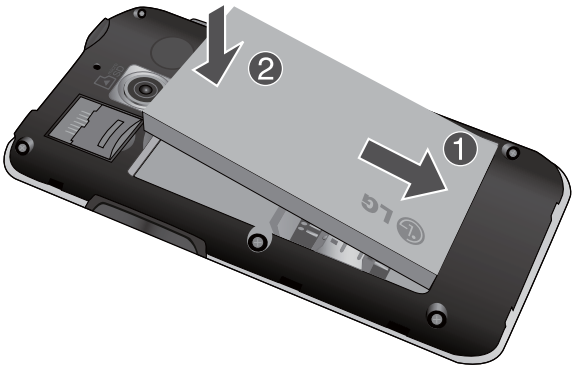

4 盖上手机的后盖。

充电

滑开 LG-E720 侧面的充电器连接器盖。 插入充电器并插入电流插座。 必须为 LG-E720 充电，直至看到 。

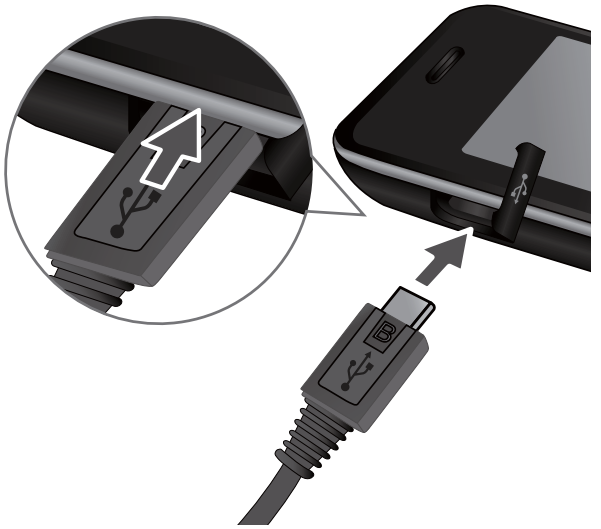

备注：第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。

安装存储卡

要使用内置相机存储多媒体文件（如拍摄的照片），您必须在手机中插入存储卡。

备注：LG-E720 最大支持 32GB 存储卡。

插入存储卡：

1 关闭手机，然后插入或取出存储卡。 卸下后盖。

2 打开插槽保护，并将存储卡插入到插槽中。 确保金色接触区域面朝下。

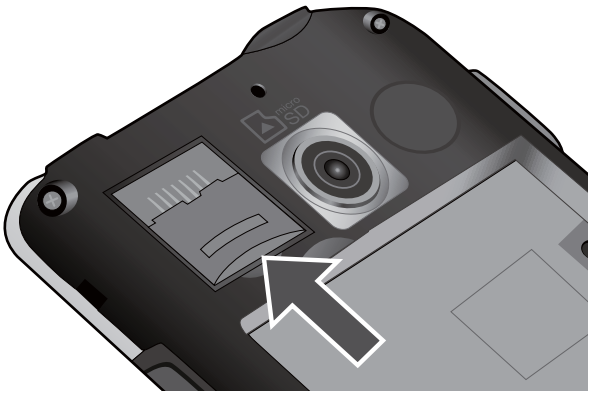

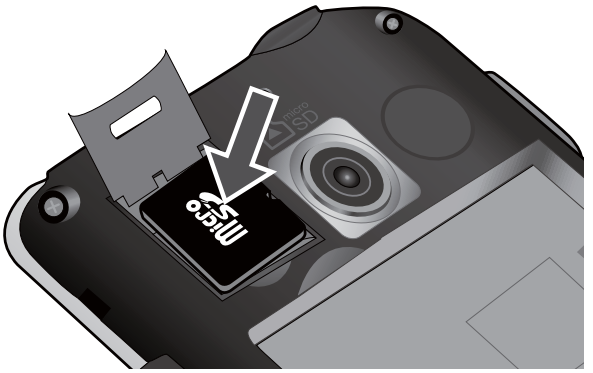

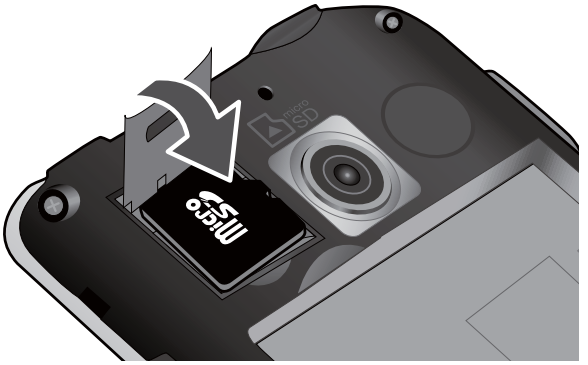

3 关闭插槽保护。

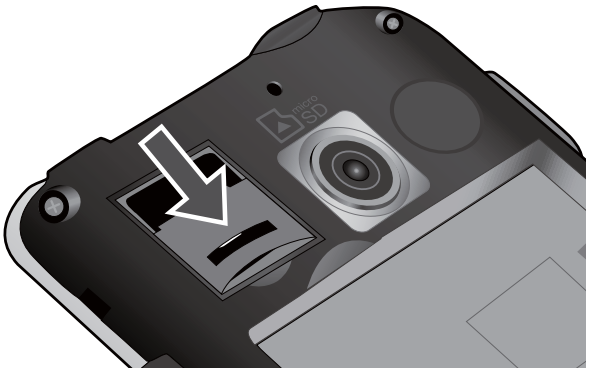

⚠ 警告
请勿在手机开机时插入或取出存储卡。 否则，可能损坏存储卡以及手机，并且存储卡上存储的数据也可能会损坏。

格式化存储卡

如果已格式化存储卡，您可以开始使用。 如果没有，您必须先对其进行格式化才能使用。

备注：格式化卡时，卡上的所有文件将被删除。

1 在主屏上，点触**应用程序**选项卡以打开应用程序菜单。

2 滚动并点触**设置**。

3 滚动并点触 **SD 卡和手机存储器**。

4 点触**取消安装存储卡**。

5 点触**格式化 SD 卡**，然后确认选择。

6 如果设置了图样锁定，请输入图样锁定，然后选择**清除全部内容**。存储卡完成格式化，现在，您可以使用了。

备注：如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

提示！
如果存储卡已取消安装，您可以使用下列步骤格式化。
点触**应用程序 > 设置 > SD 卡和手机存储器 > 格式化 SD 卡**。

主屏

触摸屏提示

以下是关于如何浏览手机的一些提示。

点触 - 要选择菜单/选项或打开应用程序，请点触它。

点触并按住 - 要打开选项菜单或选中想要移动的对象，请点触并按住它。

拖动 - 要滚动浏览列表或慢慢移动，请在触摸屏上拖动。

轻弹 - 要滚动浏览列表或快速移动，请在触摸屏上轻弹（快速拖动然后释放）。

备注：

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其他键。

近程传感器

接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此传感器将自动关闭背景灯并锁定轻触式键盘。 这样有助于延长电池寿命，并避免键盘在通话期间无意激活。

锁定手机

不使用 LG-E720 时，按**电源**键可锁定手机。 这有助于防止意外按键和节省电池电量。

如果一段时间不使用手机，主屏幕或者您正在查看的其他屏幕将替换为锁定屏幕以节省电池电量。

备注：如果在您设置图样时有任何程序在运行，则它们仍可在锁定模式中运行。 建议在进入锁定模式前退出所有程序以避免不必要的费用。（例如，打电话、web 访问和数据通信）

提示！ 设置解锁图案
您可以通过连接四个或更多个点来绘制自己的解锁图案。
如果设置了图样，则手机的屏幕被锁定。 要将手机解锁，请在屏幕上绘制您设置的图样。
注意：设置解锁图样时，需要先创建 Google Gmail 帐户。
注意：如果一行中有不止 5 个图样绘制错误，则无法将手机解锁。 这种情况下，您的个人信息和下载的数据将被删除。

解锁屏幕

要唤醒手机，请按**电源**键。 锁定屏幕将会显示。 点触解锁图标 ，向右移动手指可解锁主屏。 您最后使用的屏幕将会打开。

静音模式

从通知抽屉中，点触 以使其变为 。 或者如果您未使用解锁图样，则只需将 拖到右侧。

本地中心

向左或向右轻轻滑动手指以进行查看。
您也可以使用小工具自定义每个面板，即您喜爱的应用程序、文件夹和墙纸的快捷方式。

备注：一些屏幕图像可能因手机提供商而不同。

在主屏上，您可以查看屏幕底部的快速键。 通过快速键，您点触一次即可轻松进入经常使用的功能。

点触**手机**图标可打开触摸拨号键盘，以拨打电话。

点触可以打开电话本。

点触屏幕底部的**应用程序**选项卡。 然后，您可以查看安装的所有应用程序。 只需点触即可滚动浏览您的应用程序。

点触**信息**图标以访问信息菜单。在这里，您可以创建新信息。

点触以打开 Google 站点。

将小工具添加到主屏

您可以通过将快捷方式、小工具或文件夹添加到主屏来自定义主屏。 为更方便地使用手机，请在主屏上添加您喜爱的小工具。

从主屏中删除应用程序图标：

1 在主屏上点触**菜单**键并选择**添加**。 或长按主屏的空白部分。

2 在**添加到主屏**菜单上，点触想要添加的项目类型。

3 例如，从列表中选择**文件夹**并轻触它。 从列表中选择**有电话号码的联系人**并轻触它。

4 您将在主屏上看到新文件夹的图标。 将其拖动到所需面板的所需位置，然后在屏幕上松开手指。

提示！要将应用程序图标添加到主屏，请在**应用程序**菜单上点触并按住要添加到主屏的应用程序。

要将所需图标添加到主屏：

1 点触并按住您要删除的图标。 **应用程序**图标将更改为垃圾箱图标 。

2 将某个应用程序图标拖曳到垃圾箱图标 。

备注：您无法删除预加载的应用程序。（只可以从屏幕上删除其图标。）

返回到最近使用的应用程序

1 点触并按住**主屏**键。 屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。

2 点触某个图标以打开其应用程序。 或者，点触**返回**键以返回到当前应用程序。

通知抽屉

通知抽屉在屏幕顶部运行。

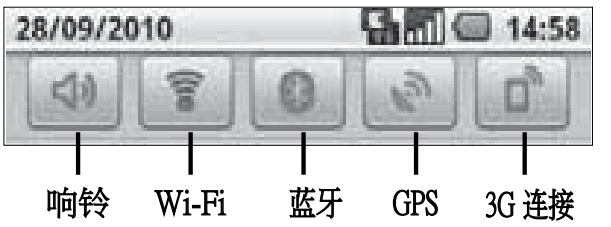

请使用手指点触并滑动通知抽屉。

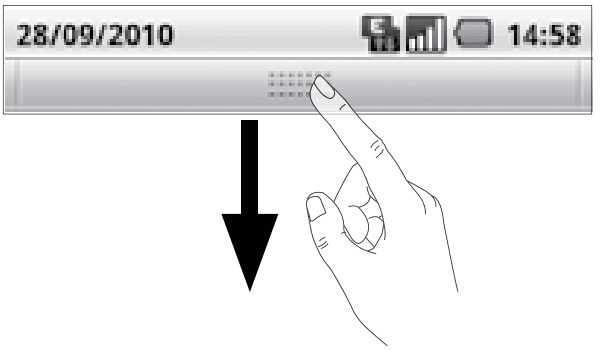

或者，在主屏上点触**菜单**键，然后选择**通知**。 您可以在此处检查和管理 Wi-Fi、蓝牙、GPS 状态及其他通知。

查看状态栏

状态栏使用不同的按钮显示手机信息，例如信号强度、新信息、电池使用寿命以及活动的蓝牙和数据连接。

下表说明了您可能在状态栏中看到的不同图标的涵义。

[状态栏]

图标	描述
	无 SIM 卡
	无信号

图标	描述
	已连接到 Wi-Fi 网络
	无线耳机
	呼叫转移
	呼叫保持
	扬声器
	手机麦克风静音
	未接来电
	蓝牙开启
	已连接到蓝牙设备
	系统警告
	已设置闹钟
	新语音邮件
	飞行模式
	铃声静音
	振动模式
	无 microSD 卡
	电池已充满电

图标	描述
	电池正在充电
	数据传进
	数据传出
	数据传进和传出
	手机已通过 USB 数据线与电脑连接
	正在下载数据
	正在上载数据
	GPS 正在采集
	正在从 GPS 接收位置数据
	On-Screen Phone 已连接
	还有两个通知未显示
	呼叫正在进行
	数据正在同步
	下载完成
	新 Google Mail
	新 Google Talk 信息

图标	描述
	新信息
	正在播放歌曲
	近期事件
	USB 绑定激活
	便携式 Wi-Fi 热点激活
	USB 绑定和便携式热点均已激活

屏上键盘

您也可以使用屏上键盘输入文本。 屏上键盘在您需要输入文本时自动在屏幕上显示。 要手动显示键盘，只需点触要输入文本的文本字段。

使用键盘并输入文本

点触一次以使键入的下一字母变为大写字母。 轻触两次表示全部为大写字母。

轻触以打开或关闭 XT9 预测模式。

轻触以查看设置菜单。
轻触以切换为数字和符号键盘。
轻触以在信息字段新建一行。
轻触以隐藏或显示屏上键盘。
轻触以删除上一字符。
在字母之间前进或后退。
轻触以输入空格。

XT9 预测模式

屏上键盘提供预测文本，可帮助您快速、准确地输入。XT9 预测模式使用内置字典，根据您点触的按键数字顺序识别您写入的内容。 只需点触与您要输入的字母关联的数字键即可，随着您的键入内容，字典将预测您想要使用的单词。

Abc 模式

在此模式中，输入字母时，点触标有所需字母的按键一次、两次、三次或四次，直到显示该字母。

123 模式

使用此模式，您可以更快速地在文本信息中输入数字（例如电话号码）。 点触与所需数字对应的按键，然后手动切换回适当的文本输入模式。

输入带注音的字母

当选择法语或西班牙语作为文本输入语言时，您可以输入特殊的法语或西班牙语字符（如“ä”）。

在相应的字母字符消失后，请重复点触相同的按键，直至看到所需特殊字符。

示例

要输入，请按住“a”键。

在字母“a...”消失后，将手指按在屏幕上并向左或向右滑动以选择所需的字符。

Google 帐户设置

当第一次在手机上打开 Google 应用程序时，您需要使用您现有的 Google 帐户登录。 如果您没有 Google 帐户，则会提示您创建一个帐户。

创建 Google 帐户

1 在主屏上，点触**应用程序**选项卡 以打开应用程序菜单。

2 轻触 **Google Mail**，轻触**下一步 > 创建**以启动 Google Mail 设置向导。

3 点触文本字段以打开触摸键盘，输入您的姓名和 Google 帐户的用户名。 当输入文本时，您可以点触键盘上的**下一步**移动到下一文本字段。

4 当完成输入姓名和用户名时，请轻触**下一步**。 您的手机正在与 Google 服务器通信，正在检查用户名可用性。

5 输入并重新输入您的密码。 然后按照说明输入有关帐户的必需和可选信息。 服务器正在创建您的帐户，请稍候。

登录 Google 帐户

1 输入您的电子邮件地址和密码，然后轻触**登录**。 正在登录，请稍候。

2 登录后，您可以使用 Google Mail，并在手机上利用 Google 服务。

3 一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。 （具体取决于您的同步设置。）

登录后，您可以使用 Google Mail、Google Calendar、Android Market 和 Google Map；从 Android Market 下载应用程序；将您的设置备份到 Google 服务器；以及在手机上使用其他 Google 服务。

重要！

- 诸如日历等一些应用程序只适用于您添加的第一个 Google 帐户。 如果您计划手机使用不止一个 Google 帐户，请确保登录到您想先使用此类应用程序的帐户。登录后，您的联系人、Google Gmail 消息、日历事件和来自网络上这些应用程序和服务的其他信息将与您

的手机同步。 如果在安装期间未登录 Google 帐户，则在首次启动需要 Google 帐户的应用程序（如 Gmail 或 Android Market）时会提示您登录或创建一个 Google 帐户。

- 如果想使用备份功能从运行 Android 操作系统或更高版本的其他手机向您的手机恢复设置，则您现在必须在安装期间登录 Google 帐户。 如果等到安装完成后再登录，则不会恢复您的设置。
- 如果您拥有公司或其他组织的企业帐户，则 IT 部门可能具有关于如何登录该帐户的特殊说明。

通话

拨打电话

1 点触 以打开键盘。

2 在键盘上输入号码。 要删除一个数字，请点触**清除**按钮 。

3 点触**通话**图标 以拨打电话。

4 要结束通话，请点触**结束**图标 。

提示！ 要输入“+”以拨打国际电话，请点触并按住 。

呼叫联系人

1 点触 可以打开电话本。

2 滚动浏览联系人列表，或点触**搜索**输入您要呼叫的联系人的首字母。

3 在列表中，点触您要呼叫的联系人。

接听和拒绝电话

屏幕锁定时：

当手机响铃时，将**接听**图标 拖到右侧。

将**拒绝**图标 拖到左侧以拒接来电。 如果要发送借口信息，请点触“接听”和“拒绝”之间的**借口信息**图标。 如果电话为未知来电人，则此**借口信息**图标不会显示。

屏幕解锁时：

电话响铃时，点触**接听**图标 。 点触**拒绝**图标 以拒接来电。

如果要发送借口信息，请点触“接听”和“拒绝”之间的**借口信息**图标。 如果电话为未知来电人，则此**借口信息**图标不会显示。

调节音量

要在通话期间调节通话音量，请使用手机右侧的音量调高和调低按钮。

拨打第二个电话

1 在第一个通话过程中，点触 。

2 拨号码或搜索联系人，以选择要呼叫的号码。

3 点触**通话**图标 以连接通话。

4 此时呼叫屏幕上将显示两个呼叫。 初始呼叫被锁定，通话方进入保持状态。

5 点触 在不同的通话间切换。

备注：您可点触 启动电话会议。

6 要结束当前通话，请点触**结束通话**。 要同时结束所有通话，请点触**菜单**键，然后选择**结束所有通话**。

备注：您需要对每通电话付费。

查看通话记录

在主屏上，点触 并选择**通话记录**选项卡。

查看所有拨电、已接来电和未接语音电话的完整列表。

提示！ 点触任意单个通话记录条目，以查看通话日期、时间和时长。

提示！点触 **菜单**键，然后点触**清除通话记录**以删除所有录制的项目。

通话设置

您可以配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

1 在主屏上，点触**应用程序**选项卡以打开应用程序菜单。

2 滚动并点触**设置**。

3 轻触**通话设置**，然后选择要调整的选项。

<固定拨号>

选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。 您需要提供 PIN 2 码，此密码由运营商提供。 仅可以使用手机拨打此号码列表中的号码。

通话

<语音信箱>

设置语音信箱号码。

语音信箱服务 - 允许您选择运营商的语音信箱或其他服务，如 Google Voice。

语音信箱设置 - 如果当前在使用运营商的语音信箱服务，此选项使您可以输入用于收听和管理语音信箱的号码。

<其他通话设置>

TTY 模式 - 允许您设置 TTY 模式以便与其他 TTY 设备通信。

借口信息 - 拒绝通话时，您可使用此功能快速发送一条信息。 此选项有助于在会议时回复信息。

呼叫转移 – 您可以配置开机时如何转移呼叫、何时不应答等等。 从以下选项中进行选择：**始终转移**、**忙时转移**、**无应答时转移**或**无法接通时转移**。

然后输入要转移至的号码。

备注：转接呼叫将收取一定费用。 有关详细信息，请联系您的网络运营商。

呼叫限制 - 选择何时限制呼叫。 输入呼叫限制密码。 请与您的网络运营商联系，了解有关此服务的信息。

通话费用 - 查看通话的相关费用。（此服务取决于网络；某些运营商不支持此功能。）

通话时间 - 查看所有通话的时间，包括“全部”、“已拨电话”、“已接来电”和“最后通话”。

附加设置 – 此菜单允许您更改以下设置：

- **来电显示** - 选择是否要在拨出电话时显示您的号码。
- **呼叫等待** - 如果启用了呼叫等待功能，在通话过程中，手机将提醒您有来电。（这取决于网络提供商。）

联系人

您可以在手机上添加联系人，并将其与 Google 帐户或其他支持同步联系人的帐户中的联系人同步。

搜索联系人

1 在主屏上点触 可打开联系人。

2 点触**搜索**，使用键盘输入联系人姓名。

添加新联系人

1 在主屏上点触 ，输入新的联系人号码，然后依次点触**菜单键**、**添加为新联系人**和**新建联系人**。

2 如果您要为新联系人添加图片，请点触 。 从**拍照**或**从图片库中选取**中选择。

3 点触 选择联系人类型。

4 点触文本字段以打开触摸键盘，输入新联系人的姓名。

5 点触联系人信息类别，并输入有关联系人的详细信息。

6 点触**完成**以保存联系人。

收藏夹联系人

您可以按收藏夹归类经常呼叫的联系人。

将联系人添加到收藏夹：

1 在主屏上点触 可打开联系人。

2 点触联系人以查看其详细信息。

3 点触联系人姓名右侧的星号。 星号变为金色。

从收藏夹列表中删除联系人：

1 在主屏上点触 可打开联系人。

2 点触**收藏夹**选项卡，选择一个联系人以查看其详细信息。

3 点触联系人姓名右侧的金色星号。 星号变为灰色，联系人已从收藏夹中删除。

信息/电子邮件

信息

LG-E720 将短信和彩信结合到一个直观易使用的菜单中。

发送信息

1 点触主屏上的 图标，然后点触**新建信息**打开空白信息。

2 在**收件人**字段中输入联系人姓名或电话号码。 随着您输入联系人姓名，匹配的联系人将会显示。 您可以点触建议的收件人。 您可以添加多个联系人。

备注：您将按每个收件人每条文本信息付费。

3 点触下面的**键入以撰写**以开始输入信息。

4 点触**菜单**键打开选项菜单。 从**呼叫**、**添加主题**、**附加**、**发送**、**插入表情**、**放弃**、**模板**、**所有线程**和**添加为新联系人**中选择。

5 点触**发送**以发送信息。

6 信息屏幕将会打开，您的信息显示在您的名称后面。 屏幕上会显示回复。 当您查看并发送附加信息时，将创建信息会话。

⚠ 警告

160 个字符的限制在不同国家/地区有所不同，具体取决于短信编码方式和语言。

⚠ 警告

如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

备注： 在通话期间收到短信时，手机将发出通知铃声。

更改信息设置

LG-E720 已预定义信息设置，因此，您可以立即发送信息。 您可以根据喜好更改设置。

在主屏上点触**信息**图标，然后点触**菜单**键，再轻触**设置**。

<存储器设置>

删除旧信息 - 点触以勾选，并允许手机在达到文本信息限制或多媒体信息限制删除会话中的旧信息。

取消选择以保留所有信息。

文本信息限制 - 点触以设置每个会话要保存的文本信息数。

多媒体信息限制 - 点触以设置每个会话要保存的多媒体信息数。

<短信设置>

发送报告 - 激活可接收信息已发送确认信息。

管理 SIM 卡信息 – 管理存储在 SIM 卡上的信息。

有效期 - 选择信息在信息中心中的最长保存时间。

文本信息中心 - 输入信息中心的详细信息。

<彩信设置>

发送报告 - 选择以请求发送报告。

允许发送报告 - 选择以允许发送送达确认信息。

阅读报告 – 选择以请求您发送的每条信息的阅读报告。

允许阅读报告 - 选择以允许发送阅读确认信息。

自动检索 – 激活可自动检索信息。

漫游时自动检索 – 激活可在漫游时检索信息。

设置优先级 - 选择彩信的优先级级别。

有效期 - 选择信息在信息中心中的保存时间。

创建模式

- **受限制：**在这种模式下，彩信客户端设备只会创建并发送内容属于核心 MM 内容域的信息。
- **警告：**在这种模式下，彩信客户端设备将引导用户创建并发送内容属于核心 MM 内容域的信息。 此指南将通过警告对话框提供。
- **免费：**在这种模式下，彩信客户端允许用户在信息中添加任何内容。
- **接收广告** – 允许接收广告信息。

<信息服务设置>

选择接收、阻止还是查看或编辑频道以接收信息服务消息（小区广播信息）。 也可选择信息服务消息的语言。

<服务信息>

选择是接收还是阻止服务信息。

信息/电子邮件

<通知设置>

激活可在状态栏中显示信息通知。

也可以选择一种铃声并激活振动，以便提醒您收到新信息。

打开您的电子邮件

您可以使用**电子邮件**应用程序读取 Google Gmail 外其他服务的电子邮件。 **电子邮件**应用程序支持以下帐户类型：POP3、IMAP 和 Exchange。

1 在主屏上，点触**应用程序**选项卡并轻触**电子邮件**可查看每个电子邮件帐户的邮箱。 或者，您也可以在主屏上点触**电子邮件**以直接访问。

2 首次打开**电子邮件**应用程序时，将打开一个设置向导，以帮助您添加电子邮件帐户。

3 进行初始设置后，**电子邮件**将显示您的**收件箱**的内容（如果只有一个帐户）或**帐户**屏幕（如果有多个帐户）。

读取您的邮件

点触您要读取的邮件。 邮件将在一个包括有关发件人、发送日期及其他相关信息的屏幕中打开。 您可以点触该状态指示以打开**快速联系人**。

回邮件

您可以回复、转发或直接删除邮件。

要将邮件标记为未读：

您可以将邮件设置为未读时的状态 – 例如，提醒您自己以后再次阅读该邮件。

- 在阅读邮件时，点触**菜单**键并点触**标记为未读**。

要删除邮件：

- 在阅读邮件时，点触**删除**键或点触**菜单**键，然后选择**删除**。

对于大多数类型的帐户来说，删除的邮件将移到**垃圾箱**文件夹，这样即使误删了邮件，也可以将其恢复。

为邮件添加星标

您可以为重要邮件添加星标，以便于跟踪。

要为邮件添加星标：

- 在阅读邮件时，点触其标题中的星标 。
- 从文件夹中的邮件列表中，点触邮件的星标。 星标 变为金色。

要取消邮件的星标：

- 再次点触星标 。

要查看已加星标的邮件：

- 点触**已加星标的内容**。 此时将打开一个包含您已加星标邮件的文件夹。

撰写和发送电子邮件

要撰写和发送邮件：

1. 在**电子邮件**应用程序中，点触**菜单**键，然后点触**撰写**。
2. 输入邮件目标收件人的地址。 输入文字时，匹配的地址从您的联系人中提供。 用逗号分隔多个地址。
3. 点触**菜单**键并点触**添加抄送/密送**以便抄送或密送给其他联系人/电子邮件地址。
4. 输入邮件的正文。
5. 点触**菜单**键并点触**附加**以通过邮件发送照片 。
6. 点触**发送**。
   如果您尚未准备好发送邮件，请点触**另存为草稿**将其保存在**草稿箱**文件夹中。 在**草稿箱**文件夹中点触草稿箱邮件以继续编辑邮件。 如果在发送前点触了**返回**键 ，您的邮件也会被另存为草稿。 点触**放弃**以舍弃或删除邮件，包括任何已保存的草稿。 如果未连接至网络，例如如果您以飞行模式工作，您发送的邮件将存储到您的**发件箱**文件夹中，直到重新连接至网络。 如果包括任何未发送的邮件，**发件箱**就会显示在**帐户**屏幕上。

请注意，使用 Exchange 帐户发送的邮件将不会储存在手机上；但它们会储存在 Exchange 服务器上。

如果要查看**已发送**文件夹（或带**已发送**标签）中的已发送邮件，则通常需要打开**已发送**文件夹/标签并从选项菜单中选择**刷新**。

使用帐户文件夹

每个帐户均具有**收件箱**、**发件箱**、**已发送**和**草稿箱**文件夹。 取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

添加或编辑电子邮件帐户

要添加电子邮件帐户：

1 点触**菜单**键，然后点触**添加帐户**。

2 点触**下一步**。 或者，如果需要输入电子邮件帐户设置。

3 输入帐户的名称，确认您希望您的名称在外发邮件中显示的方式，然后点触**完成**。

要更改帐户的设置：

1 打开**帐户**屏幕。

2 点触并按住您要更改其设置的帐户。 在打开的菜单中，点触**帐户设置**。

要删除电子邮件帐户：

1 打开**帐户**屏幕。

2 点触并按住您要删除的帐户。

3 在打开的菜单中点触**删除帐户**。

4 在对话框中点触**确定**，以确认您要删除帐户。

社交网络

通过手机，您可以体验社交网络并管理联机社区中的微型博客。 您可以更新您的当前状态，上载照片，并查看朋友的实时状态更新。

如果没有帐户，您可以访问其站点进行设置。

备注：连接并使用在线服务时可能需要支付额外费用。查看网络提供商要求的数据付费。

将您的帐户添加到手机

1 在主屏上，点触**应用程序**选项卡以打开应用程序菜单。

2 选择要使用的任何 SNS 应用程序。

3 输入您在社区上设置的电子邮件地址和密码，然后轻触**登录**。

4 正在检查您的社区的详细信息，请稍候。
5 如果轻触您的社区，您可以看到社区的当前状态。

提示！ 如果在主屏上添加社交网络小工具，则小工具将向您显示手机从网络进行更新的时间。
您也可以通过点触小工具来直接访问社区。

查看和更新状态

1 选择要访问的社区。
2 您可以看到社区的当前状态。
3 您可使用备注或通过上传照片来更新自己的当前状态。

备注：具体取决于网络服务。

提示！ 您可只在 SNS 中使用好友的信息或将所有数据与电话本同步。

在手机上删除帐户

1 选择**应用程序 > 设置 > 帐户和同步设置**。
2 选择要删除的帐户，然后点触**删除帐户**。

相机

了解取景器

亮度 - 此选项定义并控制进入图像的光量。 沿滚动条滑动亮度指示器，“-”对应亮度更低的图像，“+”对应亮度更高的图像。

缩放 - 放大或缩小。 或者，您可以使用侧音量键。

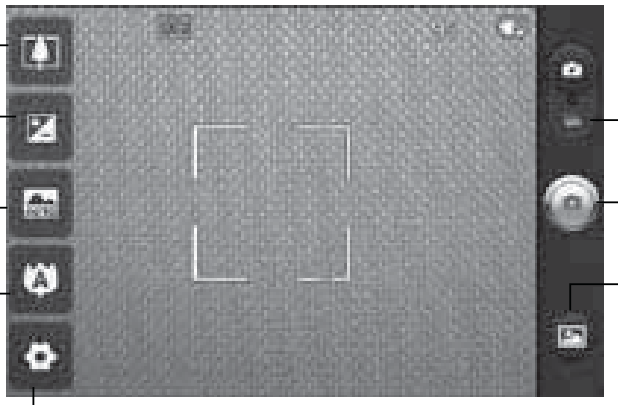

视频模式 - 向下滑动此图标以切换到视频模式。

拍照

图片库 -这使您可以在相机模式下访问保存的照片。 仅需点触，您的图片库就会出现在屏幕上。

设置 - 点触此图标可以打开设置菜单。 请参阅**使用高级设置**。

对焦 - 点触此图标以选择选项菜单。 请参阅**使用对焦模式**。

场景模式 - 从以下选项中选择：**自动**、**肖像**、**风景**、**运动**和**夜间**。

备注：您需要先插入存储卡，然后才能拍照。 不插入存储卡，您将无法拍照，也无法保存所拍摄的照片 。

提示！ 您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。 点触一次取景器中心即可。要调用选项，请再次点触屏幕。

使用对焦模式

您可以从下列选项中选择对焦模式：

自动 – 将相机设置为自动对焦。

微距 – 微距允许您拍摄大特写。 如果您正在尝试拍摄大特写，但是对焦框为红色，请尝试打开微距模式。

人脸跟踪 – 如果设置了人脸跟踪并拍照，您的相机将自动检测并对焦人脸。

备注：人脸跟踪模式不支持缩放。

手动 – 将相机设置为自动对焦。

快速拍照

1 打开**相机**应用程序。

2 水平拿稳手机，将镜头对准您要拍摄的物体。

3 点触快门图标 。

相机将使图像进入焦距。 图像处于焦距内时，每个角的对焦指示符均会变绿，并且相机将以此拍照。

拍照后

拍好的 照片将显示在屏幕上。

共享 点触以通过**蓝牙**、**电子邮件**、Facebook for LG、Google Mail、**信息**、MySpace for LG、Picasa 或 Twitter for LG **共享您的照片**。

备注：漫游时如果下载了彩信，可能会额外收费。

设置方式 点触以将图像设为**联系人图标**或**墙纸**。

重命名 点触以编辑选定图片的名称。

编辑 点触各种工具以编辑图像

相机

点触可以删除图像。

点触可以立即拍摄其他照片。 将保存您的当前照片。

点触可以查看保存的图像库。

使用高级设置

在取景器中点触 以打开所有高级选项。

滚动转盘，您可以更改相机设置。 选择选项后，点触**返回**键。

图像大小 – 点触可设置所拍照片的尺寸（以像素为单位）。 从数字选项中选择像素值：**5M (2592X1944)**、**3M (2048x1536)**、**2M (1600x1200)**、**1M (1280x960)**、**VGA (640x480)**、**QVGA (320x240)**。

ISO - ISO 确定相机的光照传感器的感光性。 ISO 越高，相机感光性能越好。 在您无法使用闪光灯而光线较差的条件下，此功能很有用。 选择 ISO 值：**自动**、**400**、**200** 和 **100**。

白平衡 - 从以下选项中选择：**自动**、**白炽灯**、**日光**、**荧光灯**和**阴天**。

色彩效果 – 选择新照片的色彩效果。 从以下选项中选择：**关闭**、**单色**、**反色**、**曝光**和**棕褐色**。

备注：您可以将照片从彩色更改为黑白或怀旧，但是，您不可以将黑白或怀旧照片还原为彩色。

定时器 - 自拍器允许您设置按下拍摄按钮后的延迟。 从**关**、**3 秒**、**5 秒**或 **10 秒**中选择。 如果要为自己拍摄照片，此功能是理想之选。

拍摄模式 – 从以下选项中选择：**标准**、**连拍**、**脸部对焦**、**脸部效果**和**卡通**。

图像质量 - 从**超精细**、**精细**和**标准**中选择。 质量越精细，照片越清晰。 同时文件更大，这意味着手机内存可保存的照片数更少。

自动查看 – 如果将“自动查看”设置为开启，手机将显示刚刚自动拍摄的照片。

快门声音 - 从四种快门声音中选择一种。

标签位置 – 激活以使用手

机基于位置的服务。 拍照并添加所在位置以对其进行标记。 如果将标记过的图片上传到支持相片定位功能的博客，您可以在地图上看到此照片。

备注：此功能仅在激活了 GPS 时可用。

恢复所有相机默认设置。

无论您何时想要了解此功能如何操作，均可点触该选项。 该选项为您提供快速指南。

提示！ 退出相机时，除图像大小和图像质量外，所有设置将恢复回默认设置。 任何非默认设置必须重置，如色调和 ISO。 拍摄下一张照片之前，请先查看。

提示！ 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。

查看保存的照片

1 您可以在相机模式下访问保存的照片。 点触 即会在屏幕上显示图像库。 点触屏幕上的照片，即会见到**幻灯片放映**和**菜单**。

提示！ 向左或向右轻弹以查看其他照片或视频。

点触以观看幻灯片放映。

点触**菜单**并选择您要的选项。 您可以共享内容或删除照片。 点触**更多**可获得以下更多选项。

详细信息 - 检查内容的信息。

设置为 - 设置为联系人图标或墙纸。

裁切 - 裁切照片。 使用手指移过屏幕以选定区域。

旋转 - 向左旋转或向右旋转。

编辑 - 点触可使用不同的工具编辑图像。

摄像机

了解取景器

亮度 - 此选项定义并控制进入视频的光量。 沿滚动条滑动亮度指示器，“-”对应亮度更低的视频，“+”对应亮度更高的视频。

缩放 - 放大或缩小。 或者，您可以使用侧音量键。 在开始录制视频之前，您可以使用缩放功能。 录制期间，不能控制缩放功能。

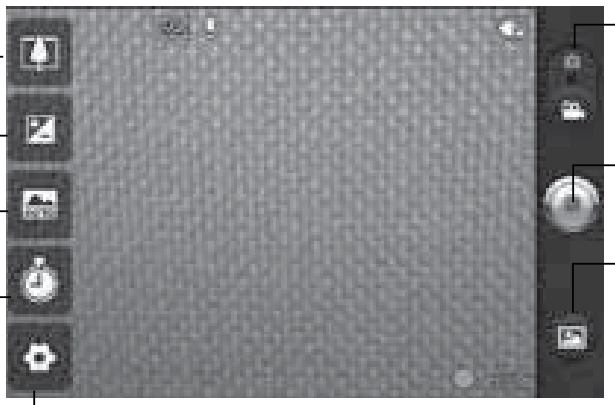

相机模式 - 向上滑动此图标以切换到相机模式。

开始录制

图片库 -这使您可以在相机模式下访问保存的照片。 仅需点触，您的图片库就会出现在屏幕上。

设置 - 点触此图标可以打开设置菜单。 请参阅**使用高级设置**。

长度 - 设置视频的长度限制。 从**标准**和**彩信**中选择，以限制彩信最大大小。

场景模式 - 设置相机，使其适应环境。 从**自动**或**夜间**中选择。

快速摄像

1 打开**相机**应用程序并将相机模式按钮向下滑至**视频**位置，此时快门图标 将变成 。

2 屏幕上将显示摄像机的取景器。

3 水平放置相机，将镜头对准要拍摄的物体。

4 点触启动视频图标 。

5 REC 将显示在取景器底部，计时器将显示视频长度。

6 点触停止视频图标 停止录制。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。

播放　点触以播放视频。

共享　点触可以通过**蓝牙**、**电子邮件**、Google Mail、**信息**或 YouTube **共享视频**。

备注：漫游时如果下载了彩信，可能会额外收费。

重命名　点触以编辑选定视频的名称。

　点触以删除您刚拍摄的视频，点触**是**确认。 此时将出现取景器。

　点触可以立即拍摄另一段视频。 将保存您的当前视频。

　点触以访问媒体播放器并查看保存的视频。

使用高级设置

从取景器中点触 以打开所有高级选项。

滚动转盘以调节摄像机设置。 选择选项后，点触**返回**键。

视频大小 – 点触可设置录制的视频的大小（以像素为单位）。 选择视频大小：VGA (640x480)、QVGA (320x240) 或 QCIF (176x144)。

白平衡 - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。 从**自动**、**白炽灯**、**日光**、**荧光灯**或**阴天**中选择。

色彩效果 - 选择要对新视图使用的色彩效果。 从以下选项中选择：**关闭**、**单色**、**反色**、**曝光**和**棕褐色**。

提示！ 您可以将拍摄的视频从彩色更改为黑白或怀旧，但是，您不可以将黑白或怀旧视频还原为彩色。

图像质量 - 从**超精细**、**精细**和**标准中选择。**

录音 - 选择**静音**以录制视频而不录制声音。

自动查看 – 如果将此选项设为**开启**，则会自动显示您刚刚录制的视频。

重置所有摄像机设置。

无论您何时想要了解此功能如何操作，均可点触该选项。 该选项为您提供快速指南。

观看保存的视频

1 在取景器中，点触 。

2 屏幕上将显示您的备忘录。

3 点触视频一次，将其调到图片屏幕的前方。 将开始自动播放。

观看视频时调节音量

要在播放视频时调节音量，请使用手机右侧的音量键。

照片和视频

编辑照片

您可以对照片执行多项操作以更改、添加或修饰。

1 打开您要编辑的照片，然后点触**菜单**键并选择**更多 > 编辑**。

2 点触选项以调整照片：

裁切照片。 选择方形或圆形裁切区域，使用手指移过选定区域。

Tools 选择要使用的选项。

徒手对照片进行绘制更改。 从四个选项中选择线条粗细，然后选择要使用的颜色。

擦除您对图片所做的编辑。 您可以选择要使用的橡皮擦大小。

在图片上添加书写内容。

使用标记修饰照片。 从不同标记中选择，点触照片中您要放置标记的位置。

Filter 点触以打开过滤器选项。

Image 点触可以打开更多效果选项，包括**旋转**。 此外还有一些高级编辑选项。

Adjust 此时将使用自动色彩、亮度等对所拍图片进行调整。

Save 保存您对照片所做的更改。 选择更新将更改保存在源文件中，还是另存为**新文件**。 如果选择**新文件**，请输入文件名。

Undo 撤消上一个效果，或您对照片所做的更多编辑。

Set as 点触以将编辑过的照片设为**联系人图标**或**墙纸**。

Share 您可以通过**蓝牙**、**电子邮件**、Facebook for LG、Google Mail、**信息**、MySpace for LG、Picasa 或 Twitter for LG 共享您编辑过的照片。

多媒体

您可以将多媒体文件保存在存储卡中，以便轻松访问所有图像和视频文件。

点触**应用程序**选项卡，然后选择**图片库**。

备注：请确保在手机上安装一个存储卡，以便保存照片和访问您的所有图片。 如果没有存储卡，手机将不会显示任何照片或视频，并且您的 Picasa 相册中也不会有任何 Picasa 图像。

更改相册内容显示的方式

您可以在时间网格或堆栈中按拍摄的日期和位置查看相册中的图像和视频。 使用屏幕右上角的相册视图切换键 可在网格和堆栈视图中切换。

将相册视图切换键拖到左侧可时间网格中查看相册内容。

将相册视图切换键拖到右侧可在堆栈中查看相册的内容。

发送照片

1 要发送照片，长按所需照片即可。

2 点触**菜单**并选择**共享**。 从以下选项中选择：Facebook for LG、MySpace for LG、Twitter for LG、**信息**、**蓝牙**、**电子邮件**、Picasa 或 Google Mail。

3 当选择**信息**、**电子邮件**或 Google Mail 时，照片将被附加到信息中，您可以照常撰写和发送信息。

提示！ 如果有 SNS 帐户并在手机上设置了该帐户，您可以向 SNS 社区共享您的照片。

发送视频

1 要发送视频，请点触所需视频。

2 选择**共享**。 从**信息**、**蓝牙**、**电子邮件**、YouTube 或 Google Mail 中进行选择。

3 当选择**信息**、**电子邮件**或 Google Mail 时，视频将被附加到信息中，您可以照常撰写和发送信息。

音乐

LG-E720 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。 要访问音乐播放器，请点触**音乐**。

播放歌曲

1 在主屏上点触**应用程序**选项卡，然后选择**音乐**。

2 点触**歌曲**。

3 选择您要播放的歌曲。

4 点触 以暂停歌曲。

5 点触 跳到下一首歌曲。

6 点触 以返回到歌曲的第一部分。 点触 两次以返回到上一首歌曲。

要在聆听音乐时更改音量，请按手机右侧的音量调高和音量调低键。

点触并按住列表中的任何歌曲。 它将显示**播放**、**添加到播放列表**、**用作手机铃声**、**删除**、**详细信息**和**搜索**选项。

备注：音乐文件的版权可能受国际条约和国家版权法保护。 因此，可能需要获得许可或许可证才能复制音乐。 在某些国家，国际法禁止私人复制版权所有的材料。 在下载或复制文件之前，请检查相应国家关于使用此类材料的国家立法。

使用收音机

LG-E720 内置了 FM 收音机，因此您在路上也能转到喜爱的电台并收听无线广播。

备注：您必须连接耳机才能收听无线广播。 将耳机插入耳机插孔。

搜索电台

您可以手动或自动微调收音机电台。 搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。 您可以在手机中最多保存 48 个频道。

要自动微调：

1 在主屏上点触**应用程序**选项卡，然后选择 **FM 收音机**。
2 点触**菜单**键，然后点触**自动扫描**。
3 如果有预设频道，您将看到一个显示“重置所有频道并开始自动扫描？”的弹出窗口。 如果选择**是**，则所有预设频道均会被删除，并启动自动扫描。
4 在自动扫描期间，若要停止扫描，请点触**停止**。 只有在您停止扫描前扫描的频道才会被保存。

备注：您还可以使用显示的转盘手动微调电台。

重置频道

点触**菜单**键并选择**重置频道**以重设当前频道，或选择**重置所有频道**以重设所有频道。

收听收音机

1 在主屏上点触**应用程序**选项卡，然后选择 **FM 收音机**。
2 点触您要收听的电台的频道编号。
3 点触**收听方式**，即可将**免提**或**耳机**设来收听无线广播。

提示！ 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。

⚠ 警告
如果连接的耳机不是专门面向收音机接收设计的，则收音机接收质量可能较差。

使用 USB 海量存储设备传输文件

使用 USB 设备传输文件：

1 使用 USB 数据线将 LG-E720 连接到电脑。
2 如果未在电脑上安装 LG Android 平台驱动程序，则需要手动更改设置。 选择**设置 > SD 卡和手机存储器 >** 仅激活**仅海量存储**。
3 点触**打开 USB 存储设备**。

4 您可以在电脑中查看批量储存内容，然后传输文件。

备注：

- 您需要先安装 microSD 卡。 没有 microSD 卡，您不能使用 USB 批量储存。
- 如果您安装了 LG Android 平台驱动程序，您将立即看到“**打开 USB 存储设备**”弹出窗口。
- 使用 USB 批量储存功能后，如果要使用 LG PC 套件，您需要点触**设置 > SD 卡和手机存储器**，然后点触该勾选标记以关闭**仅海量存储**模式。

如何将音乐/视频文件保存到手机

1 使用 USB 数据线将手机连接到电脑。

- 点触并向下拖动主屏上的状态栏。 选择 **USB 已连接 > 打开 USB 存储设备 > 打开文件夹以查看文件**。
- 如果未在电脑上安装 LG Android 平台驱动程序，则需要手动设置它。 有关详细信息，请参阅“使用海量存储设备传输文件”。

2 将音乐或视频文件从电脑保存到手机的可移动存储设备。

- 您可以使用读卡器将文件从电脑复制或移动到手机的可移动存储设备。
- 如果有视频文件和子标题文件（与视频文件带有相同名称的 .smi 或 .srt 文件），请将它们放置在同一文件夹中以便在播放视频文件时自动显示子标题。
- 下载音乐或视频文件时，必须保护版权。 请注意损坏的文件或带有错误扩展名的文件可能损坏手机。

如何将联系人从旧手机移到当前手机

使用电脑同步程序将联系人作为 CSV 文件从旧手机导出到电脑。

1 从 www.lg.com 下载用于 Mobile Sync for Android 并在电脑中安装它。 运行程序，并使用 USB 数据线将您的 Android 手机连接到电脑。

2 选择**联系人**图标。 转到**菜单** > **文件** > **导入**，然后选择在电脑中保存的 CSV 文件。

3 如果导入的 CSV 文件中的字段与 Mobile Sync for Android 中的不同，则您需要映射字段。 在映射字段后，单击“确定”。 随后，联系人添加在 Mobile Sync for Android 中。

4 如果 Mobile Sync for Android 检测到 LG-E720 手机的连接（使用 USB 数据线），请单击“同步”或“同步联系人”以将电脑中保存的联系人与手机同步并保存它们。

如何通过蓝牙从手机发送数据

与普通手机不同，您可以通过不从蓝牙菜单运行对应的应用程序，通过蓝牙发送数据。

- **发送图片**：运行**图片库**应用程序，然后选择**图片** > **菜单**。 单击**共享**并选择**蓝牙** > 检查**蓝牙是否打开**，并选择**扫描设备** > 从列表中选择您要发送数据的设备。
- **导出联系人**：运行**联系人**应用程序。 点触您要导出到的地址。 点触**菜单**并选择**共享** > **蓝牙** > 检查**蓝牙是否打开**，并选择**扫描设备** > 从列表中选择您要发送数据的设备。
- **发送多个选定联系人**：运行**联系人**应用程序。 要选择多个联系人，请点触**菜单**键，然后点触**多选**。 选择要发送的联系人，或者点触**菜单**键，并点触**全选** > **点触共享** > **蓝牙** > **全选**。 选择**共享** > **蓝牙** > 检查**蓝牙是否打开**，并选择**扫描设备** > 从列表中选择您要发送数据的设备。
- **连接到 FTP（仅在此手机上支持 FTP 服务器）**：**选择设置** > **无线和网络** > **蓝牙设置**。 随后，选中**可见**复选框并搜索其他设备。 查找所需服务，并连接到 FTP 服务器。

提示！ 版本是 Bluetooth 2.1 EDR 并且已通过 Bluetooth SIG 认证。 它与其他 Bluetooth SIG 认证设备兼容。

备注：如果要从其他设备搜索此手机，请转到**设置 > 无线和网络 > 蓝牙设置。**随后，选中可见复选框。 该复选框在 120 秒后被取消选中。

备注：支持的情景模式是 SDAP、HFP、HSP、OPP、PBAP（服务器）、FTP（服务器）、A2DP、AVRCP 及 DUN。

Google 应用程序

1 首先设置 Google 帐户。 输入用户名和密码。

2 登录后，您的 Google 帐户中的联系人、电子邮件和日历将自动与 LG-E720 同步。

Google Maps™

检查您当前的位置和交通并接收目的地的方向指引。 LG-E720 必须连接到 Wi-Fi 或 3G/GPRS。

备注： Google Maps 并不覆盖所有城市和国家/地区。

点触**菜单**键以使用以下选项：

搜索 – 输入您要寻找的位置。

方向 – 这将让您查找您输入位置的路线。 点触 以输入数据。 从**联系人**或**地图上的点**或**我的当前位置**中进行选择。

层 – 您可以将视图从**交通**切换到**卫星**或**地面**。 轻触**纬度**，然后您将从 Google 帐户看到您的联系人的位置。

我的位置 – 在地图上指出您的当前位置。

加入纬度 – 与您选择的朋友和 Google 共享您的位置。

更多 – 清除地图或查找已加星标的项目和更多内容。

备注：在查看一个位置的**街道视图**时，请点触**菜单**，然后点触**罗盘模式**可打开罗盘模式。

Market™

Android Market 允许您下载有用的应用程序和游戏。 如果从 Android Market 安装应用程序和游戏，它们将显示在 LG-E720 菜单中。 您可轻触**下载**选项卡检查下载的应用程序。

您可查看其他人对应用程序的评价或者发布自己的评价。

1 选择**应用程序**或**游戏**以浏览其内容。 将会显示**购买次数最多**、**免费下载次数最多**和**新增**。

2 选择要安装的应用程序。

备注：当您要完成游戏时，请使用**主屏**键或**返回**键。 您将返回主屏。 或者使用游戏的**菜单**键。

Google Mail™

在首次设置手机时对 Google Mail 进行配置。 根据您的同步设置，手机上的 Google Mail 将自动与网络上的 Google 帐户同步。收件箱对话列表是您的默认 Google Mail 视图。

点触**菜单**键，然后点触**刷新**可发送或接收新电子邮件，以及与网络上的 Google 帐户同步电子邮件。 使用**菜单**键，您可撰写电子邮件、**添加帐户**、**转到标签**、**搜索**和了解**更多**。

Google Talk™

Google Talk 是 Google 的即时消息程序。 通过 Google Talk，您可以与同时也在使用它的其他人交谈。

点触**菜单**键并选择可用选项。

所有好友 – 将所有朋友加入通信组。

添加好友 – 发送聊天邀请。

搜索 – 搜索包含您输入的单词或句子的聊天内容。

注销 – 从聊天中注销。如果您将自动登录设为启用，则在点触主屏中的**交谈**图标时，您将**自动登录**。

设置 – 调节指示器或通知等。

更多 – 您可从中关闭所有聊天并检查邀请和阻止名单。

实用工具

设置闹钟

1 在主屏上点触**应用程序**选项卡，然后选择**时钟**。 时钟应用程序打开后，主屏上将显示日期和时间。

2 如果要添加新闹钟，请点触 。 点触现有闹钟以更改其时间和其他属性，或点触**添加闹钟**以添加新闹钟。

3 设置时间并点触 以打开闹钟。 在设置时间后，LG-E720 将让您得知闹钟响铃之前的剩余时间。

4 设置**重复**、**铃声**或**振动**和添加**标签**以命名闹钟。 点触**完成**。

5 要更改闹钟设置，请在时钟屏幕上点触**菜单**键，然后选择**设置**。 您可以从设置中添加闹钟或调节暂停持续时间或闹钟音量。

使用计算器

1 在主屏上点触**应用程序**选项卡，然后选择**计算器**。

2 点触数字键输入数字。

3 对于简单的计算，请点触所需的功能（+、－、x 或÷），然后点触 =。

4 对于更复杂的计算，请点触**菜单**键，点触**高级面板**然后选择 sin、cos、tan、log 等等。

将事件添加到日历中

1 在主屏上点触**应用程序**选项卡，然后选择**日历**。

2 首先，您必须创建 Google 帐户才能使用**日历**。

3 要查看活动，请点触日期。 如果要添加新活动，请点触并按住。 然后点触**新活动**。

4 点触**内容**，然后输入活动名称。 查看日期并输入活动开始和结束的时间。

5 也可以点触**位置**，然后输入位置。

6 如果您要为事件添加备注，请点触**描述**，然后输入详细信息。

7 如果要重复闹钟，请设置**重复**，必要时设置**提醒**。

8 点触**完成**，将活动保存在日历中。 日历中带颜色的方框将标记所有已保存活动的日期。 在活动开始时间会有闹钟提醒，以便您进行安排。

更改日历视图

1 在主屏上点触**应用程序**选项卡，然后选择**日历**。 点触**菜单**键。

2 选择特定日期、星期或月份的日历视图。

ThinkFree Office

ThinkFree Office 允许您阅读文档，并且提供用于 Microsoft Word、Excel 和 PowerPoint 的有限编辑功能。 但您无法编辑 PDF 文件。

1 点触并按住某个文件，随后打**开、上载、重命名、移动、复制、删除、发送**和**属性**选项可用。 这取决于文件类型。

点触**菜单**键并选择所需的选项：

新建 – 添加文档、电子表格、演示文件或文件夹。

刷新 – 刷新数据。

排序方式 – 按名称、日期或大小排序。

首选项 – 调整 ThinkFree Office 设置。

更新 – 更新 ThinkFree Office。

关于 – 更多有关 ThinkFree Office 的信息。

录音机

使用录音机录制录音机或其他音频文件。

录制声音或语音

1 在主屏上点触**应用程序**选项卡，然后选择**录音机**。

2 点触 开始录音。

3 点触 结束录音。

4 点触**菜单**键，然后选择**用作**以设为**手机**铃声。

备注：点触**转到列表**可访问相册。 您可以收听保存的录音。

发送录音

1 录音完成后，您可以点触**菜单**键和**共享**发送音频剪辑。

2 从**蓝牙**、**电子邮件**、**Google Mail** 和**信息**中选择。 当您选择**电子邮件**、**Google Mail** 和**信息**时，录音将被添加到信息中，您可以照常撰写和发送信息。

实用工具

LG Air Sync

使用此菜单，您可以将手机的 PIM 数据或其他内容与您的 LG Air Sync 帐户同步。

1 点触LG Air Sync。

2 如果没有 LG Air Sync 帐户，请访问 http://www.lgairsync.com 以创建您的帐户。 如果有帐户，请键入您的 ID 和密码。

3 如果要同步您的PIM 数据，请点触 PIM 同步。 如果要同步您的内容，请点触“Link Air”

- 如果是“PIM 同步”，请选择您要同步的项目，然后点触“立即同步”。
- 如果是“Link Air”，请选择您要同步的项目，然后点触“立即同步”。

网络

浏览器

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容的缤纷世界，您可以快速、直接地通过手机访问。 畅行无阻、精彩无限。

备注：连接这些服务并下载内容时，可能会产生额外费用。 查看网络提供商要求的数据付费。

使用选项

点触**菜单**键可查看选项。

新窗口 – 打开新窗口。

书签 – 添加/显示书签，显示“访问最多的站点”和“历史记录”。

窗口 - 显示所有打开的窗口。

刷新 – 点触以刷新网页。

前进 – 转到比当前页更迟连接的页面。 这是与回到前一页的**返回**键相对的概念。

更多

- **添加书签** - 将当前网页设为书签。
- **在页面上查找** – 如果输入字母或任何单词，则会标记您从网页中输入的所有字母。
- **选择文本** - 点触并选择您要复制的行。 长按任何输入的文本，随后您便可粘贴该内容。
- **页面信息** - 显示页面信息。
- **共享页面** – 发送网页。
- **下载** - 显示下载历史记录。
- **设置** – 设置浏览器设置。

提示！ 要返回上一个网页，请点触**返回**键。

添加并访问书签

1 点触**菜单**键，然后选择**书签**。

2 点触书签并为其 URL 输入书签的名称。

3 要访问书签，点触书签即可。 您将连接到书签页面。

更改网络浏览器设置

点触**菜单**键，然后选择**更多 > 设置**。

设置

在主屏上点触**应用程序**选项卡，然后滚动并点触**设置**。

无线控件

在这里，您可以管理 Wi-Fi 和蓝牙。 您也可以设置移动网络、飞行模式。

飞行模式 – 在设置飞行模式之后，将禁用所有无线连接。

Wi-Fi – 点触以勾选：打开 Wi-Fi 已连接到可用的 Wi-Fi 网络。

Wi-Fi 设置 – 允许您设置和管理无线接入点。 设置网络通知，或添加 Wi-Fi 网络。 从 Wi-Fi 设置屏幕可访问高级 Wi-Fi 设置屏幕。 依次点触**菜单**键和**高级**。

> **提示！ 如何获取 MAC 地址**
> 要使用 MAC 筛选器在某些无线网络中建立连接，您需要在路由器中输入 LG-E720 的 MAC 地址。 您可以在以下用户界面中找到 MAC 地址：点触**应用程序 > 设置 > 无线控件 > Wi-Fi 设置**，然后点触**菜单**键并选择**高级 > MAC 地址**。

MediaShare – 点触以勾选：打开 MediaShare 以通过已启用 DLNA（数字生活网络联盟）的设备共享多媒体内容。

MediaShare 设置 – 允许您更改设备名称并选择要共享的内容类型。

蓝牙 – 点触以勾选：打开蓝牙以连接蓝牙设备。

蓝牙设置 - 设置设备名称和可发现，扫描其他设备。 或者，检查您之前配置的蓝牙设备以及手机上次扫描蓝牙设备时检测到的那些设备的列表。

绑定与便携式热点 – 您可以配置 USB 绑定与便携式 Wi-Fi 热点的设置。

VPN 设置 - 显示您之前配置的虚拟专用网 (VPN) 的列表。 允许您添加不同类型的 VPN。

移动网络 – 为数据漫游、网络模式和运营商、接入点名称 (APN) 等项设置选项。

屏幕手机设置 – 允许您更改屏幕手机密码（默认密码为“0000”）。 屏幕手机允许您通过 USB 或蓝牙连接从

电脑查看手机屏幕。 您也可以使用鼠标或键盘从您的电脑控制手机。

声音

<常规>

静音模式 – 允许您将所有声音（包括通话和通知铃声）静音，音乐、视频和已设置的闹钟的声音除外。（若要使媒体和闹钟静声，您必须在各自的应用程序中操作。）

振动 – 允许您将手机设置为在接到来电时振动。 从以下选项中进行选择：**总是、从不、仅在静音模式下来电振动**和**仅在非静音模式下来电振动**。

音量 – 允许您为铃声、媒体和闹钟设置音量。 如果取消选择为通话和通知使用相同音量的选项，则可分别设置各自的音量。

媒体音量 – 允许您设置音乐和视频的音量。

手机铃声 – 允许您设置默认来电铃声。

<通知>

通知铃声 – 允许您设置默认通知铃声。

<反馈>

屏幕按键音 – 允许您将手机设置为在使用拨号盘拨号时播放音调。

操作音选择 – 允许您将手机设置为在点触按钮、图标和其他可响应点触的屏上项目时播放声音。

屏幕锁定提示音 – 允许您将手机设置为在锁定和解锁屏幕时播放声音。

触觉反馈 - 允许您将手机设置为在点触**菜单**键、**后退**键和执行其他操作时短时振动。

显示

亮度 – 调整屏幕的亮度。

自动旋转屏幕 – 允许您将方向设置为在侧翻或竖翻手机时自动切换为风景模式或肖像模式。

动画 – 允许您将手机设置为在屏幕间导航时显示动画渐变。

待机时间 – 允许您调整屏幕自动关闭之前的延迟时间。为取得最佳电池性能，请使用最短的便利待机时间。

安全性和位置

<我的位置>

使用无线网络 – 如果选中**使用无线网络**，您的手机将使用 Wi-Fi 和移动网络确定您的大概位置。

启用 GPS 卫星 – 如果选中**启用 GPS 卫星**，您的手机将确定您的位置并精确到街道级别。

<屏幕解锁>

设置屏幕锁定 – 设置解锁图案以确保您的手机安全。 打开一组屏幕，它们可指导您绘制屏幕解锁图样。 您可设置 **PIN** 或**密码**，而不要使用**图案**或保持其值为**无**。

提示！ 使用图样锁定锁定屏幕

1 第一次这样做时，将显示有关创建解锁图样的简短指南。
2 您会收到提示要求绘制并重新绘制您自己的图样。
在您下一次打开手机或唤醒屏幕时，您会收到提示要求绘制解锁图样以解锁屏幕。

<SIM 卡锁定>

设置 SIM 卡锁定 – 设置 SIM 卡锁定或更改 SIM PIN。

<密码>

可见的密码 – 选择该选项可在您键入时显示密码，而取消选择则在您键入时隐藏密码。

<设备管理>

选择设备管理器 – 添加一个或多个管理权限。

<凭据存储>

使用安全凭据 - 勾选此项以允许应用程序访问手机的加密存储安全证书和相关密码及其他凭据。 您可使用凭据存储建立有些类型的 VPN 和 Wi-Fi 连接。 如果未为凭据存储设置密码，则此设置不可用。

从存储卡安装 – 允许您从 microSD 卡安装加密的证书。

设置密码 – 允许您为安全凭据存储设置或更改密码。 密码最少为 8 个字符。

清除存储 - 删除所有安全证书及相关凭据，同时擦除安装存储本身的密码。

应用程序

未知源 – 允许安装您从网站、电子邮件或其他非 Android Market 位置获得的应用程序。

> ⚠ **警告**
> 要保护手机和个人数据，请仅从信任源（如 Android Market）下载应用程序。

管理应用程序 - 管理和删除安装的应用程序。

正在运行的服务 - 允许您查看和控制当前正在运行的服务和应用程序。 此选项显示正在运行的各项服务需要的进程及占用的内存大小。

开发 – 设置应用程序开发的选项，如 **USB 调试**、**保持清醒**以及**允许模拟位置**。

数据同步

<常规同步设置>

背景数据 - 允许应用程序在后台同步数据，无论您当前是否正在操作它们。 取消选择此设置可节省电池电量并减少（而非消除）数据使用。

自动同步 - 允许应用程序根据自己的计划同步、发送和接收数据。

<管理帐户>

所有 Google 帐户及已添加到手机的其他帐户的列表。

如果点触此屏幕中的某个帐户，将会打开其帐户屏幕。

隐私

<个人数据>

重置出厂数据 - 擦除手机内部存储中的所有数据，包括关于 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序的信息。 重置手机不会擦除您已下载的任何系统软件更新或 microSD 卡上的任何文件，如音乐或照片。 如果以此方式重置手机，首次启动 Android 时，将提示您重新输入相同类型的信息。

SD 卡和手机存储器

<USB 连接模式>

仅海量存储 - 插入存储卡时，您的手机可用作海量存储设备。 您可将**仅海量存储**设置为 USB 连接模式的默认设置。

<存储卡>

检查空间总量和可用的空间。 点触**删除存储卡**以安全移除。 如果要删除 microSD 卡上的所有数据，请**格式化存储卡**。 您必须先取消安装 microSD 卡，然后才能将其格式化。

<手机内部存储>

检查**可用的空间**。 列出操作系统、其组件、应用程序（包括已下载的应用程序），以及其永久和临时数据使用的手机内部存储空间。

搜索

您可以使用“搜索”设置来配置 Google 搜索，包括您希望在您的手机上能够搜索的数据。

<Web>

点触 **Google 搜索**，即可调整 Google 搜索设置。

显示网络建议 – 选中以在您键入时在 Google 搜索框下面显示 Google 网页搜索的建议。

使用我的位置 - 选中以在您使用 Google 搜索及其他 Google 服务时包括自己的位置。 当选中此选项时，您将被询问在提供这些服务时是否允许 Google 使用您的位置。

搜索历史记录 – 选中以使用来自您 Google 帐户的基于网页的 Google 搜索历史记录的建议。

管理搜索历史记录 – 打开浏览器，以基于网页的界面查看和管理与您的 Google 帐户关联的搜索历史记录。

<手机>

可搜索的项目 – 打开一个屏幕，您可在此勾选和取消选择可在手机上搜索的数据类型。

清除快捷方式 – 擦除以前选择的搜索结果，该结果作为建议显示在 Google 搜索框下面。

区域和文本

使用**区域和文本**设置为手机上的文本以及屏上键盘配置选择语言和区域（包括已添加到词典中的文字）。

语音输入与输出

<语音输入>

语音识别程序设置 - 使用**语音识别程序设置**配置 Android 语音输入功能。

- **语言**：打开一个屏幕，在此可以设置您在通过讲话的方式输入文字时使用的语言。
- **安全搜索**：打开一个对话框，在此可以设置您是否希望 Google 安全搜索过滤功能屏蔽您使用时的部分结果。
- **Google 语音搜索**：不屏蔽任何搜索结果（关闭）、仅屏限制级的图像（中等）、同时屏蔽限制级的文字和图像（严格）。
- **屏蔽攻击性言论**：取消选择时，Google 语音识别将在您以口头方式输入文本时识别和抄写许多人认为具有攻击性的言论。 勾选时，Google 语音识别将用由井号 (#) 组成的占位符替代文字记录中的那些字眼。

<语音输出>

文本至语音设置 - 您可以使用**文本至语音设置**来配置 Android 文本至语音合成器，通过该应用程序来利用此功能。

备注：如果未安装语音合成器数据，则只有**安装语音数据**设置可用。

- **聆听示例**：使用您的当前设置播放语音合成器的简短示例。
- **总是使用我的设置**：勾选以使用该屏幕上的设置替代其他应用程序中提供的语音合成器设置。
- **默认引擎**：如果安装了多个文本至语音应用程序，则会打开一个对话框，在此可以设置您要使用的文本至语音应用程序。
- **安装语音数据**：如果您的手机未安装语音合成器数据，请连接至 Android Market，系统将引导您完成下载和安装数据的过程。 如果数

据已经安装，则此设置不可用。

- **语速**：打开一个对话框，在此可以选择您希望合成器发音的速率。
- **语言**：打开一个对话框，在此可以选择您希望合成器读出的语言。 该选项在结合**总是使用我的设置**一起使用时尤为有用，这样可以确保文本在不同的应用程序中均可正确发音。
- **Pico TTS**：配置 Pico TTS 设置。

可访问性

使用**可访问性**可配置您在手机上安装的任何可访问性插件。

备注：需要额外的插件才能变成可选。

日期和时间

使用**日期和时间**设置，以设置日期显示方式的参考。 您还可使用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

关于手机

查看法律信息，检查手机状态和软件版本。

Wi-Fi

使用 Wi-Fi，您可在无线接入点 (AP) 覆盖区内高速访问 Internet。

您可通过 Wi-Fi 尽情享受无线 Internet 的便利性，而且无需额外付费。

打开 Wi-Fi

从主屏幕中打开“通知抽屉”，并点触 。

或者点触**应用程序 > 设置 > 无线网络**，然后打开 **Wi-Fi**。

连接到 Wi-Fi

选择要连接的 Wi-Fi 网络。如果看到 ，则需要输入密码才可连接。

备注：

- 如果不在 Wi-Fi 区并且选择 3G 连接，则可能产生另外的费用。
- 如果手机进入睡眠模式，则即使它连接到 Wi-Fi，Wi-Fi 连接也将自动被禁用。 这种情况下，如果手

机具有 3G 数据的访问权，则它可自动连接到 3G 网络，并且可能产生另外的费用。

- LG-E720 支持 WEP、WPA/WPA2-PSK 和 802.1x EAP. 安全性。 如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。 如果未设置加密，不会显示此弹出窗口。 您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

共享您手机的移动数据连接

您可以通过 USB 数据线：USB 绑定将您手机的移动数据连接与一台电脑共享。 您也可以将您的手机转接到便携式 Wi-Fi 热点，一次将您手机的数据连接与最多五个设备进行共享。

当手机共享其数据连接时，状态栏中将出现一个图标，同时通知抽屉中将出现持续的通知。

图标	描述
	USB 绑定激活
	便携式 Wi-Fi 热点激活
	USB 绑定和便携式热点均已激活

有关绑定和便携式热点的信息，包括支持的操作系统及其他详细信息，请访问 http://www.android.com/tether。

备注：连接并使用在线服务时可能需要支付额外费用。查看网络提供商要求的数据付费。

USB 绑定和便携式 Wi-Fi 热点设置

1 在主屏上点触**应用程序**选项卡，然后选择**设置**。

2 点触**无线控件**，然后选择**绑定与便携式热点**。

3 选择您要调整的选项。

USB 绑定 – 勾选以通过 USB 连接将手机的移动网络数据连接与您的电脑进行共享。

便携式 Wi-Fi 热点 – 勾选以将您的手机网络数据连接共享为便携式 Wi-Fi 热点。

帮助 – 打开一个对话框，上面显示有关 USB 绑定与便携式 Wi-Fi 热点以及有关在哪可以了解更多的信息。

通过 USB 共享您手机的数据连接

如果您的电脑运行 Windows 7 或部分 Linux 风格的最新分发（例如 Ubuntu），通常无需准备电脑进行绑定。 但是如果运行的是较早版本的 Windows 或其他操作系统，则可能先准备您的电脑，才能通过 USB 建立网络连接。 如需获得有关哪种操作系统支持 USB 绑定以及如何配置它们的最新信息，请访问 http://www.android.com/tether。

USB 绑定和数据共享

您不能同时通过 USB 共享手机的数据连接和 microSD 卡。 如果您正在使用 USB 连接来将 microSD 卡接入您的电脑，将必须先将其断开连接。

1 使用手机附带的 USB 数据线将手机连接到电脑。
2 在主屏上点触**应用程序**选项卡，然后选择**设置**。
3 点触**无线控件**，然后选择**绑定与便携式热点**。
4 勾选 **USB 绑定**。

- 手机将开始通过 USB 连接将其移动网络数据连接与您的电脑进行共享。 持续的通知 将添加到状态栏和通知抽屉中。

5 取消选择 **USB 绑定**可停止共享您的数据连接。 或者只需断开 USB 数据线的连接。

备注：在使用 USB 绑定时，您的手机可以仅连接至 3G 网络。 在 USB 绑定状态下，Wi-Fi 网络连接将被禁用。

将手机的数据连接共享为便携式 Wi-Fi 热点

1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
2 点触**无线控件**，然后选择**绑定与便携式热点**。
3 勾选**便携式 Wi-Fi 热点**。

- 片刻之后，手机将开始广播其 Wi-Fi 网络名称 (SSID)，这样您将可以通过其连接最多五台电脑或其他设备。 持续的通知 将添加到状态栏和通知抽屉中。
- 勾选**便携式 Wi-Fi 热点**之后，您可以更改其网络名称或确保其安全。

4 取消选择**便携式 Wi-Fi 热点**以停止通过 Wi-Fi 共享您的数据连接。

重命名或确保您的便携式热点安全

您可以更改手机 Wi-Fi 网络名称 (SSID) 的名称并确保其 Wi-Fi 网络的安全。

1 在主屏上点触**应用程序**选项卡，然后选择**设置**。
2 点触**无线控件**，然后选择**绑定与便携式热点**。
3 确保勾选了**便携式 Wi-Fi 热点**。
4 点触**便携式 Wi-Fi 热点设置**。
5 点触**配置 Wi-Fi 热点**。

- 此时将打开**配置 Wi-Fi 热点**对话框。
- 您可以更改网络 SSID（名称），这将是其他电脑在扫描 Wi-Fi 网络时看到的名称。
- 您也可以点触**安全性**菜单来为网络配置 Wi-Fi 保护访问 2 (WPA2) 安全性以及预共享密钥 (PSK)。
- 如果点触 **WPA2 PSK** 安全性选项，则密码字段将会添加到**配置 Wi-Fi 热点**对话框中。 如果输入密码，您将需要在将手机的热点与电脑或其他设备连接时输入密码。 或者在安全性菜单中点触**打开**，以从 Wi-Fi 网络中删除**安全性**。

注意！
如果将安全性选项设为**开放**，则不可避免其他人在未经授权的情况下使用在线服务并可能产生额外收费。 为避免未授权使用，最好保持安全性选项。

6 点触**保存**。

设置

如何使用屏幕手机

屏幕手机允许您通过 USB 或蓝牙连接从电脑查看手机屏幕。 您也可以使用鼠标或键盘从您的电脑控制手机。

屏幕手机图标

将手机连接至电脑或从电脑断开手机连接。

旋转屏幕手机窗口（仅在应用程序支持旋转功能时可用）。

更改屏幕手机首选项。

退出屏幕手机程序。

最小化屏幕手机窗口。

屏幕手机功能

- 实时传输和控制：在连接至电脑时显示并控制您的手机。
- 鼠标控制：允许您使用鼠标在电脑屏幕上单击或拖动来控制您的手机。
- 使用键盘输入文本：允许您使用电脑键盘撰写短信或便笺。
- 文件传输（手机到电脑）：从手机发送文件（例如照片、视频、音乐和 ThinkFree Office 文件）到电脑。 只需右键单击并拖动即可将文件发送到电脑。
- 文件传输（电脑到手机）：从电脑发送文件到手机。 只需选择您要传输的文件并将其拖放到屏幕手机窗口即可。 您发送的文件存储在 micro SD 卡上。
- 实时事件通知：以弹出窗口提示的方式通知您有来电或短信/彩信，以及闹钟和事件通知。

如果在电脑上安装屏幕手机

访问 LG 主页 (http://www.lg.com) 并转到**支持 > 手机支持 > 将 LG 手机支持工具下载到电脑**。 如果下载 LG PC Suite IV，则屏幕手机程序也会下载到电脑上。 随后您便可在电脑上安装屏幕手机。

如何将手机连接至电脑

USB 连接：

1 打开连接向导，选择“USB 数据线连接”并单击“下一步”。

2 使用 USB 数据将手机连接至电脑，然后单击“下一步”。

3 输入屏幕手机密码并单击“下一步”。默认密码为“0000”。您可以在**设置 > 无线控件 > 屏幕手机设置**中更改密码。

4 单击“确定”退出窗口。

通过蓝牙无线连接：

1 在手机上，转到**设置 > 无线控件 > 蓝牙设置。**选择**打开蓝牙**并勾选**可发现。**

2 如果您以前使用数据线进行过连接，则运行“新建连接向导”创建新的连接。

3 在电脑上运行连接向导，选择“蓝牙连接”，然后选择“下一步”。

4 向导将开始搜索已启用蓝牙的手机。您希望连接的手机出现时，单击“停止”以停止搜索。

5 从设备列表中选择“LG-E720”，然后单击“下一步”。如果需要，可以重命名设备。

6 输入 PIN 码（例如“0000”）并单击“下一步”。

7 在您的手机上，接受请求并输入相同的 PIN 码，然后点触“确定”。

8 输入屏幕手机密码并单击“下一步”（默认密码为“0000”）。

9 点触“确定”退出。

检查手机到电脑的连接

设备一旦建立连接，请将主屏上方的通知栏向下拖动以检查屏幕手机连接状态。

断开手机与电脑的连接

点触主屏左上角的 。将主屏上方的通知栏向下拖动，然后选择“中断连接”。

备注：关闭屏幕手机服务后，必须重新启动手机。

软件更新

手机软件更新

从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 http://update.lgmobile.com 或 http://www.lg.com/common/index.jsp → 选择国家/地区和语言。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

通过空中下载 (OTA) 的 LG 手机软件更新

此功能允许您通过空中下载 (OTA) 方便地将手机的软件更新为最新的版本，而无需连接 USB 数据线。

首先，您可以在手机上检查软件版本：**设置 > 关于手机 > 软件更新 > 软件更新检查**。

您也可以重新设定更新前的更新计划：1 小时、4 小时、8 小时或 24 小明。 在这种情况下，应用程序将在更新时间到达时通知您进行更新。此外，您也可以手动重新设定或更新。

DivX 移动 DIVX

关于 DIVX 视频：DivX® 是由 DivX, Inc. 开发的一种数码视频格式。是经播放 DivX 视频的 DivX Certified® 官方认证的设备。 有关详细信息以及可用于将文件转换为 DivX 视频的软件工具，请访问 www.divx.com。

关于 DIVX VIDEO-ON-DEMAND：要播放 DivX Video-on-Demand (VOD) 内容，必须先注册此 DivX Certified® 设备。 要获取您的注册码，请在设备安装目录下找到 DivX VOD 部分。 转到 vod.divx.com 以获取有关如何完成注册的详细信息。

DivX Certified® 设备可播放最高为 320 x 240 的 DivX® 视频。

DivX®、DivX Certified® 及相关徽标是 DivX, Inc. 的商标，使用必须经过许可。

配件

以下配件可与 LG-E720 一起使用。
（以下配件为可选配件。）

充电器

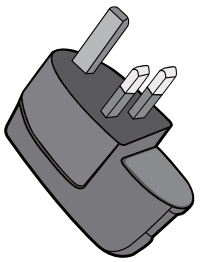

数据线

连接 LG-E720 和电脑。

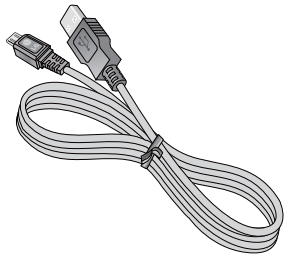

电量

用户手册

了解更多关于 LG-E720 的信息。

立体耳机

备注：

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

技术参数

外部环境

最高温度：+55℃（放电），+45℃（充电）

最低温度：-10℃

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-E720

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1 , EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2006

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declarat ion relates complies with the above mentioned standards and Directives

LG Electronics Inc. - EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name: Doo Haeng Lee / Director

Issued Date: October. 04 , 2010

Signature of representative

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。 有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，超出 GSM 网络区域。 运营商应用了新服务	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。 如果是，请到您的网络运营商营业点处更换 SIM 卡。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	默认代码为 [0000]。 如果忘记代码，请联系您的服务提供商。
任何应用程序均无法设置	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误。 插入新 SIM 卡 达到预付费限制	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。

故障排除

信息	可能原因	可行解决措施
手机无法打开	按开/关键的时间不够 电池未充电 电池触点脏	请按开/关键至少两秒钟。 充电器使用时间过长。清洁触点 取出电池并重新插入。
充电错误	电池未充电。 外部温度太热或太冷 触点问题 无电压 充电器故障 错误的充电器 电池故障	为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。 检查电池触点，如果需要，请清洁。 插入不同的插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。
不允许输入号码	已打开固定拨号功能。	检查设置。
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
文件无法打开	不受支持的文件格式	检查可支持的文件格式
存储卡不起作用	仅支持 FAT 16 文件格式	通过读卡器检查存储卡文件系统或使用手机格式化存储卡
我收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。 确保近程传感器周围的区域干净。

信息	可能原因	可行解决措施
无声音	振动或静音模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	取出电池并插入电池。 打开手机。 尝试通过网站执行软件更新服务。

关于安全有效使用手机的准则

请阅读以下简单的准则。 违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR) 信息。

此款 LG-E720 型手机已设计为遵守有关适用的无线电波暴露安全要求。 此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。 SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10 克重的人体组织吸收的能量平均值不超过 2 W/Kg。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为：每 1 克重的人体组织吸收的能量平均值不超过 1.6W/kg，此 SAR 数据适用于各个国家/地区的居民。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.52 W/kg（10 克），戴在身体上时，其值为 1.49 W/kg（10 克）。

产品保养和维护

⚠ 警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。 使用任何其他类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。 当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或

个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。 例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。 这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。 在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。 不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将备注力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。

- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。 这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。 在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。 因此，我们建议您在开机或关机时不要将手机置于耳边。 同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

备注：耳机声音和压力过度可能导致听觉受损。

玻璃部分

手机部分为玻璃制。 如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。 如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。 停止使用手机，在授权的服务提供商处更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。 请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

孩子

将手机放在儿童接触不到的安全地方。 手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。 因此，您不应仅依赖于手机的紧急呼叫功能。 请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。 与其他电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。 LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。 如果可能，请循环使用电池。 不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

LG-E720 User Guide - English

Congratulations on your purchase of the advanced and compact LG-E720 phone by LG, designed to operate with the latest digital mobile communication technology.

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.

Contents

Important notice 5

Getting to know your phone...14

Installing the SIM card and battery 16
Installing the memory card ...17
Formatting the memory card..19

Your Home screen 20

Touch-screen tips 20
Proximity sensor 20
Lock your phone 20
Unlock screen.....21
Home 21
Adding widgets to your home screen 22
Getting back to a recently used applications.....23
Onscreen keyboard 25
XT9 predictive mode 26
Abc mode.....26
123 Mode 26

Google Account Set-up 27

Creating your Google account ..27
Signing in your Google account ..27

Calls.....29

Making a call 29
Calling your contacts.....29
Answering and rejecting a call..29
Adjusting call volume 29
Making a second call 30
Viewing your call logs.....30
Call settings.....30

Contacts.....33

Searching for a contact 33
Adding a new contact.....33
Favourite contacts.....33

Messaging/E-mail.....34

Messaging.....34
Sending a message.....34
Changing your message settings 35
Opening your email 37
Reading your messages 37
Responding to a message 37
Starring messages 38
Composing and sending email 38
Working with account folders ..39
Adding and editing email accounts 39

Social networking 41

Adding your account to your phone 41
Viewing and updating your status 41

Removing accounts on your phone 42
Camera 43
Getting to know the viewfinder..43
Using the focus mode.....44
Taking a quick photo 44
Once you've taken the photo...44
Using the advanced settings ...45
Viewing your saved photos ...47
Video camera.....48
Getting to know the viewfinder..48
Shooting a quick video 49
After shooting a video.....49
Using the advanced settings ...49
Watching your saved videos..50
Adjusting the volume when viewing a video 50
Your photos and videos 51
Editing your photos 51
Multimedia.....52
To change how the contents of an album are displayed.....52
Sending a photo.....52
Sending a video 53
Music.....53
Playing a song 53
Using the radio 54
Searching for stations 54
Resetting channels.....54
Listening to the radio.....54
Transferring files using USB mass storage devices....55
How to save music/video files to the phone 56
How to move the contacts from the old phone to the current phone 56
How to send data from your phone via Bluetooth 57
Google applications 59
Google Maps™ 59
Market™ 59
Google Mail™ 60
Google Talk™.....60
Utilities.....61
Setting your alarm.....61
Using your calculator.....61
Adding an event to your calendar 61
Changing your calendar view ..62
ThinkFree Office.....62
Voice recorder 63
Recording a sound or voice...63
Sending the voice recording..63
LG Air Sync.....63

Contents

The Web 64
- Browser 64
- Using options 64
- Adding and accessing bookmarks 65
- Changing web browser settings ..65

Settings 66
- Wireless & networks 66
- Sound 67
- Display 68
- Location & security 68
- Applications 70
- Accounts & sync 70
- Privacy 71
- SD card & phone storage 71
- Search 71
- Language & keyboard 72
- Voice input & output 72
- Accessibility 74
- Date & time 74
- About phone 74
- Wi-Fi 74
- Sharing your phone's mobile data connection 75
- USB tethering & portable Wi-Fi hotspot settings 76
- To share your phone's data connection via USB 76
- USB tethering and data sharing ..77
- To share your phone's data connection as a portable Wi-Fi hotspot 77
- To rename or secure your portable hotspot 78
- How to use On-Screen Phone ..79
- On-Screen Phone icons 79
- On-Screen Phone features 79
- How to install On-Screen Phone on your PC 80
- How to connect your mobile phone to PC 80
- To check the phone to PC connection 81
- To disconnect your phone from your PC 81

Software update 82
- Phone Software update 82
- DivX Mobile 82

Accessories 83

Technical data 84

Troubleshooting 85

Guidelines for safe and efficient use 88

Important notice

Please check to see if any problems you have encountered with your phone are described in this section, before taking the phone in for service or calling a service representative.

1. Phone memory

When available space on your phone memory is less than 10%, your phone can not receive a new message. You need to check your phone memory and delete some data such as applications or messages to make more memory available.

To manage the application:

1 On the home screen, touch **Applications** tab and select **Settings** > **Applications** > **Manage applications**.

2 When all applications appear, scroll and select the application you want to uninstall.

3 Tap **Uninstall** and touch OK to uninstall application you desired.

2. Optimising battery's life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery:

- Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, turn them off.
- Turn down screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Google Mail, Calendar, Contacts, and other applications.
- Some applications you've downloaded may cause your battery's life to be reduced.

To check the battery charge level:

1 On the home screen, touch **Applications** tab and select **Settings**> **About phone**> **Status**.

2 The battery status (charging, discharging) and level (as a percentage of fully charged) are displayed at the top of the screen.

To monitor and control what uses the battery

1 On the home screen, touch **Applications** tab and select **Settings > About phone > Battery use.**

2 The top of the screen displays battery usage time. Either how long since last connected to a power source or, if connected to a power source, how long you were last running on battery power. The body of the screen lists applications or services using battery power from greatest amount to least.

3. Installing an open source OS

If you install an open source OS on your phone, and do not use the OS provided by the manufacturer, this may cause your phone to malfunction.

⚠ WARNING

If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

⚠ WARNING

To protect your phone and personal data, download applications only from trusted sources, such as Android Market. If some applications are not properly installed on your phone, your phone may not work normally or a serious error can be occurred. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using unlock pattern

Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.

> ⚠ **WARNING**
> **Precautions to take when using the Pattern Lock**
> It is very important that you remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you used all the 5 opportunities, you can attempt it after 30 seconds.

When you can't recall your unlock pattern, PIN, or password:

If you logged in Google account on the phone and failed to use correct pattern 5 times, tab the Forgot pattern button. Then, you are required to sign in with your Google account to unlock your phone.

If you haven't created a Google account on the phone or you forgot it, you need to perform a factory reset.

5. Using safe mode and hard reset

*Using safe mode

To recover from malfunction state of your phone:

1. Turn off your phone and reboot. While your phone is powering back on, touch and hold the **Menu** key ❑ while Android Logo is displayed. Your phone will boot all the way to the main screen and display "safe mode" in lower left corner.
2. Select **Applications tab** > **Settings** > **Applications** > **Manage applications**, and choose the application then select an **Uninstall** icon.
3. After uninstalling the application, turn off and reboot your phone.

*** Using Hard Reset (Factory Reset)**

If it does not restore to the original condition, use Hard Reset to initialise your phone. First turn off the phone now press and hold the **Power + Volume up + Volume down** keys at the same time (for over 10 seconds), the phone will turn on then select "Yes--Delete all user data" by pressing down volume key and then press power key to perform factory reset immediately.

Please note, after you perform **Hard Reset**, all your data and applications on your phone will be erased and cannot be reversed.

> ⚠ **WARNING**
> If you perform **Hard Reset**, all user applications and user data will be deleted. Please remember to back up any important data before performing a **Hard Reset**.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you access a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Turn off Wi-Fi when you're not using it, to extend the life of your battery.

To turn Wi-Fi on and connect to a Wi-Fi network:

1 On the home screen, touch **Applications** tab and select **Settings** > **Wireless & networks** > **Wi-Fi settings**.

2 Touch **Wi-Fi** to turn it on and begin scan for available Wi-Fi networks.

- List of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.

3 Touch a network to connect to it.

- If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
- If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)

4 The status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with music and video files, can be saved to external memory.

Before using the built-in camera, you need to insert a micro SD memory card to your phone first.

Without inserting a memory card, you will not be able to save pictures and video you had taken.

NOTE: Applications can only be saved to the phone's internal memory.

⚠ WARNING

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, please select **Applications > Settings > SD card&phone storage > Unmount SD card.**

8. Opening and switching applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There's no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

To stop the application you use

1 On the home screen, touch **Applications** tab and select **Settings** > **Applications** > **Manage applications**.

2 Scroll to the desire application and touch **Force stop** to stop using it.

TIP!

Getting back to recent Application

Touch and hold the **Home** key, then a screen will display with the list of the applications that you used recently.

9. Installing the LG PC suite on your PC

To synchronise your phone via USB cable with your PC, you need to install the LG PC suite program on your PC.

As PC suite is embedded at in-boxed SD card. you can simply copy it to your PC.

LG PC SUITE

The LG PC Suite IV is a program that helps you to connect your mobile phone to a PC using a USB data communication cable, so that you can use the functions of the mobile phone on your PC.

Major functions of the LG PC Suite IV

- Create, edit and delete phone data conveniently
- Synchronise data from a PC & phone (contacts, calendar, message (SMS), bookmark, call log)
- Transfer multimedia files (photo, video, music) conveniently with a simple drag & drop between a PC and phone
- Transfer the messages from a phone to a PC
- Use your phone as a Modem
- S/W update without loosing your data

LG-E720 does not support:

- PC Connection via Bluetooth
- To-do in Calendar
- Memo
- Java Application

For more information, please refer to the user's guide for LG PC Suite IV is in Help menu after installing LG PC Suite IV.

Installing LG PC Suite from your microSD memory card

1 Insert your microSD memory card on your phone. (It may already be inserted on your phone.)

2 Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the **Applications** tab, choose **Settings** > **SD card & phone storage**, then select **Mass storage only** check box.)

3 Connect your phone through USB data cable to your PC.

(1) In the status bar, drag the USB icon.

(2) Choose **USB Connected** and **Mount**.

(3) You can view the mass storage content on your PC and transfer the files.

(4) Copy the 'LGPCSuiteIV' folder on your mass storage to your PC.

(5) Run 'LGInstaller.exe' file on your PC and follow the instructions.

* When LG PCSuite IV installation completed, disable **Mass storage only** mode to run LG PCSuite IV.

NOTE: Please do not remove or delete other program file installed on your memory card this may cause damage to your preinstalled application on the phone.

10. Connecting your phone to a computer via USB

To transfer files using USB devices:

1 Install your microSD card on your phone. (It may already be inserted on your phone.)

2 Before connecting the USB data cable, make sure that the **Mass storage only** mode is enabled on your phone. (On the **Applications** tab, choose **Settings > SD card & phone storage**, then select **Mass storage only** check box.)

3 Use the USB cable to connect the phone to a USB port on your computer. You receive a notification that the USB is connected.

4 Open the notification drawer and touch **USB connected**.

5 Touch **Mount** to confirm that you want to transfer files between your phone's microSD card and the computer.

When the phone is connected as USB storage, you receive a notification. You phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

NOTE: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually.

TIP! To use a microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage.**

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as camera, gallery and music functions.

To disconnect your phone from the computer, carefully follow your computer's instructions to disconnect USB devices correctly, to avoid losing information on the card.

1 Safely disconnect the USB device on your computer.

2 Open the notification drawer and touch **USB Connected**.

3 Touch **Turn off USB Storage** in the dialog that opens.

11. Unlock screen when using data connection

Your display will go dark if untouched for a period of time when using data connection. To turn on your LCD screen, just press power on key and unlock it.

12. Hold your phone straight up

Please hold your phone straight up as a regular phone.The LG-E720 has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance. While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

13. When screen freezes

If the phone does not respond to user input or the screen freezes:

Remove the battery, insert it again and power on the phone. If it still does not work, please contact to the service centre.

Getting to know your phone

To turn on the phone, press and hold the **Power** key for 3 seconds.

To Turn off the phone, press and hold the **Power** key for 3 seconds and touch power off.

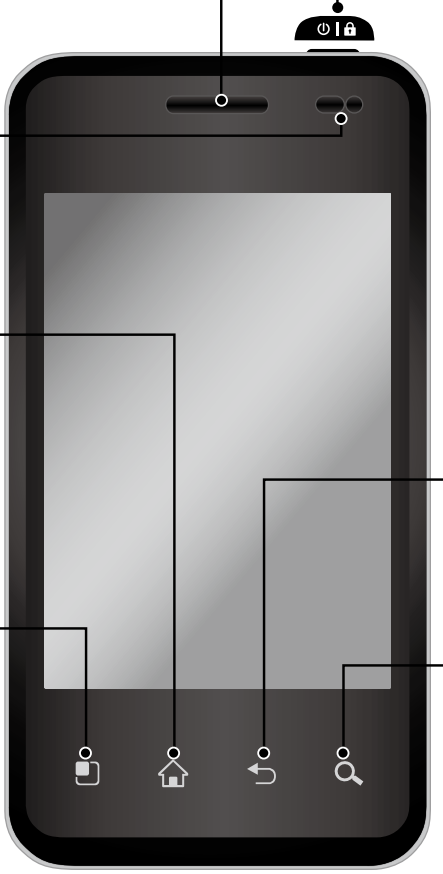

Earpiece

Proximity sensor

Power/Lock key
Powers your phone on/off by pressing and holding the key. Turns off the screen and locks.

Home key
Returns to home screen from any screen.

Back key
Returns to the previous screen.

Menu key
Check what options are available.

Search key
Search the web and contents in your phone.

⚠ WARNING

Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionalities. Do not cover the protective film on the LCD's proximity sensor. This can cause the sensor to malfunction.

TIP! Touch the **Menu** key whenever you tap an application to check what options are available.

TIP! If LG-E720 has errors when you use it or you can not turn it on, remove battery, install it again and turn it on after 5 seconds.

NOTE: LG-E720 does not support Video call.

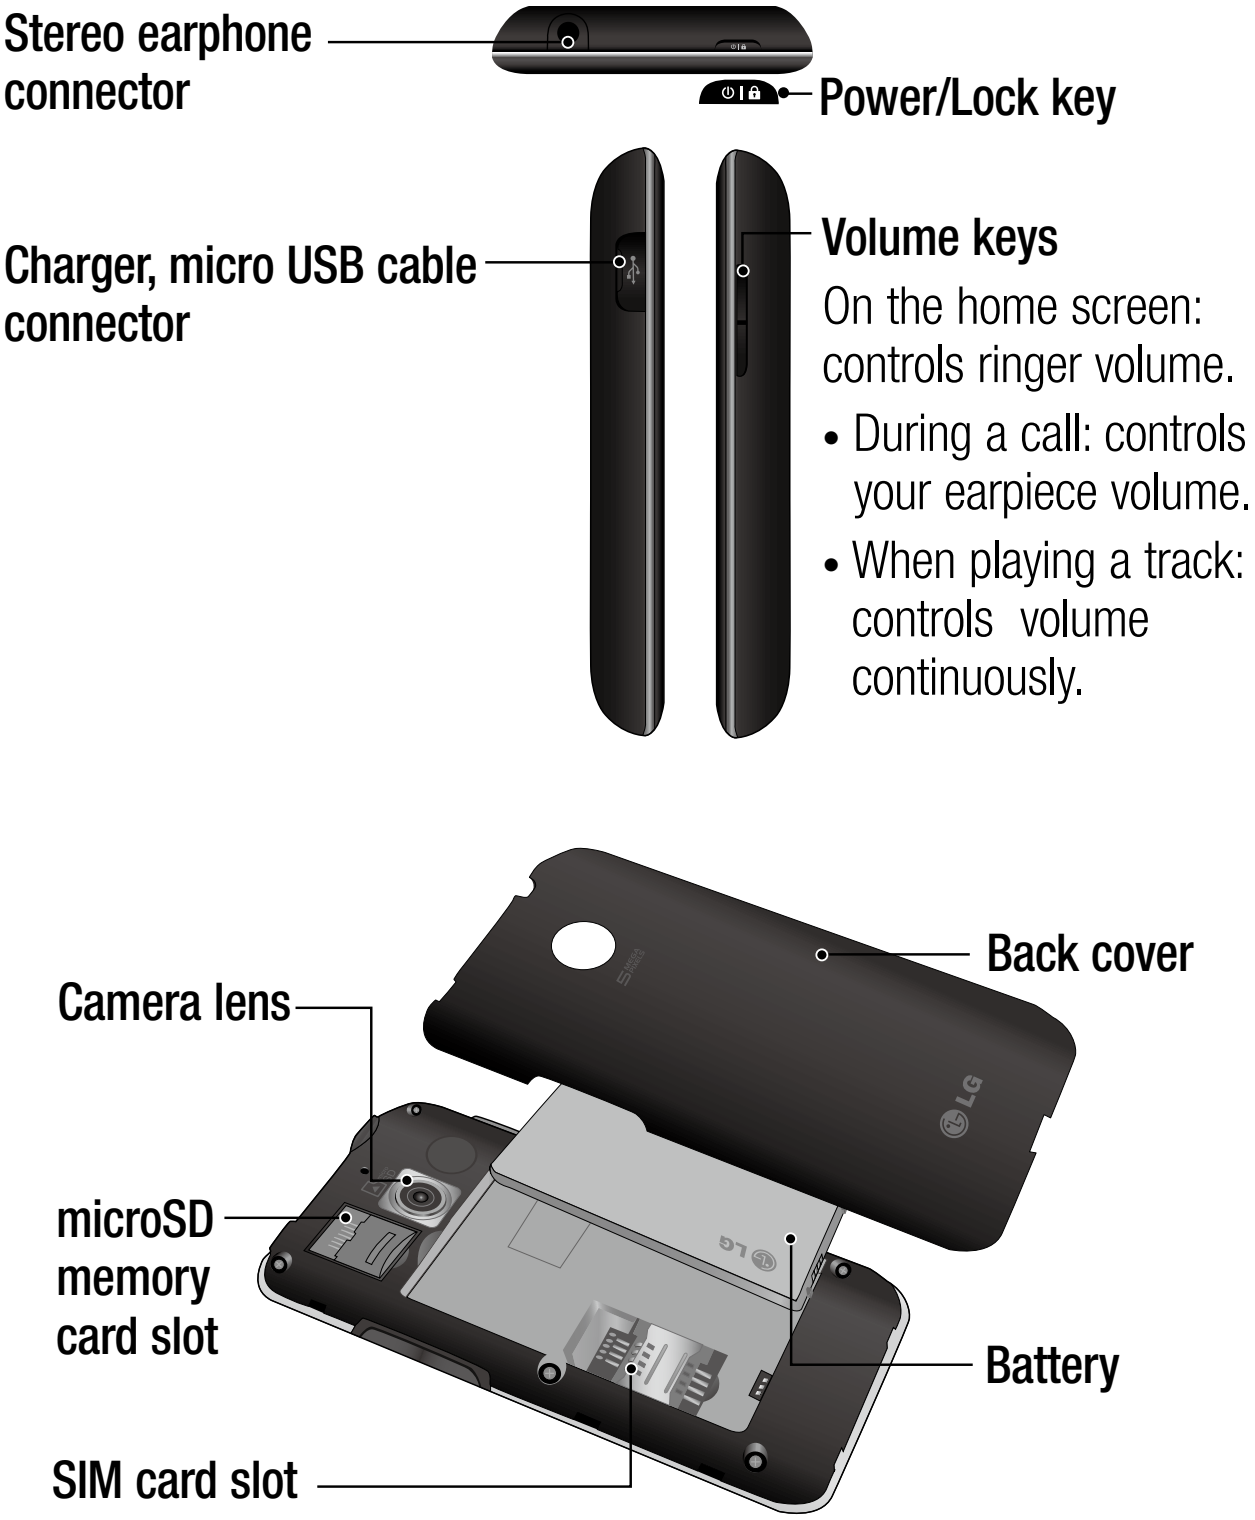
Stereo earphone connector
Power/Lock key
Charger, micro USB cable connector
Volume keys
On the home screen: controls ringer volume.
• During a call: controls your earpiece volume.
• When playing a track: controls volume continuously.
Back cover
Camera lens
microSD memory card slot
Battery
SIM card slot

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set It up. To insert the SIM card and battery:

1 To remove the back cover, hold the phone on your hand firmly. With the other hand, firmly press your thumb on the back cover. And lift off the battery cover with your forefinger.

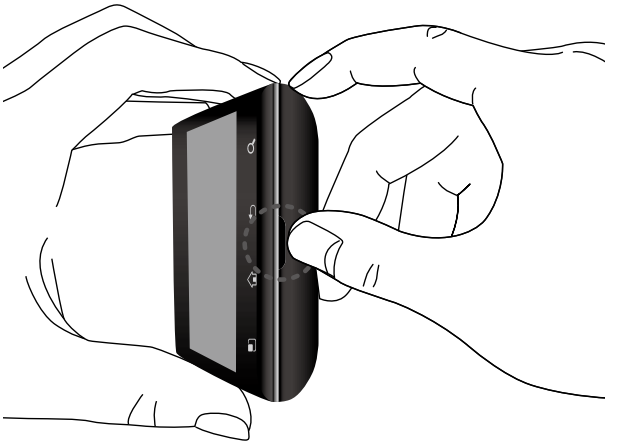

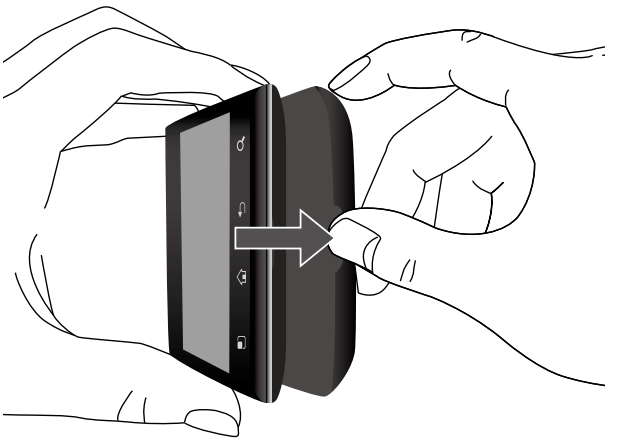

2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

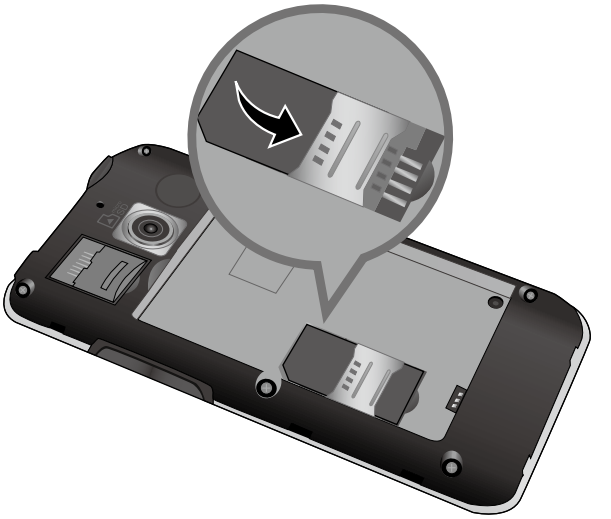

3 Insert the battery into place by aligning the gold contacts on the phone and the battery, then gently press the battery until it snaps into space.

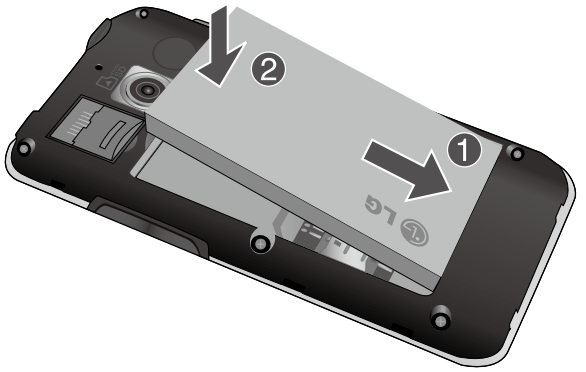

4 Replace the back cover of the phone.

Charging your phone

Slide back the cover of the charger connector on the side of your LG-E720. Insert the charger, and plug it into an electrical outlet. Your LG-E720 must be charged until you can see .

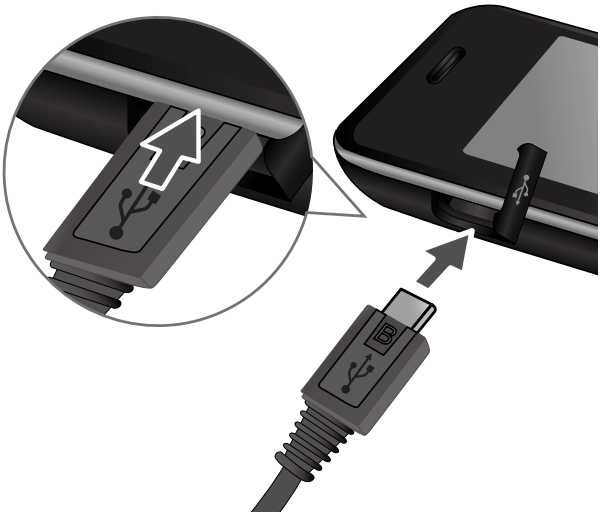

NOTE: The battery must be fully charged initially to improve battery lifetime.

Installing the memory card

To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.

Getting to know your phone

NOTE: The LG-E720 supports upto a 32GB memory card.

To insert a memory card:

1 Turn the phone off before inserting or removing the memory card. Remove the back cover.

2 Open the slot protection and insert the memory card into the slot. Make sure the gold contact area is facing downwards.

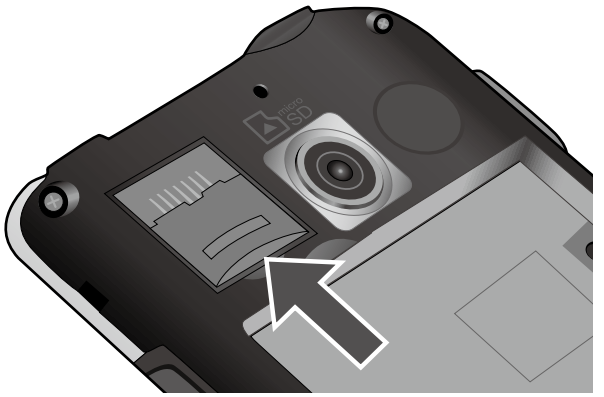

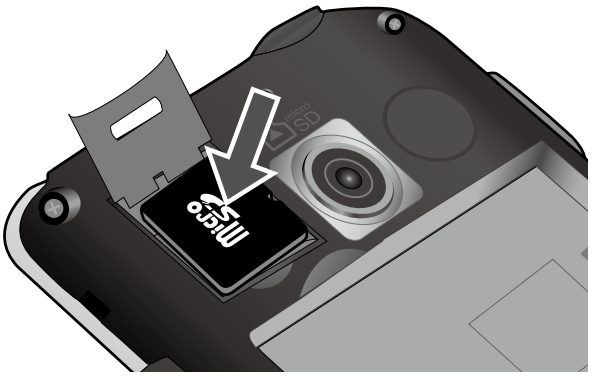

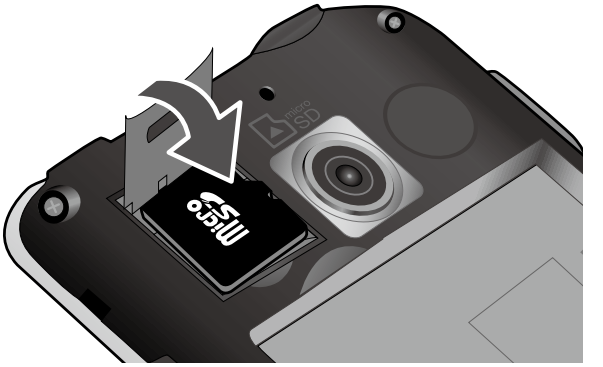

3 Close the slot protection.

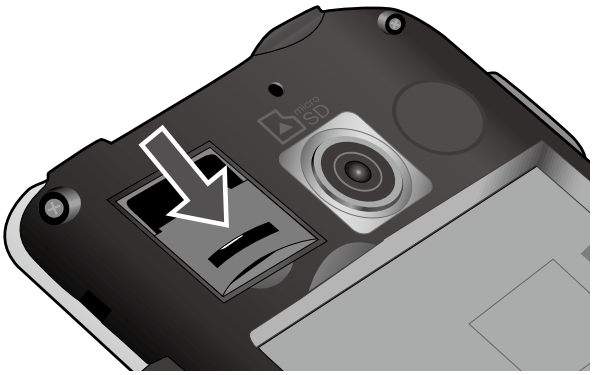

⚠WARNING

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you use it.

NOTE: All files on the card are deleted when you format the card.

1. On the home screen, touch **Applications** tab to open the applications menu.
2. Scroll and touch **Settings**.
3. Scroll and touch **SD card & phone storage**.
4. Touch **Unmount SD Card**.
5. Touch **Format SD card**, then confirm your choice.
6. If you set the pattern lock, input the pattern lock and select **Erase Everything.** The card will then be formatted and ready to use.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

TIP!

If your memory card is already unmount, you can use the following step to format it. Touch **Applications > Settings > SD card & phone storage > Format SD Card.**

Your Home screen

Touch-screen tips

Here are some tips on how to navigate around your phone.

Touch - To choose a menu/ option or open an application, touch it.

Touch and hold - To open an options menu or grab an object you want to move, touch and hold it.

Drag - To scroll through a list or move slowly, drag across the touch screen.

Flick - To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Proximity sensor

When receiving and making calls, this sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

Lock your phone

When you are not using LG-E720, press the **Power** key to lock your phone. This helps to prevent accidental presses and saves battery power.

If you do not use the phone for a while, the home screen or other screen you are viewing, is replaced with the lock screen to conserve the battery.

NOTE: If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended to exit all programs before entering the lock mode to avoid

unnecessary charges. (e.g., phone call, web access and data communications)

TIP! Setting unlock pattern

You can draw your own unlock pattern by connecting four or more dots.
If you set a pattern, the phone's screen is locked. To unlock the phone, draw the pattern you set on the screen.

Caution: When you set an unlock pattern, you need to create your Google Mail account first. If there are more than 5 pattern drawing errors in a row, you cannot unlock the phone. In this case, your personal information and downloaded data will be deleted.

Unlock screen

To wake up your phone, press the **Power** key. The lock screen will appear. Touch the unlock icon and drag your finger to the right to unlock your home screen. The last screen you were working on opens.

Silent Mode

From the notification drawer, touch to be . Or, if you don't use unlock pattern, simply drag to the left.

Home

Simply swipe your finger to the left or right to view them.
You can also customise each panel with widgets, shortcuts which are shortcuts to your favourite applications, folders and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.

In your home screen, you can view quick keys on the bottom

of the screen. The quick keys provide easy, one-touch access to the functions you use the most.

Touch the **Phone** icon to bring up the touch-dialling pad to make a call.

Touch to open your contacts.

Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. Just touch to scroll through your applications.

Touch the **Message** icon to access the messaging menu. Here, you can create a new message.

Touch to open Google site.

Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, or folders to it. For more convenience in using your phone, add your favourite widgets on the home screen.

To add a desired icon to your home screen:

1. On the home screen, touch **Menu** key and select **Add**. Or long touch the empty part of the home screen.
2. On the **Add to Home screen** menu, touch the type of item you want to add.
3. For example, select **Folders** from the list and tap it. Select **Contacts with phone numbers** from the list and tap it.
4. You will see a new folder's icon on the home screen. Drag it to the desired location on the desired panel and release your finger from the screen.

TIP! To add an application icon to home screen, from the Applications menu, touch and hold an application you want to add to home screen.

To remove an application icon from the home screen:

1. Touch and hold that icon you want to remove. The **Applications** icon will be change as the trash icon .

2 Drag and drop an application icon to the trash icon .

NOTE: You cannot delete the preloaded applications. (Only their icons can be deleted from the screen.)

Getting back to a recently used applications

1 Touch and hold the **Home** key. The screen will show you a pop up with icons of applications that you've used recently.

2 Touch an icon to open its application. Or, touch **Back** key to return to the current application.

Notification drawer

The notification drawer runs across the top of your screen.

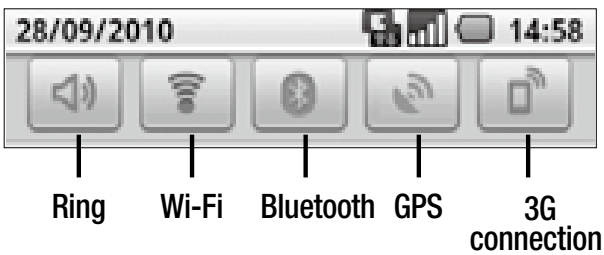

Touch and slide the notification drawer down with your finger.

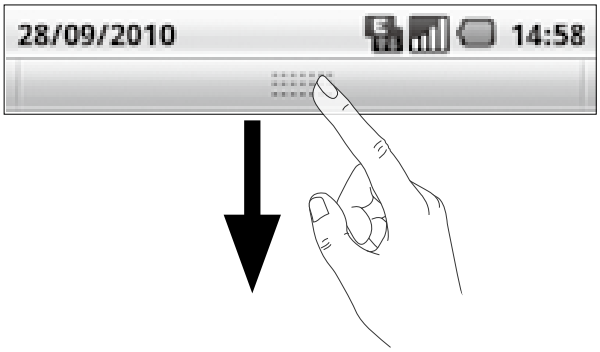

Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can check and manage Wi-Fi, Bluetooth, GPS status as well as other notifications.

Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life,active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.

Your Home screen



[Status bar]

Icon	Description
	No SIM card
	No signal
	Connected to a Wi-Fi network
	Wired headset
	Call forward
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning
	Alarm is set

Icon	Description
	New voicemail
	Airplane mode
	Ringer is silenced
	Vibrate mode
	No microSD card
	Battery fully charged
	Battery is charging
	Data in
	Data out
	Data in and out
	Phone is connected with PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	On-Screen Phone connected

Icon	Description
	2 more notifications not displayed
	Call in progress
	Data is syncing
	Download finished
	New Google Mail
	New Google talk message
	New message
	Song is playing
	Upcoming event
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

Onscreen keyboard

You can also enter text using the onscreen keyboard. The onscreen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & Entering text

Touch once to capitalise the next letter you type. Double-tap for all caps.

Tap to turn on or off XT9 predictive mode.

Tap to view the settings menu.

Tap to switch to the numeric and symbol keyboard.

Tap to create a new line in the message field.

Tap to hide the onscreen keyboard.

Tap to delete the previous character.

 Go forward or backword between letters.

 Tap to enter a space.

XT9 predictive mode

The onscreen keyboard has predictive text to help you type quickly and accurately. XT9 predictive mode uses a built-in dictionary to recognise words based on the key number sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

Abc mode

This mode allows you to enter letters by touching the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

Creating your Google account

1 On the home screen, touch **Applications** tab to open the applications menu.

2 Tap **Google Mail** and tap **Next > Create** to start the Google Mail set up wizard.

3 Touch a text field to open the touch keyboard, and enter your name and username for your Google account. When you entering the text, you can move to the next text field by touching **Next** on the keyboard.

4 When you're finished to input name and username, tap **Next**. Your phone is communicating with Google servers and checking username availability.

5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing in your Google account

1 Tap Google Mail and tap Next > Sign In.Now Enter your e mail address and password, then tap Sign in. Wait for signing in.

2 After sign in, you can use Google Mail and take advantages of Google services on your phone.

3 Once you have set up your Google account on your phone, your phone will be automatically synchronised with your Google account on the web. (It depends on your synchronisation settings.)

Google Account Set-up

After sign in, you can use Google Mail, Google Calendar, Android Market and Google Map; download applications from Android Market; back up your settings to Google servers; and take advantage of other Google services on your phone.

IMPORTANT!

- Some applications, such as Calendar, work only with the first Google Account you add. If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Google Mail messages, calendar events, and other information from these applications and services on the web are synchronised with your phone. If you don't sign into a Google account during setup, you will be prompted to sign in or to create a Google account the first time you start an application that requires one, such as Google Mail or Android Market.
- If you want to use the backup feature to restore your settings to this phone from another phone that was running Android OS or later, you must sign into your Google account now, during setup. If you wait until after setup is complete, your settings will not be restored.
- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign into that account.

Calls

Making a call

1 Touch to open the keypad.

2 Enter the number on the keypad. To delete a digit, touch the **Clear** icon .

3 Touch the **Call** icon to make a call.

4 To end a call, touch **End** icon .

TIP! To enter “+” to make international calls, touch and hold down .

Calling your contacts

1 Touch to open your contacts.

2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.

3 In the list, touch the contact you want to call.

Answering and rejecting a call

When screen locked:

When your phone rings, drag the **Answer** icon to the right for receiving the call.

Drag **Decline** icon to the left to reject an incoming call. Touch **Excuse messages** icon between "Answer" and "Decline" if you want to send one.

When screen unlocked:

When your phone ring, touch the **Answer** icon for receiving the call. Touch **Decline** icon to reject an incoming call.

Touch **Excuse messages** icon between "Answer" and "Decline" if you want to send one.

Adjusting call volume

To adjust the in-call volume during a call, use volume up & down key on the right side of the phone.

Making a second call

1 During your initial call, touch .

2 Dial the number, or search your contacts to select the number you want to call.

3 Touch the **Call** icon to connect the call.

4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.

5 Touch to toggle between calls.

NOTE: You can touch to make a conference call.

6 To end active calls, touch **End**. To end all calls at the same time, touch the Menu key and select **End all calls**.

NOTE: You will be charged for each call you make.

Viewing your call logs

On the home screen, touch or and choose **Call log** tab.

View a complete list of all dialed, received, and missed voice calls.

TIP! Touch any single call log entry to view the date, time, and duration of the call.

TIP! Touch the **Menu** key, then touch **Clear call log** to delete all the recorded items.

Call settings

You can configure phone call settings, such as call forwarding, and other special features offered by your carrier.

1 On the home screen, touch **Applications** tab to open the applications menu.

2 Scroll and touch **Settings**.

3 Tap **Call settings**, and choose options that you want to adjust.

< Fixed Dialing Numbers >

Select **Fixed Dialing Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Set up your voicemail number.

Voicemail service – Allows you to select your carrier's voicemail service or another service.

Voicemail settings – If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

TTY mode – Allows you to set TTY mode to communicate with other TTY devices.

Excuse Messages – When you reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

Call forwarding – You can configure how your calls are forwarded when you're on the phone, when you don't answer, and so on. Choose from **Always forward, Forward when busy, Forward when unanswered,** or **Forward when unreachable**.

Then enter the number to forward to.

NOTE: Diverting calls will incur charges. Please contact your network operator for details.

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – View the charges applied to your calls. (This service is network dependent; some operators do not support this function.)

Call duration – View the duration of all calls including all, dialled, received calls and the last call.

Additional settings – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call.
- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on a call. (Depends on your network provider.)

Contacts

You can add contacts on your phone and synchronise them with the contacts in your Google account or other accounts that support syncing contacts.

Searching for a contact

1 On the home screen, touch to open your contacts.

2 Touch **Search** and enter the contact name using the keypad.

Adding a new contact

1 On the home screen, touch , and enter the new contact's number, then touch the **Menu key**, touch **Add to contact** and then **Create new contact**.

2 If you want to add a picture to the new contact, touch . Choose from **Take a picture** or **Pick from gallery**.

3 Select the contact type by touching .

4 Touch a text field to open the touch keyboard, and enter a new contact's name.

5 Touch a category of contact information and enter the details about your contact.

6 Touch **Done** to save the contact.

Favourite contacts

You can classify frequently called contacts as favourites.

To add a contact to your favourites:

1 On the home screen, touch to open your contacts.

2 Touch a contact to view its details.

3 Touch the star to the right of the contact's name. The star turns gold.

To remove a contact from your favourites list:

1 On the home screen, touch to open your contacts.

2 Touch the **Favorites** tab and choose a contact to view its details.

3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Messaging/E-mail

Messaging

Your LG-E720 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

1 Touch icon on the home screen, and touch **New message** to open a blank message.

2 Enter a contact name or call number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

NOTE: You will be charged for a text message for every person you send the message to.

3 Touch **Type to compose** below to start entering your message.

4 Touch the **Menu** key to open the options menu. Choose from **Call**, **Add subject**, **Attach**, **Send**, **Insert smiley**, **Discard**, **Templates**, **All threads** and **Add to Contacts**.

5 Touch **Send** to send your message.

6 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

> ⚠ **WARNING**
>
> The 160-character limit may vary from country to country depending on how the SMS is coded and language.

> ⚠ **WARNING**
>
> If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.

NOTE: When you get an SMS message during a call, there will be ring notification.

Changing your message settings

Your LG-E720 message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon on the home screen, and touch the **Menu** key, then tap **Settings**.

< Storage settings >

Delete old messages – Touch to place a checkmark and allow the phone to delete older messages in a thread when the Text message limit or Multimedia message limit is reached.

Uncheck to keep all messages.

Text message limit – Touch to set the number of messages to save per thread of text messages.

Multimedia message limit – Touch to set the number of messages to save per thread of multimedia messages.

<Text message (SMS) settings>

Delivery reports – Activate to receive confirmation that your messages have been delivered.

Manage SIM card messages – Manage the messages stored on your SIM card.

Validity period – Choose how long your messages are stored in the message centre.

Text message centre – Enter the details of your message centre.

<Multimedia message (MMS) settings>

Delivery report – Choose to request a delivery report.

Delivery report allow – Choose to allow the sending of delivery confirmation message.

Read reports – Choose to request a read report for each message you send.

Read report allow – Choose to allow the sending of read confirmation message.

Auto-retrieve – Activate to retrieve messages automatically.

Roaming auto-retrieve – Activate to retrieve messages while roaming.

Set priority – Choose the priority level of your MMS.

Validity period – Choose how long your message is stored in the message centre.

Creation mode

- **Restricted:** In this mode, the MMS Client device only creates and sends messages with content belonging to the Core MM Content Domain.
- **Warning:** In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.
- **Free:** In this mode, the MMS Client allows the user to add any content to the message.
- **Receive advertisement** – Allows receiving advertisement messages.

< Info. Service settings >

Choose whether to receive, block, or view or edit channels to receive information service messages (cell broadcast messages). Also choose the languages of information service messages.

< Service message >

Choose whether to receive or block service messages.

< Notification settings >

Activate to display message notifications in the status bar.

Also select a ringtone and activate vibrate to alert you of new messages.

Opening your email

You can use the **Email** application to read email from services other than Google Mail. The **Email** application supports the following account types: POP3, IMAP and Exchange.

1 On the home screen, touch **Applications** tab and tap **Email** to view the mail boxes for each email account. Or, you can also touch **Email** on the home screen to access directly.

2 The first time you open the **Email** application, a setup wizard opens to help you to add an email account.

3 After the initial setup, **Email** displays the contents of your **Inbox** (if you have only one account) or the **Accounts** screen (if you have multiple accounts).

Reading your messages

Touch the message you want to read. The message opens in a screen that includes information about who sent it, the date it was sent, and other related information. You can touch that status indicator to open **Quick Contact**.

Responding to a message

You can reply to it, forward it or even just delete it.

To mark a message as unread:

You can set a message to appear as though it has not been read – for example, to remind yourself to read it again later.

- While reading a message, touch the **Menu** key and touch **Mark as unread**.

To delete a message:

- While reading a message, touch the **Delete** key, or touch the **Menu** key and then select **Delete**.

Messaging/E-mail

For many types of accounts, deleted messages are moved to a **Trash** folder, so you can retrieve them in case they were deleted by mistake.

Starring messages

You can add stars to important messages to make it easy to keep track of them.

To star a message:

- While reading a message, touch the star in its header.
- From the list of messages in a folder, touch a message's star. The star turns gold.

To unstar a message:

- Touch the star again.

To view your starred messages:

- Press menu key in List view,then select Accounts.
- Touch **Starred**.
  A folder opens with your starred messages.

Composing and sending email

To compose and send a message:

1. While in the **Email** application, touch the **Menu** key and touch **Compose**.
2. Enter an address for the message's intended recipient. As you enter text, matching addresses are offered from your contacts. Separate multiple addresses with commas.
3. Touch the **Menu** key and touch **Add Cc/Bcc** to be able to Cc or Bcc other contacts/ email addresses.
4. Enter the text of the message.
5. Touch the **Menu** key and touch Add Attachment to send a file with the message.

6 Touch **Send.**
If you're not ready to send the message, touch **Save as draft** to save it in a **Drafts** folder. Touch a draft message in a **Drafts** folder to resume working on it. Your message will also be saved as a draft if you touch the **Back** key before sending it. Touch **Discard** to abandon and delete a message, including any saved drafts. If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your **Outbox** folder until you're connected to a network again. If it contains any pending messages, the **Outbox** is displayed on the **Accounts** screen.

Please note that messages sent using an Exchange account will not be located on the phone; they will, however, be located on the Exchange server itself.

If you want to see your sent messages in the **Sent** folder (or with the Sent label), you will often need to open the **Sent** folder/label present in the folder list and select **Refresh** from the options menu.

Working with account folders

Each account has **Inbox**, **Outbox, Sent**, and **Drafts** folders. Depending on the features supported by your account's service provider, you may have additional folders.

Adding and editing email accounts

To add an email account:

1 Touch the **Menu** key and touch **Add account**.

2 Touch **Next**. Or, if you need to enter email account settings.

3 Enter a name for the account, confirm how you want your name to appear in outgoing mail, then touch **Done**.

Messaging/E-mail

To change an account's settings:

1 Open the **Accounts** screen from Options Menu.

2 Touch and hold the account whose settings you want to change. In the menu that opens, touch **Account settings**.

To delete an email account:

1 Open the **Accounts** screen from Options Menu.

2 Touch and hold the account you want to delete.

3 Touch **Remove account** in the menu that opens.

4 Touch **OK** in the dialog box to confirm that you want to delete the account.

Social networking

With your phone, you can enjoy the social networking and manage your micro-blog in on-line communities. You can update your current status, upload photos and view your friends' status updates real-time.

If you don't have an account, you can visit their sites to set it up.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Adding your account to your phone

1 On the home screen, touch **Applications** tab to open the applications menu.

2 Choose any SNS application you want to use.

3 Enter your e-mail address and password that you set up on your community, then tap **Log in**.

4 Wait while your details are checked with your community.

5 If you tap your community, you can see the current status of your social community.

TIP! If you add a social networking widget on your home screen, the widget will show your status when your phone updates from the network.
You can also access the social community directly by touching up the widget.

Viewing and updating your status

1 Choose a community you want to access.

2 You can see the current status of your social community.

3 You can update your current status with comments or uploading photos.

NOTE: This is dependent on network services.

TIP! You can use information about friends only in SNS or sync all data to contacts.

Removing accounts on your phone

1 Choose **Applications** > **Settings** > **Accounts & sync**.

2 Choose an account you want to delete, then touch **Remove account**.

Camera

Getting to know the viewfinder

Brightness – This defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards "-" for a lower brightness image, or towards "+" for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys.

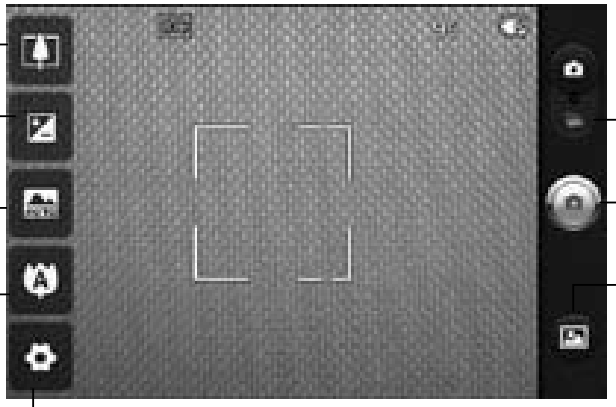

Video mode – Slide down this icon to switch to video mode.

Taking a photo

Gallery – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Focus – Touch this icon to select the options menu. See **Using the focus mode**.

Scene mode – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, and **Night**.

NOTE: You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to take a picture nor save the picture you had taken.

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Using the focus mode

You can select the focus mode as following options;

Auto – Set the camera to focus automatically.

Macro – Macro mode allows you to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

Face tracking – If you set Face tracking and take a photo, your camera detects and focuses on human faces automatically.

Manual – Set the camera to focus manually.

Taking a quick photo

1 Open the Camera application.

2 Holding the phone horizontally, point the lens towards the subject you want to photograph.

3 Touch the Shutter icon . The camera brings the image into focus. When the image is in focus, the focus indicators in each corner turn green and the camera takes a picture.

Once you've taken the photo

Your captured photo will appear on the screen.

Share — Touch to share your photo as **Bluetooth**, **Email**, **Facebook for LG, Google Mail**, **Messaging, MySpace for LG, New Weibo, Picasa** or **Twitter for LG.**

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Set as Touch to set the image as **Contact icon** or **Wallpaper**.

Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image using various tools

Touch to delete the image.

Touch to take another photo immediately. Your current photo will be saved.

Touch to view a gallery of your saved photos.

Using the advanced settings

In the viewfinder, touch to open all advanced options.

You can change the camera setting by scrolling. After selecting the option, touch the **Back** key.

Image size – Touch to set the size (in pixels) of the picture you take. Select a pixel value from the numerical options: **5M (2592X1944), 3M (2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480), QVGA (320x240)**.

ISO – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash. Select from ISO values of **Auto**, **400, 200** and **100**.

White balance – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Color effect – Choose a colour tone for your new photo. Choose from **Off, Mono, Negative, Solarize,** and **Sepia**.

NOTE: You can change a colour picture to black and white or sepia, but you cannot change a black-and-white or sepia picture to colour.

Timer – The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

Shot mode – Choose from **Normal, Continuous shot, Smile shot, Beauty shot, Art shot, Panorama, Face effect** and **Cartoon.**

Image quality – Choose from **Super fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Auto review – If you set Auto review on, it will show you the picture you just had taken automatically.

Shutter sound – Select one of the four shutter sounds.

Tag location – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available when GPS is active.

Restore all camera default settings.

Touch whenever you want to know how this function operates. This provides you a quick guide.

TIP! When you exit the camera, all settings will return to their defaults, except image size and image quality. Any nondefault settings must be reset, such as colour tone. Check these before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

Viewing your saved photos

1 You can access your saved photos from within the camera mode. Just touch your gallery will appear on the screen. Touch the photo on the screen then you will see **Slideshow** and **Menu**.

TIP! Flick left or right to view other photos or videos.

Touch to see slide show.

Touch **Menu** and select options you want. You can share the contents or delete a photo. Touch **More** for more options below.

Detail - Check information of contents.

Set as - Set as contact icon or wallpaper.

Crop -Crop your photo. Move your finger across the screen to select the area.

Rotate Left/Rotate Right - Rotate left or right.

Edit - Touch to edit the image using various tools.

Video camera

Getting to know the viewfinder

Brightness – This defines and controls the amount of sunlight entering the Video. Slide the brightness indicator along the bar, towards "-" for a lower brightness Video, or towards "+" for a higher brightness Video.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys. Before start recording a video, you can use the zoom function. You can not control the zoom function during recording.

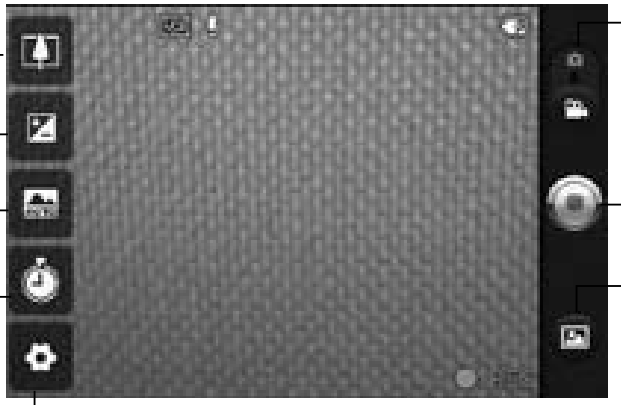

Camera mode – Slide up this icon to switch to camera mode.

Start recording

Gallery - This enables you to access your saved videos from within the video mode. Simply touch, and your gallery will appear on the screen.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Duration – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

Scene mode – Set the camera to adjust to the environment. Choose from **Auto** or **Night**.

Shooting a quick video

1 Open the Camera application and slide the camera mode button down to the Video position, the Shutter icon will change to .

2 The video camera's viewfinder will appear on the screen.

3 Holding the phone horizontally, point the lens towards the subject of the video.

4 Touch the Start Video icon .

5 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.

6 Touch the Stop Video icon to stop recording.

After shooting a video

A still image representing your video will appear on the screen.

Play Touch to play the video.

Share Touch to share your video as **Bluetooth**, **Email**, **Google Mail**, **Messaging** or **YouTube.**

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Rename Touch to edit the name of the selected video.

Touch to delete the video you just made, and confirm by touching **OK**. The viewfinder will reappear.

Touch to shoot another video right away. Your current video will be saved.

Touch to access the media player and view the saved videos.

Using the advanced settings

Using the viewfinder, touch to open all the advanced options. Adjust the video camera setting by scrolling the wheel. After selecting the option, touch the **Back** key.

Video size – Touch to set the size (in pixels) of the video you record. Choose your video image

size from VGA (640x480), QVGA (320x240) or QCIF (176x144).

White balance – The white balance ensures any white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Color effect – Choose a colour tone to use for your new view. Choose from **Off, Mono, Negative, Solarize,** and **Sepia**.

TIP! You can change a video shot in colour to black and white or sepia, but you cannot change a black-and-white or sepia video to colour.

Video quality – Choose from **Super fine, Fine** and **Normal.**

Audio recording – Choose **Mute** to record a video without sound.

Auto review – If you set this **On**, it will show you the video you just recorded automatically.

Reset all the video camera settings.

Touch whenever you want to know how this function operates. This is provide you a quick guide.

Watching your saved videos

1 In the viewfinder, touch .

2 Your gallery will appear on the screen.

3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the right side of the phone.

Your photos and videos

Editing your photos

You can do lots of great things to your photos to change them, add to them or live them up.

1 Open the photo you want to edit and touch the **Menu** key and select **More** > **Edit**.

2 Touch the options to alter your photo:

Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.

Tools Select the option you want to use.

Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.

Erase the editing you have done to the picture. You can choose the size of eraser you use.

Adding writing on a picture.

Decorate your photo with stamps. Choose from the different stamps and touch your photo where you want to place them.

Filter Touch to open the filter options.

Image Touch to open further effect options including **Rotate**. There are also more advanced editing options.

Adjust This helps to adjust a picture taken using automatic colour, brightness etc.

Save Save the changes you have made to the photos. Select **Update** to save the changes over the original file, or as a **New file**. If you select **New file**, enter a file name.

Undo Undo the last effect or edit you made to the photo.

Set as Touch to set the edited photo as **Contact icon** or **Wallpaper**.

Share You can share the edited photo as **Bluetooth, Email, Facebook for LG, Google Mail, Messaging, MySpace for LG, New Weibo, Picasa** or **Twitter** for **LG**.

Multimedia

You can store multimedia files to a memory card to have easy access to all your image and video files.

Touch **Applications** tab, then select **Gallery**.

NOTE: Make sure you install a memory card into the phone to save photos and access all your pictures. Without a memory card, the phone will not display any photos or videos except Picasa images which are in your Picasa album.

To change how the contents of an album are displayed

You can view the images and videos in your albums in a chronological grid or in stacks, sorted by the date and the location where they were taken. Use the Album View switch at the top right of the screen to switch between grid and stack view.

Drag the Album View switch to the left to view the album contents in a chronological grid.

Drag the Album View switch to the right to view the contents of the album in stacks.

Sending a photo

1. To send a photo, touch a photo you want.
2. Touch **Menu** and select **Share**. Choose from **Facebook for LG, MySpace for LG, Twitter for LG, Messaging, Bluetooth, Email, New Weibo, Picasa** or **Google Mail.**
3. When you choose **Messaging, Email,** or **Google Mail,** your photo will be attached to a message, then you write and send the message normally.

TIP! If you have a SNS account and set it up on your phone, you can share your photo to SNS community.

Sending a video

1 To send a video, touch the video you want.

2 Select **Share**. Choose from **Messaging, Bluetooth, Email, YouTube,** or **Google Mail.**

3 When you choose **Messaging, Email** or **Google Mail,** your video will be attached to a message, then you write and send the message normally.

Music

Your LG-E720 has a built-in music player that lets you play all your favourite tracks. To access the music player, touch **Music**.

Playing a song

1 On the home screen, touch **Applications** tab and select **Music**.

2 Touch **Songs**.

3 Select the song you want to play.

4 Touch to pause the song.

5 Touch to skip to the next song.

6 Touch to go back to the first part of the song. Touch two times to go back to the previous song.

To change the volume while listening to music, touch the up and down volume keys on the right side of the phone.

Touch and hold any song in the list. It will display **Play, Add to playlist, Use as phone ringtone, Delete, Details,** and **Search** as options.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Using the radio

Your LG-E720 has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

NOTE: You must attach your headphones to listen to the radio. Insert them into the headphone jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning in.
You can store up to 48 channels on your phone.

To tune in automatically:

1. On the home screen, touch **Applications** tab and select **FM radio**.
2. Touch the **Menu** key and touch **Auto scan**.
3. If there are pre-set channels, you will see a pop-up with 'Reset all channels and start Auto scan?'. If you choose **Yes**, all the pre-set channels will be deleted and auto scan will start.
4. During auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels before you stop scanning will be saved.

NOTE: You can also manually tune in to a station using the displayed wheel.

Resetting channels

Touch the **Menu** key and choose **Reset Channel** to reset the current channel, or choose **Reset All Channels** to reset all the channels.

Listening to the radio

1. On the home screen, touch **Applications** tab and select **FM radio**.

2 Touch the channel number of the station you want to listen to.

3 Touch **Listen Via** and you can set **Speaker** or **Wired headset** to listen to the radio.

TIP! To improve radio reception, extend the headset cord, which functions as the radio antenna.

⚠ **WARNING**
If you connect a headset not specifically made for radio reception, radio reception may be poor.

Transferring files using USB mass storage devices

To transfer files using USB devices:

1 Connect the LG-E720 to a PC using a USB cable.

2 If you didn't install LG Android Platform Driver on your PC, you need to change settings manually. Choose **Settings** > **SD card & phone storage** > activate **Mass storage only**.

3 Touch **Turn on USB storage**.

4 You can view the mass storage contents on your PC and transfer the files.

NOTE:

- You need to install your microSD card first. Without a microSD card, you cannot use USB mass storage.
- If you installed LG Android Platform Driver, you will see pop up with 'Turn on USB storage' immediately.
- After using USB mass storage function, if you want to synchronise your phone with your PC using the LG PC suite, you need to touch **Settings** > **SD card & phone storage**, then touch the checkmark to turn off **Mass storage only** mode.

How to save music/video files to the phone

1 Connect your phone to the PC using the USB cable.

- Touch and drag down the status bar on the home screen. Select **USB connected** > **Turn on USB storage** > **Open folder to view files**.
- If you didn't install LG Android Platform Driver on your PC, you need set it manually. For more information, refer to 'Transferring files using mass storage devices'.

2 Save music or video files from the PC to the phone's removable storage.

- You may copy or move files from the PC to the phone's removable storage using a card reader.
- If there is a video file with a subtitle file (.smi or .srt file with the same name as the video file), place them in the same folder to display the subtitle automatically when playing the video file.
- When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to the phone.

How to move the contacts from the old phone to the current phone

Export your contacts as a CSV file from your old phone to the PC using a PC sync program.

1 Connect your Android mobile phone to the PC using the USB cable and Run the PC Sync Program.

2 Select the **Contacts** icon. Go to **Menu** > **File** > **Import** and select the CSV file saved in the PC.

3 If the fields in the imported CSV file are different from the ones in Mobile Sync for Android, you need to map the fields. After mapping the fields, click OK. Then, the contacts are added in Mobile Sync for Android.

4 If the connection of LG-E720 phone (using the USB cable) is detected by Mobile Sync for Android, click "Sync" or "Sync contacts" to synchronise the contacts saved in the PC to your phone and save them.

How to send data from your phone via Bluetooth

You can send data via Bluetooth by running a corresponding application, not from Bluetooth menu, unlike regular mobile phones.

- **Sending pictures:** Run the **Gallery** application and select **Picture** > **Menu**. Click **Share** and select **Bluetooth** > Check **If Bluetooth is turned on** and select **Scan for devices** > Choose the device you want to send data from the list.
- **Exporting contacts:** Run the **Contacts** application. Touch the address you want to export to. Touch the **Menu** and select **Share** > **Bluetooth** > Check **If Bluetooth is turned on** and select **Scan for devices** > Choose the device you want to send data from the list.
- **Sending multi-selected contacts:** Run the **Contacts** application. To select more than one contact touch the **Menu** key and touch **Multiselect.** Select the contacts you want to send or touch the **Menu** key and touch **Select all** > **Touch Share > Bluetooth.** Select **Share** > **Bluetooth** > Check **If Bluetooth is turned on** and select **Scan for devices** > Choose the device you want to send data from the list.

- **Connecting to FTP (Only the FTP server is supported on this handset): Settings > Wireless & networks > Bluetooth settings**. Then, select the **Discoverable** checkbox and search for other devices and connect to the FTP server.

TIP! The version is Bluetooth 2.1 EDR and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

- If you want to search for this phone from other devices, go to **Settings > Wireless & networks > Bluetooth settings.** Then, select the **Discoverable** checkbox. The checkbox is cleared after 120 seconds.

NOTE: Supported profiles are SDAP, HFP, HSP, OPP, PBAP (server), FTP (server), A2DP, AVRCP, and DUN.

Google applications

1 First, set up a Google account. Enter your user name and password.

2 After signing in, your contacts, email, and calendar in your Google account will automatically synchronise with your LG-E720.

Google Maps™

Check your current location and traffic and receive directions to your destination. The LG-E720 must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.

Touch the **Menu** key to use options:

Search – Enter the place you are looking for.

Directions – This will let you find out the route of your entered place. Touch to input the data. Choose from **Contacts** or **Point on Map** or **My current location**.

Layers – You can switch view from **Traffic** to **Satellite** or **Terrain**. Tap **Latitude** then you will see the location of your contacts from Google account.

My Location – Point your current location on the map.

Join Latitude – Share your location with friends you choose and Google.

More – Clear map or find starred items and more.

NOTE: While viewing **Street View** for a location, touch the **Menu** key then touch **Compass Mode** to turn compass mode on.

Market™

Android Market lets you download useful applications and games. If you install applications and games from Android Market, they appear in the LG-E720 menu. You can check downloaded application by tapping **Downloads** tab.

You can check other's comment regarding an application or you can post your comments.

1 Select a category from **Apps** and **Games** to browse its contents. It will show you **Top paid, Top free** and **Just in**.

2 Choose an application to install.

NOTE: When you want to finish the game, use the **Home** or **Back** key. You will return to the home screen. Or use the **Menu** key of the game.

Google Mail™

Google Mail is configured when you first set up your phone. Depending on your synchronisation settings, Google Mail on your phone is automatically synchronised with your Google account on the web. The inbox conversations list is your default Google Mail view.

Touch the **Menu** key, then touch **Refresh** to send or receive new emails and to synchronise your emails with your Google account on the web. With the **Menu** key, you can compose an email, **Add account, Go to labels**, **Search** and **More**.

Google Talk™

Google Talk is Google's instant messaging program. It lets you communicate with other people who also use Google Talk.

Touch the **Menu** key and check available options.

All friends – Join all friends to communicate.

Add friend – Send invitation to chat.

Search – It search any chat that contains your entered word or sentences.

Sign Out – Sign out from chat. When you touch **Talk** icon from the home screen, you will be signed in automatically if you set **Automatically sign in** active.

Settings – Adjust indicator or notification. etc.

More – From here, you can close all chats and check invites and blocked list.

Utilities

Setting your alarm

1 On the home screen, touch **Applications** tab and select **Clock**. The clock application opens with the date and time displayed on your home screen.

2 If you want to add a new alarm, touch . Touch an existing alarm to change its time and other attributes or touch **Add alarm** to add a new one.

3 Set the time and touch to turn on the alarm. After you set the time, the LG-E720 will let you know how much time is left before the alarm sounds.

4 Set **Repeat, Ringtone** or **Vibrate** and add **Label** to name the alarm. Touch **Done**.

5 To change alarm settings, on the clock screen, touch the **Menu** key and select **Settings**. You can adjust snooze duration, alarm volume, Alarm in silent mode or Side button behaviour from settings.

Using your calculator

1 On the home screen, touch **Applications** tab and select **Calculator**.

2 Touch the number keys to enter numbers.

3 For simple calculations, touch the function you want (+, –, x, or ÷), followed by =.

4 For more complex calculations, touch the **Menu** key, touch the **Advanced panel**, then choose **sin, cos, tan, log,** and so on.

Adding an event to your calendar

1 On the home screen, touch **Applications** tab and select **Calendar**.

2 First, you must create a Google account to use **Calendar**.

3 To check the event, touch the date. Touch and hold if you want to add a new event. then touch **New event**.

4 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin and finish.

5 Also, touch **Where**, then enter the location.

6 If you would like to add a note to your event, touch **Description** and enter the details.

7 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.

8 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

Changing your calendar view

1 On the home screen, touch **Applications** tab and select **Calendar**. Touch the **Menu** key.

2 Select the calendar view for a particular day, week, or month.

ThinkFree Office

ThinkFree Office allows you to read documents, and provides limited edit functions for Microsoft Word, Excel and PowerPoint. But You can not edit PDF file.

1 Touch and hold a file, then **Open, Upload, Rename, Move, Copy, Delete, Send** and **Properties** options are available. This is depending on the file type.

Touch the **Menu** key and select the option you want:

New – Add document, Spreadsheet, Presentation or Folder.

Refresh – Refresh datas.

Sort – Sort by name, Date or Size.

Preferences – Adjust ThinkFree Office settings.

Update – Update ThinkFree Office.

About – More information about ThinkFree Office.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

1 On the home screen, touch **Applications** tab and select **Voice Recorder**.

2 Touch to begin recording.

3 Touch to end recording.

4 Touch the **Menu** key and select **Use as Ringtone** to set as the **Phone** ringtone.

NOTE: Touch **Go to list** to access your album. You can listen to the saved recording.

Sending the voice recording

1 Once you have finished recording, you can send the audio clip by touching the **Menu** key and **Share**.

2 Choose from **Bluetooth, Email, Google Mail** and **Messaging**. When you select **Email, Google Mail** and **Messaging,** the voice recording will be added to the message that you write and send it normally.

LG Air Sync

Using this menu, you can synchronise your PIM data or other contents of your phone with your LG Air Sync account.

1 Touch **LG Air Sync**.

2 If you have no LG Air Sync account, please visit http://www.lgairsync.com to create your account. If you have an account, key in your ID and Password.

3 If you want to synchronise your PIM Data and Contents select SYNC NOW.

- In Case if you want to synchronise only your PIM data, select the items you want to synchronise which are present under DATA & SYNCHRONIZATION category, then touch the item to start sync.
- In Case if you want to synchronise only your contents, select the items you want to synchronise under the category R-Click, then touch the item to start sync.

The Web

Browser

Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone. Wherever you are and whatever you're into.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options

Touch the **Menu** key to view options.

New window – Open a new window.

Bookmark – Add/show bookmark, show most visited site and history.

Window – Show all your open windows.

Refresh – Touch to refresh the web page.

Forward – Goes to the page you connected later than current page. This is opposite concept with the **Back** key, which goes to the previous page.

More

- **Add bookmark** – Add the current web page as bookmark.
- **Find on page** – If you enter a letter or any word, it will marks all the letters you entered from the web page.
- **Select text** – Touch and select the lines you want to copy. Long touch any input box then you can paste it.
- **Page info** – Show the web page information.
- **Share page** – Send the web page.
- **Downloads** – Show downloaded history.
- **Settings** – Set browser settings.

TIP! To return the previous web-page, touch **Back** key.

Adding and accessing bookmarks

1 Touch the **Menu** key then select **Bookmarks**.

2 Touch a bookmark and enter a name for the bookmark followed by its URL.

3 To access the bookmark, simply touch the bookmark. You will be connected to the bookmarked page.

Changing web browser settings

Touch the Menu key then select **More > Settings.**

You can change the page layout (e.g., text size, text encoding), change the home page, manage cache, cookie, and security settings, and so on.

Settings

On the home screen, touch **Applications** tab then scroll and touch **Settings**.

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. Also, you can set mobile networks, airplane mode.

Airplane mode – After setting Airplane mode, all wireless connections will be disabled.

Wi-Fi – Touch to checkmark: Turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Allows you to set up and manage wireless access points. Set network notification, or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Touch the **Menu** key and touch **Advanced**.

TIP! How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-E720 into the router.

You can find the MAC address in the following user interface: Touch **Application > Settings > Wireless & networks > Wi-Fi settings**, and touch the **Menu** key then select **Advanced > MAC Address**.

MediaShare – Touch to checkmark: Turns on MediaShare to share your multimedia contents with your DLNA (Digital Living Network Alliance) enabled devices.

MediaShare settings – Allows you to change device name and select content type to be shared.

Bluetooth – Touch to checkmark: Turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – Set device name & discoverable, scan for other devices. Or, check a list of Bluetooth devices that you've previously configured and those detected when the phone last scanned for Bluetooth devices.

Tethering & portable hotspot – You can configure the settings of USB tethering and portable Wi-Fi hotspot.

VPN settings – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPNs.

Mobile network – Set options for data roaming, network mode & operators, access point names (APNs), and so on.

On-Screen Phone settings – Allows you to change the On-Screen Phone password (the default password is "0000"). On Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC using the mouse or keyboard.

Sound

< General >

Silent mode – Allows you to silence all sounds (including call and notification ringtones) except the audio from music, videos, and any alarms you have set. (You must silence media and alarms in their own applications.)

Vibrate – Allows you to set your phone to vibrate when you receive an incoming call. Choose from **Always, Never, Only in Silent mode** and **Only when not in Silent mode**.

Volume – Allows you to set the the volume for ringtone, media and alarm. If you uncheck the option to use the same volume for both calls and notifications, you can set both volumes separately.

Media volume – Allows you to set the volume for music and videos.

Phone ringtone – Allows you to set your default incoming call ringtone.

< Notifications >

Notification ringtone – Allows you to set your default notification ringtone.

< Feedback >

Audible touch tones – Allows you to set the phone to play tones when using the dial keypad to dial numbers.

Audible selection – Allows you to set your phone to play a sound when you touch buttons, icons, and other onscreen items that react to your touch.

Screen lock sounds – Allows you to set your phone to play a sound when locking and unlocking the screen.

Haptic feedback – Allows you to set your phone to vibrate briefly when you touch the **Menu** key, **Back** key, and perform other actions.

Display

Brightness – Adjust the brightness of the screen.

Auto-rotate screen – Allows you to set the orientation to automatically switch to landscape mode or portrait mode when you turn the phone sideways or upright.

Animation – Allows you to set animated transitions when navigating from screen to screen.

Screen timeout – Allows you to adjust the delay time before the screen automatically turns off. For the best battery performance, use the shortest convenient timeout.

Location & security

< My Location >

Use wireless networks – If you check **Use wireless networks**, your phone will be determine your approximate location by using Wi-Fi and mobile networks.

Use GPS Satellites – If you check **Use GPS satellites**, your phone will be determine your location to street-level accuracy.

< Screen unlock>

Set up screen lock – Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set **PIN** or **Password** instead of **Pattern** or leave it as **None**.

TIP! To lock your screen by using the Pattern Lock

1. The first time you do this, a short tutorial about creating an unlock pattern appears.
2. You're prompted to draw and redraw your own pattern.
   The next time you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.

< SIM card lock >

Set up SIM card lock – Set up SIM card lock or change SIM PIN.

< Passwords >

Visible passwords – Select to show passwords as you type them or deselect to hide passwords as you type them.

< Device administration >

Select device administrators – Add or remove administrations.

< Credential storage >

Use secure credentials – Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the credential storage, this setting is dimmed.

Install from SD card – Allows you to install encrypted certificates from a microSD card.

Set password – Allows you to set or change the password for your secure credential storage.

Your password must have at least 8 characters.

Clear storage – Deletes all secure certificates and related credentials and erases the secure storage's own password.

Applications

Unknown sources – Permits installation of applications that you obtain from websites, email, or other locations other than Android Market.

> ⚠ **WARNING**
> To protect your phone and personal data, download applications only from trusted sources, such as Android Market.

Manage applications – Manage and remove installed applications.

Running services – Allows you to view and control currently running services and applications. This option displays what processes each running service needs and how much memory it is using.

Development – Allows you to set options for application development, such as **USB debugging**, **Stay awake**, and **Allow mock locations.**

Accounts & sync

<General sync settings >

Background data – Permits applications to synchronise data in the background, whether or not you are actively working in them. Unchecking this setting can save battery power and lowers (but does not eliminate) data use.

Auto-sync – Permits applications to synchronise, send, and receive data on their own schedule.

< Manage accounts >

List of all Google accounts and other accounts you've added to the phone.

If you touch an account in this screen, its account screen opens.

Privacy

< Personal data >

Factory data reset – Erases all of your personal data from internal phone storage, including information about your Google account, any other accounts, your system and application data and settings, any downloaded applications and DRM licences. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to reenter the same kind of information as when you first started Android.

SD card & phone storage

< USB connection mode >

Mass storage only – Your phone can be used as a mass storage device if you have a memory card inserted. You can set the **Mass storage only** as a default setting of USB connection mode.

< SD card >

Check total space and available space. Touch **Unmount SD card** for safe removal. **Format SD card**, if you want to delete all data from the microSD card. You must unmount a microSD card before you can format it.

< Internal phone storage >

Check the **Available space**. Lists the amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

Search

You use the Search settings to configure Google search, including setting which data on your phone you want to be able to search.

< Web >

Touch **Google search** and you can adjust Google search settings.

Show web suggestions – Check to display suggestions for Google web searches below the Google search box as you type.

Use My Location – Check to include your location when using Google search and other Google services. When you check this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Search history – Check to use suggestions from the web-based Google search history, from your Google account.

Manage search history – Opens browser with a web-based interface for viewing and managing the web search history associated with your Google account.

< Phone >

Searchable items – Opens a screen where you can check and uncheck the kinds of data you can search for on your phone.

Clear shortcuts – Erases the list of previously chosen search results that appear as suggestions below the Google search box.

Language & keyboard

Use the **Language & keyboard** settings to select the language and region for the text on your phone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

Voice input & output

< Voice input >

Voice recognizer settings - You use the **Voice recognizer settings** to configure the Android voice input feature.

- **Language:** Opens a screen where you can set the language you use when entering text by speaking.
- **SafeSearch:** Opens a diallog where you can set whether you want Google SafeSearch filtering to block some results when you use.

- **Block offensive words:** When unchecked, Google voice recognition will recognise and transcribe words many people consider offensive, when you enter text by speaking. When checked, Google voice recognition replaces those words in transcriptions with a place holder comprised of hash symbols (#).

< Voice output >

Text-to-speech settings - You use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

NOTE: If you don't have speech synthesiser data installed, only the **Install voice data setting** is available.

- **Listen to an example:** Plays a brief sample of the speech synthesiser, using your current settings.
- **Always use my settings:** Check to use the settings on this screen in place of speech synthesiser settings available in other applications.
- **Default engine:** Opens a diallog where you can set the text-to-speech application you want to use, if you have more than one installed.
- **Install voice data:** If your phone does not have speech synthesiser data installed, connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.
- **Speech rate:** Opens a diallog where you can select how quickly you want the synthesiser to speak.
- **Language:** Opens a diallog where you can select the language of the text you want the synthesiser to read.

This is particularly useful in combination with the **Always use my settings**, to ensure that text is spoken correctly in a variety of applications.

- **Pico TTS:** Configure the Pico TTS settings.

Accessibility

You use the **Accessibility** settings to configure any accessibility plug-ins you have installed on your phone.

NOTE: Requires additional plug-ins to become selectable.

Date & time

Use **Date & time** settings to set your references for how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

About phone

View legal information, and check phone status and software version.

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP).

You can enjoy wireless Internet with Wi-Fi, without extra charges.

Turn on Wi-Fi

From the home screen, open the notification drawer and touch on.

Or, touch **Application** > **Settings** > **Wireless & networks,** then turn **Wi-Fi** on.

To connect to Wi-Fi

Choose Wi-Fi network you want to connect. If you see , you need to enter password to connect.

NOTE:

If you are out of Wi-Fi area and choose 3G connection, additional charges may be applied.

NOTE: The LG-E720 supports WEP, WPA/WPA2-PSK and 802.1x EAP. security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Portable Wi-Fi hotspot settings – Opens a screen with settings to turn the hotspot on and off and to set the its SSID (its broadcast name) and security.

Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable: USB tethering. You can also share your phone's data connection with up to five devices at once, by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

Icon	Description
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit http://www.android.com/tether.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

USB tethering & portable Wi-Fi hotspot settings

1 On the home screen, touch **Applications** tab and select **Settings**.

2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.

3 Choose options that you want to adjust.

USB tethering – Check to share your phone's mobile network data connection with your computer, via a USB connection.

Portable Wi-Fi hotspot – Check to share your phone's mobile network data connection as a portable Wi-Fi hotspot.

Help – Opens a dialog with information about USB tethering and portable Wi-Fi hotspots as well as information about where to learn more.

To share your phone's data connection via USB

If your computer is running Windows 7 or a recent distribution of some flavors of Linux (such as Ubuntu), you typically don't need to prepare your computer for tethering. But if you're running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit http://www.android.com/tether.

USB tethering and data sharing

You can't share your phone's data connection and microSD card via USB at the same time. If you are using your USB connection to make your microSD card available to your computer, you must disconnect it first.

1 Use the USB cable that came with your phone to connect your phone to your computer.

2 On the home screen, touch **Applications** tab and select **Settings**.

3 Touch **Wireless & networks** and select **Tethering & portable hotspot**.

4 Check **USB tethering**.

- The phone starts sharing its mobile network data connection with your computer, via USB connection. An ongoing notification is added to the status bar and notifications drawer.

5 Uncheck **USB tethering** to stop sharing your data connection. Or just disconnect the USB cable.

To share your phone's data connection as a portable Wi-Fi hotspot

1 On the home screen, touch **Applications** tab and select **Settings**.

2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.

3 Check **Portable Wi-Fi hotspot**.

- After a moment, the phone starts broadcasting its Wi-Fi network name (SSID), so you can connect to it with up to five computers or other devices. An ongoing notification is added to the status bar and notifications drawer.
- When **Portable Wi-Fi hotspot** is checked, you can change its network name or secure it.

4 Uncheck **Portable Wi-Fi hotspot** to stop sharing your data connection via Wi-Fi.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

1 On the home screen, touch **Applications** tab and select **Settings**.

2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.

3 Ensure **Portable Wi-Fi hotspot** is checked.

4 Touch **Portable Wi-Fi hotspot settings**.

5 Touch **Configure Wi-Fi hotspot**.

- The **Configure Wi-Fi hotspot** dialog opens.
- You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
- You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security, with a preshared key (PSK).
- If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. Or touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

ATTENTION!

If you set the security option as **Open**, you can not prevent unauthorised using online services by other people and additional charges can be incurred. To avoid unauthorised use, you will be better to keep the security option.

6 Touch **Save**.

How to use On-Screen Phone

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB or Bluetooth connection. You can also control your mobile phone from your PC using the mouse or keyboard.

On-Screen Phone icons

Connects or disconnects your mobile phone to/from your PC.

Rotates the On-Screen Phone window (only available at applications that support rotation).

Changes the On-Screen Phone preferences.

Exits the On-Screen Phone program.

Minimises the On-Screen Phone window.

On-Screen Phone features

- Real-time transfer and control: displays and controls your mobile phone screen when connected to your PC.
- Mouse control: allows you to control your mobile phone by using the mouse to click and drag on your PC screen.
- Text input with keyboard: allows you to compose a text message or note using your computer keyboard.
- File transfer (mobile phone to PC): sends files from your mobile phone (e.g. photos, videos, music and ThinkFree Office files) to your PC. Simply right-click and drag to send a file to your PC.
- File transfer (PC to mobile phone): sends files from your PC to your mobile phone. Simply select the files you wish to transfer and drag and drop it into the On-Screen Phone window. The files you send are stored on a micro SD card.

- Real-time event notifications: prompts a pop-up to inform you of any incoming calls or text/multimedia messages, as well as alarm and event notifications.

How to install On-Screen Phone on your PC

Visit LG Home (http://www.lg.com) and go to **Support > Mobile Phone Support > Download LG Mobile Support Tool** to PC. If you download LG PC Suite IV, the On-Screen Phone program will be also downloaded on your PC. Then you can install the On-Screen Phone on your PC.

How to connect your mobile phone to PC

USB connection:

1 Open Connection Wizard, select "USB Cable connection" and click "Next".

2 Connect your mobile phone to the PC using a USB cable and click "Next".

3 Enter the On-Screen Phone password and click "Next". The default password is "0000". You can change the password in **Settings > Wireless & Networks > On-Screen Phone Settings**.

4 Click "OK" to exit the window.

Wireless connection with Bluetooth:

1 On your mobile phone, go to **Settings > Wireless & networks > Bluetooth settings.** Select **Turn on Bluetooth** and tick **Discoverable.**

2 If you have previously connected using a cable, run the New Connection Wizard to create a new connection.

3 Run the Connection Wizard on the computer, select "Bluetooth connection", then "Next".

4 The wizard starts searching for Bluetooth-enabled mobile phones. When the mobile phone that you wish to connect appears, click "Stop" to stop searching.

5 Select "LG-E720" from the device list and click "Next". You can rename the device if you wish.

6 Enter the PIN code (e.g. "0000") and click "Next".

7 On your mobile phone, accept the request and enter the same PIN code, then touch "OK".

8 Enter the On-Screen Phone password and click "Next" (the default password is "0000").

9 Touch "OK" to exit.

To check the phone to PC connection

Once the devices have been connected, drag down the notification bar at the top of the home screen to check the On-Screen Phone connection status.

To disconnect your phone from your PC

Touch in the top left of the home screen. Drag down the notification bar at the top of the home screen and select "On Screen Phone". Touch "Yes" in the Disconnect window.

NOTE: You must restart your phone after shutting down the On-Screen Phone service.

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the http://update.lgmobile.com or http://www.lg.com/common/index.jsp → select country and language.

This feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

DivX Mobile DIVX

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to 320 x 240.

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

Accessories

These accessories are available for use with the LG-E720.
(**Items described below may be optional.**)

Charger

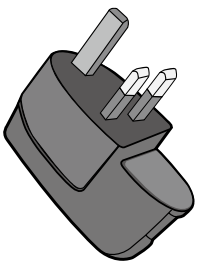

Data cable

Connect your LG-E720 and PC.

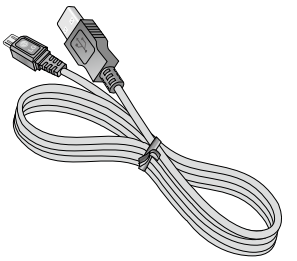

Battery

User Guide

Learn more about your LG-E720.

Stereo headset

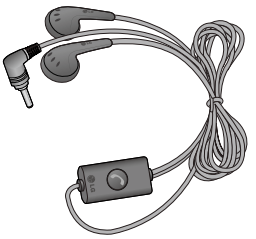

NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-E720

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1 , EN 301 489-24 V1.4.1
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1 EN 301 908-2 V3.2.1,
EN 300 328 V1.7.1
EN 50360:2001/EN62209-1:2006
EN 60950-1 : 2006

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declarat ion relates complies with the above mentioned standards and Directives

LG Electronics Inc. - EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name	Issued Date
Doo Haeng Lee / Director	October. 04 , 2010

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

Troubleshooting

Message	Possible causes	Possible Corrective Measures
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
	Prepaid Charge limit reached	Contact service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time Clean the contacts.
	Battery contacts are dirty	Take out the battery and insert again.
Charging error	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger Battery defective	Only use original LG accessories. Replace battery.

Message	Possible causes	Possible Corrective Measures
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/ send SMS & Picture	Memory Full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT 16 file system supported only	Check SD card file system via card reader Or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor. Make sure that the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via WEB site.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-E720 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.52 W/kg (10 g) and when worn on the body is 1.49 W/kg (10 g).

Product care and maintenance

⚠ WARNING

Only use batteries, chargers and accessories approved to use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.

- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.